



MODEL 231

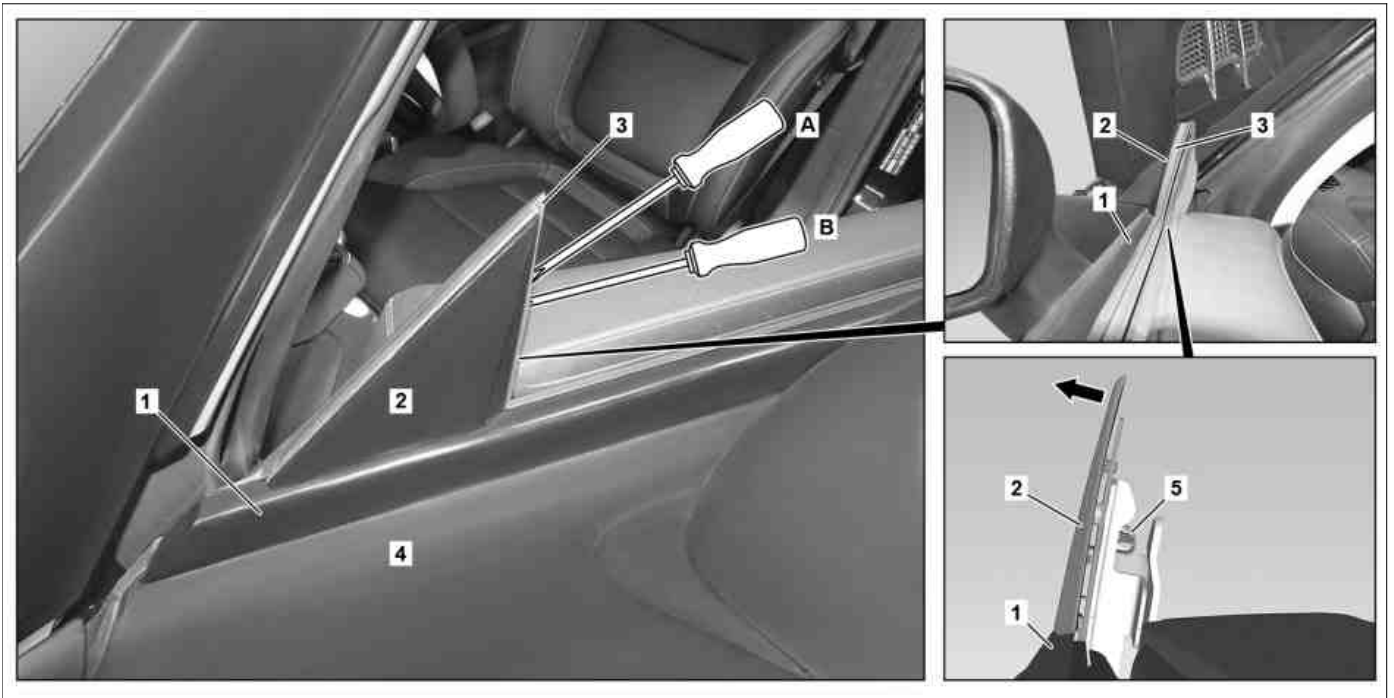

P72.10-4082-09

- 1 Sealing rail
- 2 Cover
- 3 Seal

- 4 Waistline
- 5 Catch

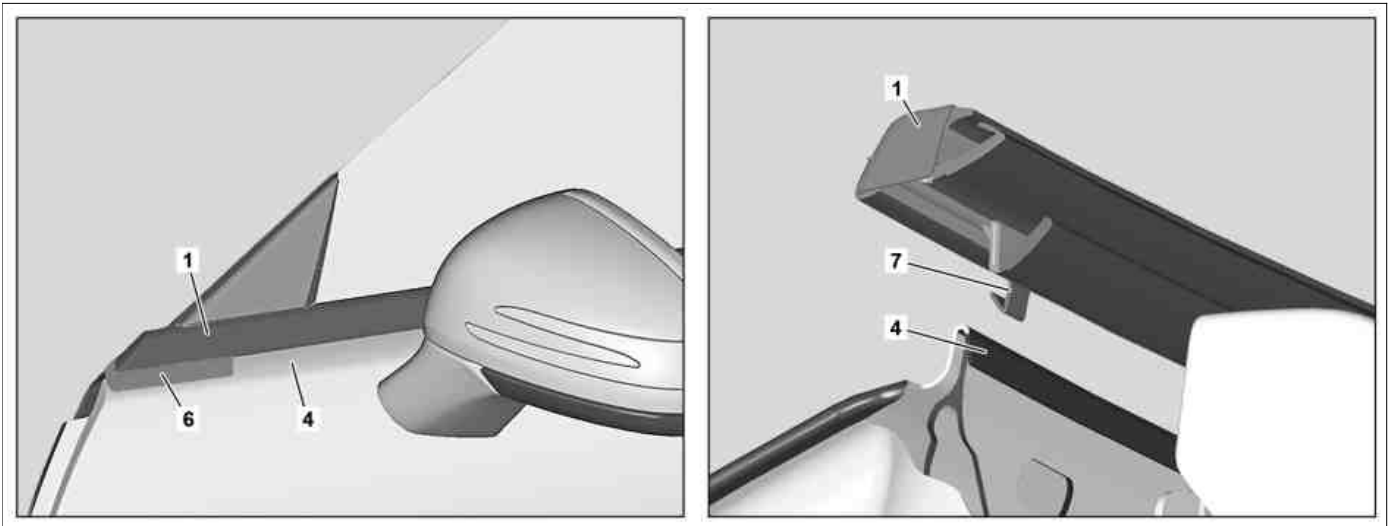

P72.10-4083-08

- 1 Sealing rail
- 4 Waistline

- 6 Protective foil
- 7 Safety hook



Remove/install

1	Completely lower crank window in left or right front door		
2	Position Torx screwdriver T30 at arrest (5)	i For this purpose, move Torx screwdriver T30 below base lip of seal (3) to through hole in seal (3) (position A).	
3	Detach arrest (5)	i For this purpose turn Torx screwdriver T30 parallel to beltline (4) and press in direction of travel until arrest (5) on cover (2) is detached (position B).	
4	Remove cove (2) in direction of arrow		
5	Install protection foil (6) between sealing rail (1) and belt line (4)		
6	Remove sealing rail (1)	i For this purpose grasp inner sealing lips with both hands at end of sealing rail (1). Turn sealing rail (1) upward and simultaneously toward outside, then turn down from beltline (4). i Installation: If necessary, replace damaged safety hook (7).	
7	Install in the reverse order		