


## MODEL 230.467 /474 /475 /476

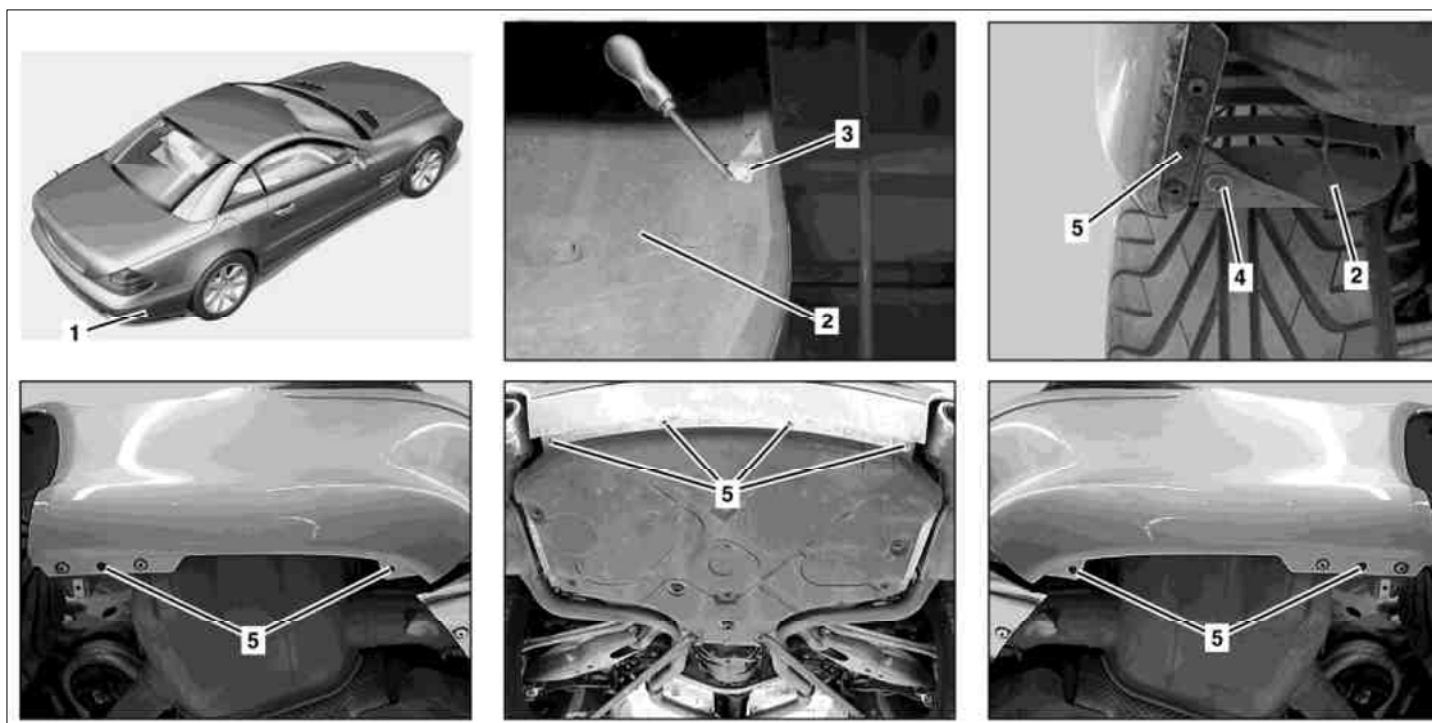


P88.20-2218-09

- 1 Rear bumper
- 2 Fender liner
- 6 Vacuum reservoir
- 7 Bracket
- 8 Insulation mat
- 9 Bolts

- 3 Bolt
- 4 Bolt


- 5 Bolts

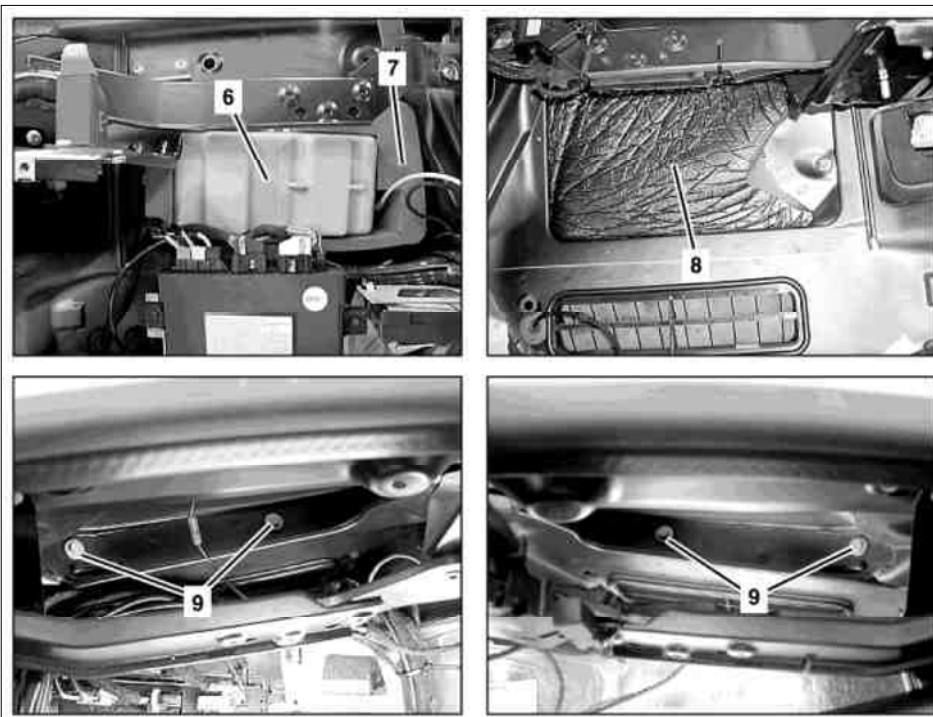

P88.20-2219-06


- 2 Fender liner
- 11 Nut
- 12 Bracket

X35/28 Rear bumper PTS connector (only with code (220a) Parktronic system (PTS))

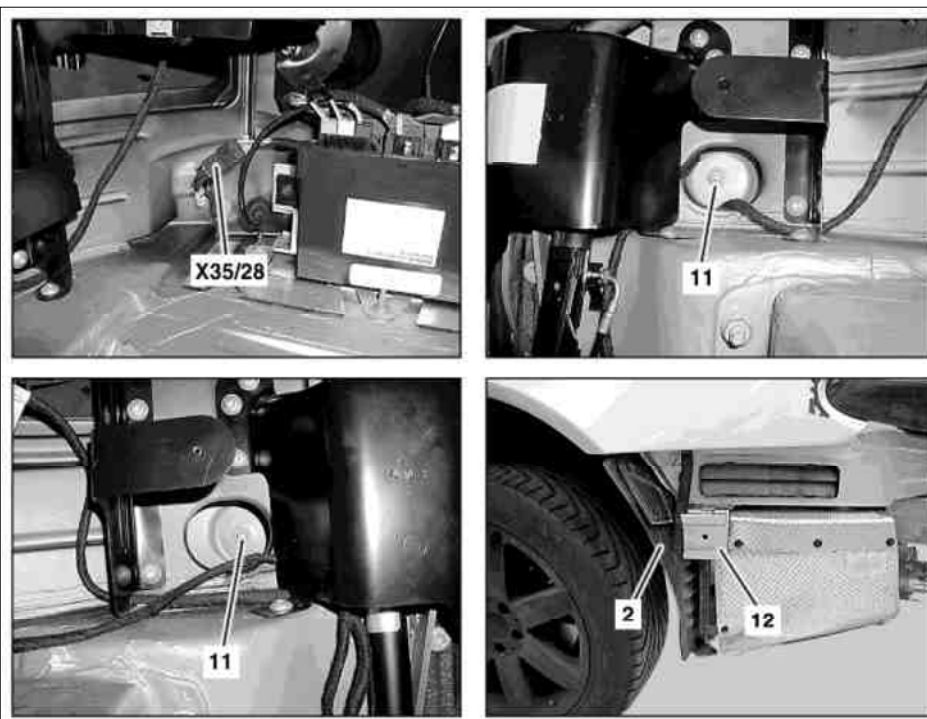

P88.20-2474-06

| ☒ ☒              | Remove/Install   |   |                    |
|------------------|--|---|--------------------|
| ⚠ <b>Danger!</b> | <b>Risk of death.</b> Death may result if vehicle slips or topples from the lifting platform.                  | Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.   | AS00.00-Z-0010-01A |
| 1                | Lift vehicle with lifting platform   | ☒   | *230589003100      |
| 2                | Press left and right inner fender (2) to side and unscrew bolt (3).  |   |                    |
| 3                | Unscrew bottom left and right bolt (4).  |   |                    |
| 4                | Unscrew bolts (5) from left and right bottom side of bumper  |   |                    |
| 5                | Remove side trunk paneling   |   | AR68.30-P-4800R    |
| 6                | Take vacuum reservoir (6) out of luggage compartment recess  | ⓘ Do not separate lines.  |                    |
| 7                | Remove bracket (7)   |   |                    |
| 8                | Take out insulation mat (8)  |   |                    |
| 9                | Unscrew bolts (9) on side in fender  | ⓘ On left and right, 2 bolts each.  |                    |
| 10.1             | Disconnect rear bumper PTS connector (X35/28) and press rubber grommet out of body together with electric lead | Only on vehicles with code (220a) Parktronic system (PTS)   |                    |
| 11               | Unscrew nuts (11) at rear center section   |   |                    |
| 12               | Remove rear bumper (1) toward rear   | ⓘ Remove rear bumper (1) with second mechanic.<br>With code (220a) Parktronic system (PTS) move line out of body<br>ⓘ <b>Installation:</b> Ensure that rear bumper (1) is inserted at side into left and right bracket (12) |                    |
| 13               | Install in the reverse order   |   |                    |

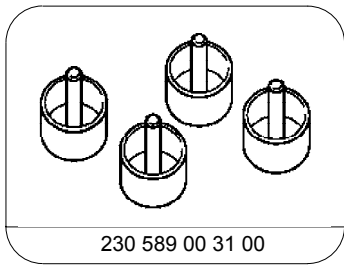

Adapter kit