



Shown on vehicle with transmission 722

- 1 Boot
- 2 Clamping ring
- 3 Selector lever handle (with transmission 722)

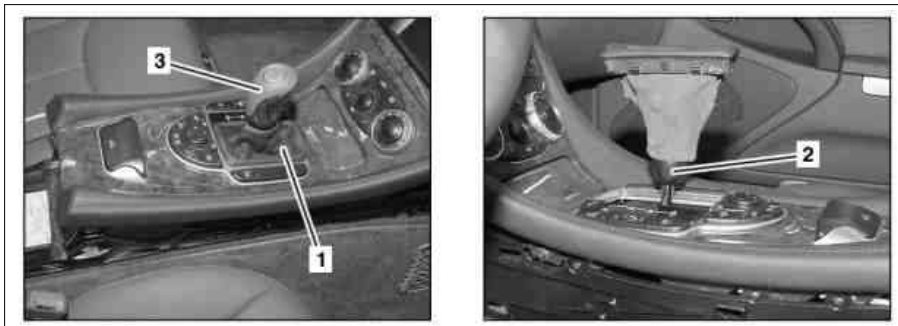

P68.20-2481-04

☒ ☒	Remove/install		
1	Secure vehicle against rolling		
2	Switch on ignition, actuate brake pedal and shift to selector lever position "N"	On vehicles with transmission 722	
3	Switch off the ignition and remove the transmitter key from the EIS control unit	ⓘ On vehicles with code (889) Keyless-Go, press KEYLESS-GO start/stop button repeatedly until ignition is switched off. Remove Keyless-Go chip card or transmitter key from vehicle and store beyond the reach of the transmitter (at least 2 m).	
4	Unclip boot (1) with mounting wedge.	☒	*110589035900
5	Move selector lever to position "P"	On vehicles with transmission 722	
6	Put boot (1) over selector lever handle (3) or shift lever handle.		
7	Turn clamping ring (2) approx. 90° counterclockwise and remove selector lever handle (3) or shift lever handle together with boot (1)		
8	Install in the reverse order		

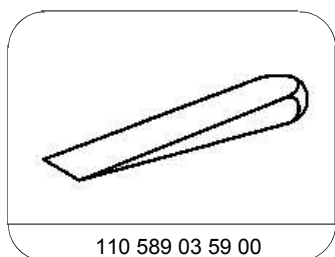

110 589 03 59 00

Mounting wedge