

- Parts list -

<b>Vehicle</b>	WDD2132611A690115 (C213_FS)	Mercedes-AMG E 53 4MATIC+ Wagon	
<b>Color</b>	799 - designo diamond white bright	<b>Equipment</b>	861 - black
<b>Assortment class</b>	PC	<b>Group</b>	54 Electrical equipment and instruments
<b>Sub-group</b>	679 Front axle wiring		

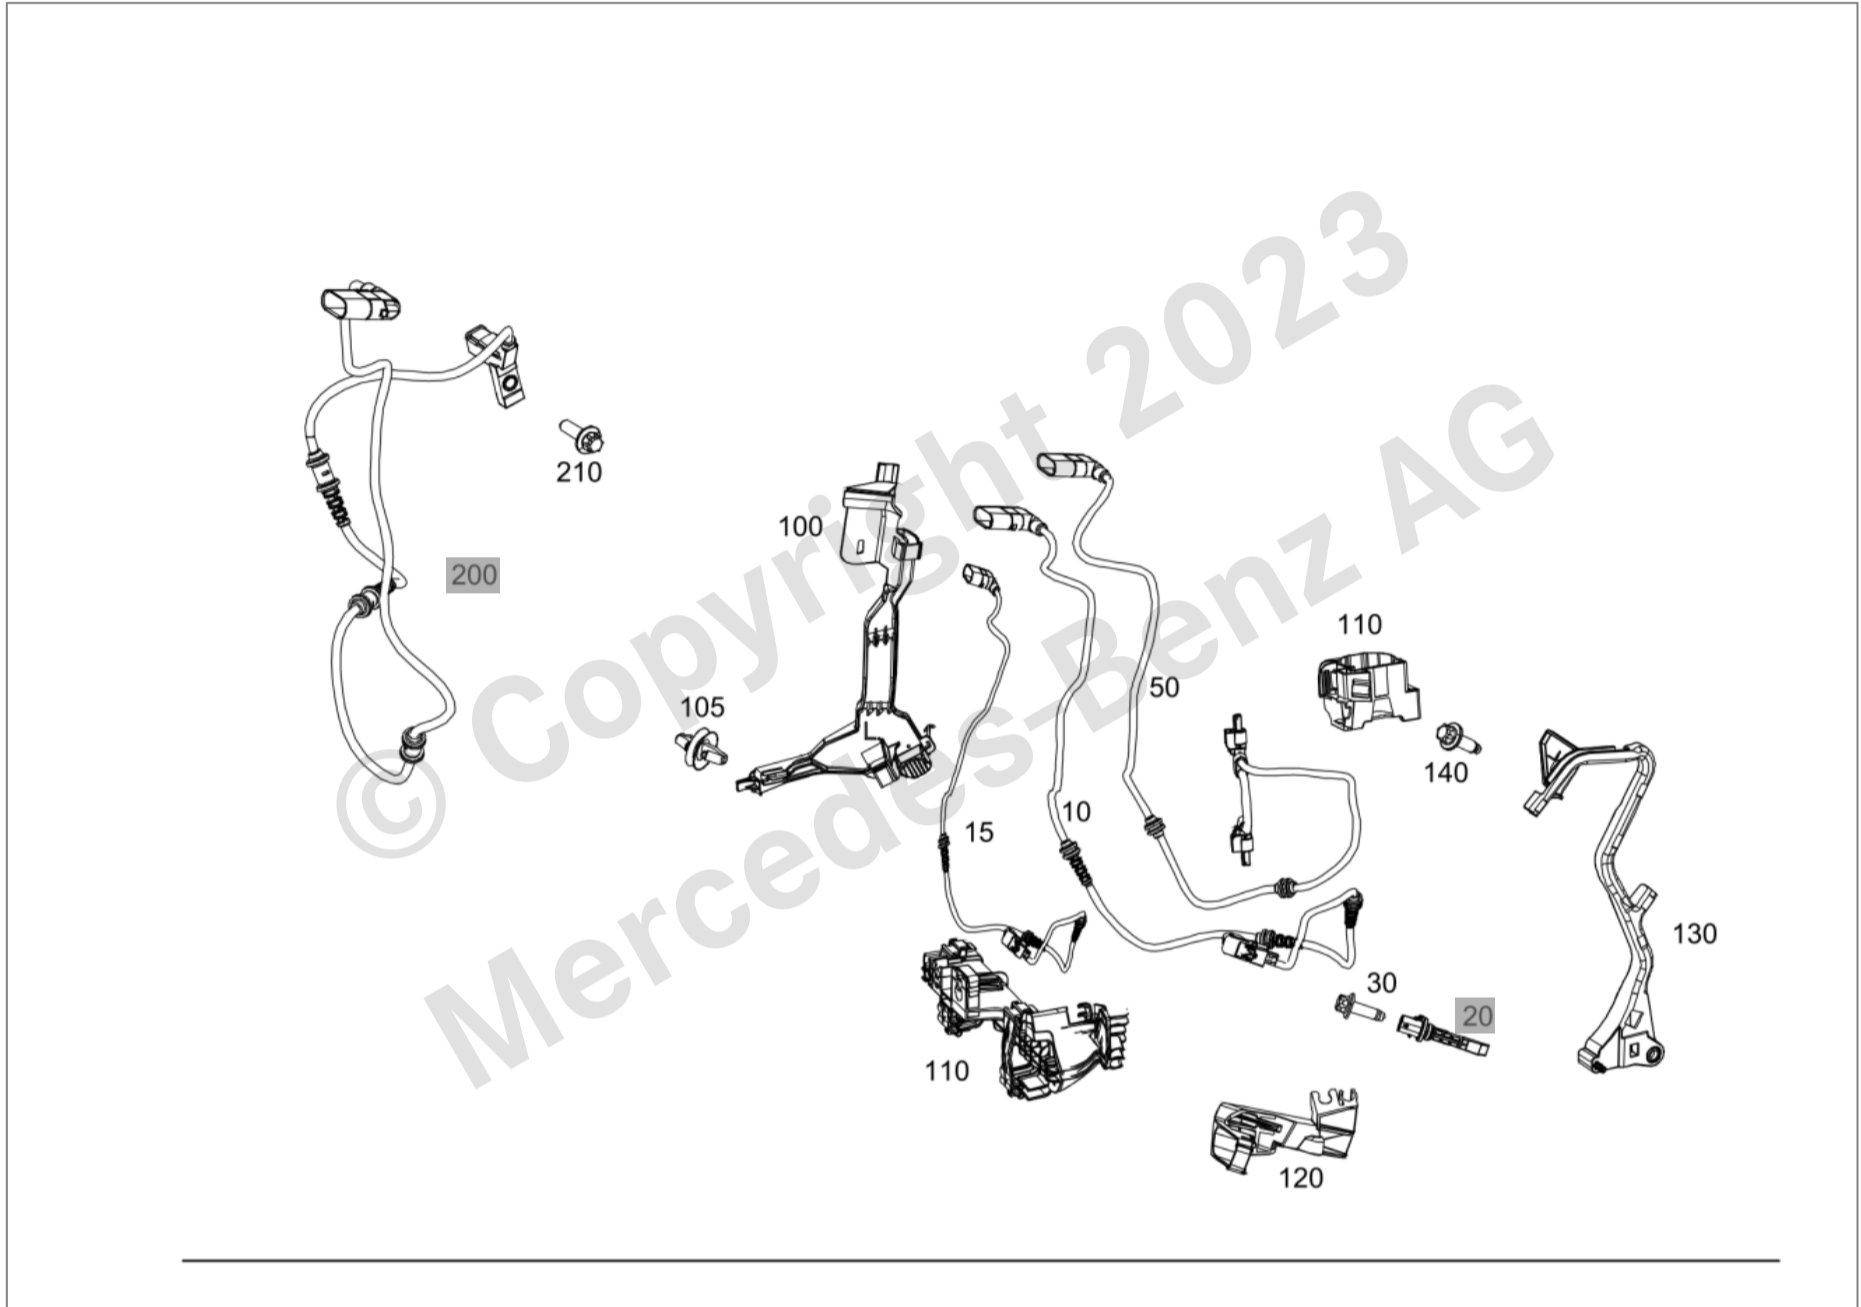















Image ID: drawing\_PV000.002.683.836\_version\_002

Item	Part number	Designation/additional information	Qty
15	A 213 540 16 27 ⚙️	* ELECTRICAL WIRING HARNESS Left 📦 Code: (M276/M256+M016+M005);	1
10	A 213 905 20 09 ⚙️	ROTATIONAL SPEED SENSOR Right 📄 [004050] INCLUDING BRAKE PAD WEAR WIRING HARNESS 📦 Code: (M256/M276)+M016+M005; 🔍 Determine damage code	1
15	A 213 540 22 69 ⚙️	* ELECTRICAL WIRING HARNESS Right 📄 [402] NO LONGER AVAILABLE 📦 Code: M256+M016+M005;	1
10	A 213 905 18 05	ROTATIONAL SPEED SENSOR Left 📦 Code: (M256/M276)+M016+M005; 🔍 Determine damage code	1
30	N 000000 007701	HEXALOBULAR BOLT SPEED SENSOR TO STEERING KNUCKLE LEFT; M6X20	1

Item	Part number	Designation/additional information	Qty
30	N 000000 007701	HEXALOBULAR BOLT SPEED SENSOR TO STEERING KNUCKLE RIGHT; M6X20	1
50	A 213 540 19 13	ELECTRICAL WIRING HARNESS DAMPER ADJUSTMENT, FRONT AXLE AT LEFT  Code: M005+(459/489);	1
50	A 213 540 20 13	ELECTRICAL WIRING HARNESS DAMPER ADJUSTMENT, FRONT AXLE AT RIGHT  Code: M005+(459/489);	1
100	A 205 546 79 80	CABLE DUCT FRONT AXLE,LEFT  Code: M005;	1
100	A 205 546 78 80	CABLE DUCT FRONT AXLE,RIGHT  Code: M005;	1
105	A 003 546 62 43	LINE BRACKET FRONT AXLE,LEFT  Code: M005;	1
105	A 003 546 62 43	LINE BRACKET FRONT AXLE,RIGHT  Code: M005;	1
110	A 205 546 81 80	CABLE DUCT FRONT AXLE,LEFT  Code: (M256/M276)+M30+M016+M005+489;	1
110	A 205 546 80 80	CABLE DUCT FRONT AXLE,RIGHT  Code: (M256/M276)+M30+M016+M005+489;	1
120	A 213 546 12 00	LINE BRACKET TO RIGHT STEERING KNUCKLE, FRONT AXLE	1
130	A 205 546 15 00 	CABLE DUCT TO LEFT STEERING KNUCKLE, FRONT AXLE  Code: M256+M30+M016+M005;	1
130	A 205 546 14 00	CABLE DUCT TO RIGHT STEERING KNUCKLE, FRONT AXLE  Code: (M256/M276)+M30+M016+M005;	1
140	N 000000 007701	HEXALOBULAR BOLT TO LEFT STEERING KNUCKLE, FRONT AXLE; M6X20  Code: M005;	2
140	N 000000 007701	HEXALOBULAR BOLT TO RIGHT STEERING KNUCKLE, FRONT AXLE; M6X20  Code: M005;	2
210	N 910143 006002	HEXALOBULAR BOLT WIRING HARN. TO STEERING KNUCKLE RIGHT; M6X20	1