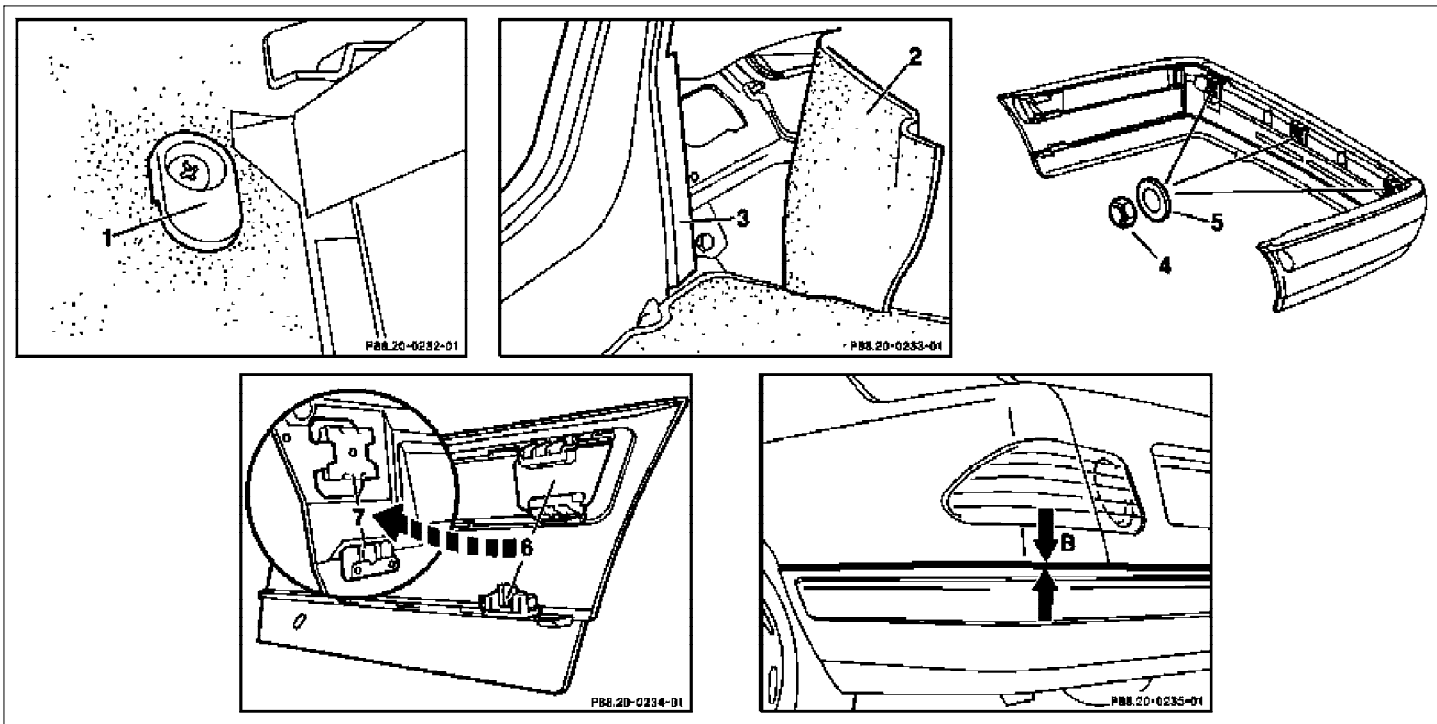


MODEL 210 up to 31.5.99









1 Bracket
2 Covering
3 Covering

4 Nut
5 Washer
6 Bracket

7 Guide
"B" Gap dimension

P88.20-0236-09

 	Removal, installation		
1	Open trunk lid		
2	Remove holder (1) on right in trunk recess		
3	Pull side covering (2) out from below center covering (3)		
4	Unscrew nut (4), remove washer (5)	 Remove center washer with magnet	
			*BA88.20-P-1002-01A
5	Remove bumper with second mechanic	 Installation: Position guide (6) on bracket (7) Check joint gap "B", correct bumper if required Check inner fender in relation to side of bumper	*BE88.20-P-1002-01A
6.1	Transfer M AMG bumper	 See Installation instructions for accessories Retrofitting M AMG paneling sections	AZ88.00-P-0001H
7	Install in opposite order		

Joint gaps for bumper

Number	Designation	Model 210
BE88.20-P-1002-01A	Di- Front bumper, joint gap "B" men- mm -sion	6
	See figure	AR88.20-P-2200F

Number	Designation	Model 210
BA88.20-P-1002-01A	Rear bumper nuts on rear center piece Nm	20