

Receiver Wiring Adaptor

IMPORTANT

Before starting, compare items on your invoice with items received. Carefully check through packaging material. If an item is missing, please call:

Crutchfield at 1-888-955-6000

120 70-1786


Revision 12/23/10

STEP 1 -- CONNECT WIRES

- ▶ Connect wires below to the matching function of each wire on your receiver (refer to instructions supplied with receiver). The wire colors of your new receiver may, or may not, match the wire colors of the adaptor. Match adaptor and receiver wires by function, disregarding color.
- ▶ If your receiver does not have a Dimmer or Illumination wire, tape off the Orange/White wire.
- ▶ Connect Black wire to Ground wire of new receiver.
- ▶ Individually tape off any unused wires.
- ▶ Make final wiring connections following instructions on the next page.

STEP 2 -- INSTALL

Plug housing into factory harness in vehicle.

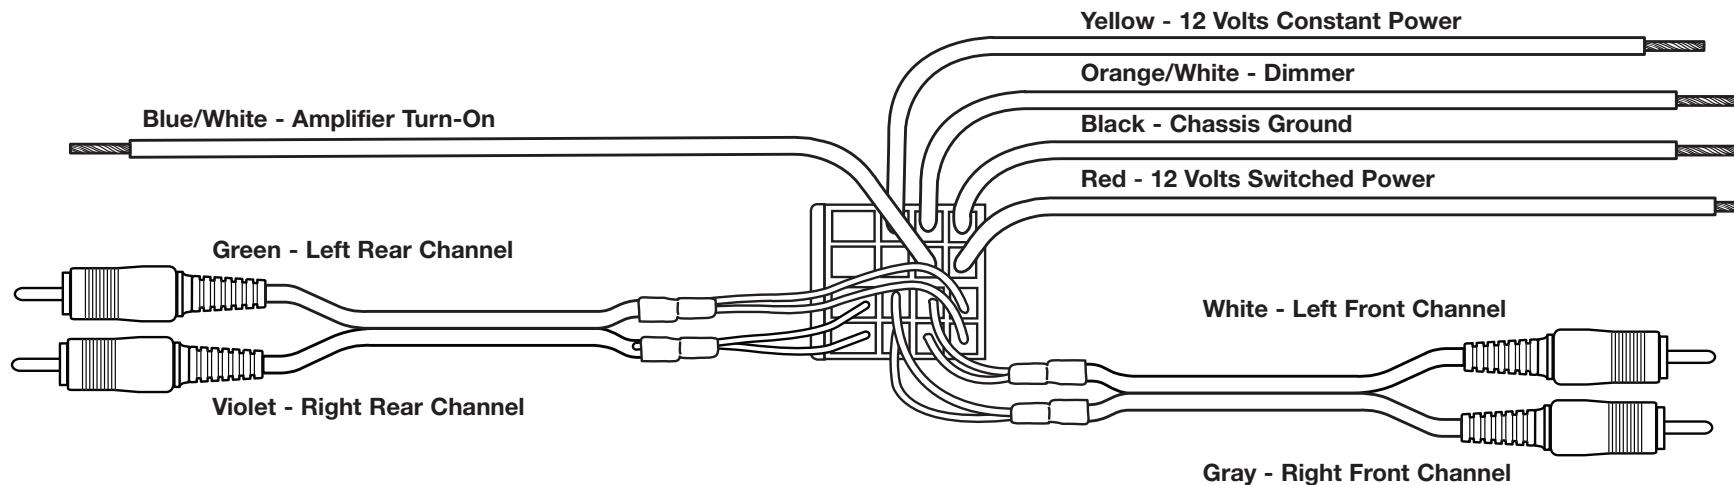

CRUTCHFIELD[®]
CRUTCHFIELD.COM



Copyright 2010 Crutchfield Corporation




* 120701786*

CRIMP METHOD

A. Strip wires back 1/2".

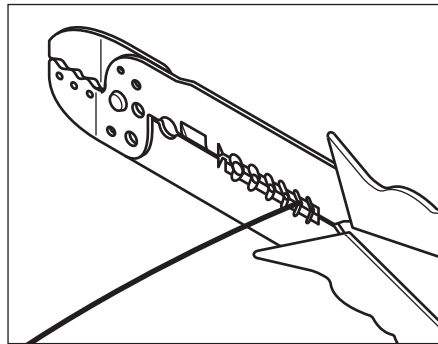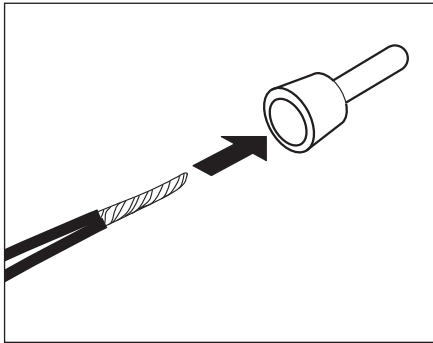


B. Twist wires together and insert in crimp cap.

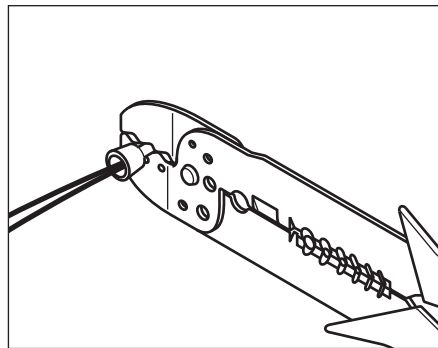

C. Squeeze middle of cap for tight connection.

Tools Required




Crimp Tool/
Wire Stripper



Crimp Caps

SOLDER METHOD

A. Strip wires back 1/2".




B. Twist wires together.



C. Solder:


1. Heat wire.
2. Touch solder to wire, not to iron.

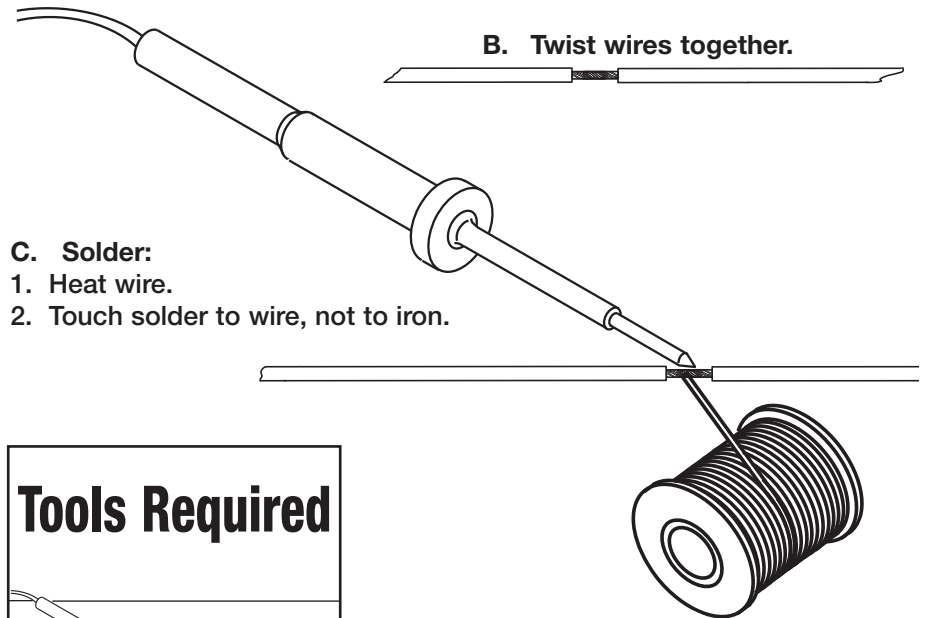


D. Tape




Tools Required

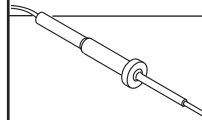

Soldering
Iron



Solder
(Rosin Core
Suggested)



Electrical
Tape