




1. Lastly run the trunk switch line (connector C) to the trunk. I thought I took more pictures of this part but I guess I didn't.
  - a. Remove the plastic trim on the bottom edge of the trunk lid, there are
  - b. You need to remove the lining to the trunk lid – below is a picture of how to start. Also note how the switch is located. The original piece just has a grab handle where the switch is located.

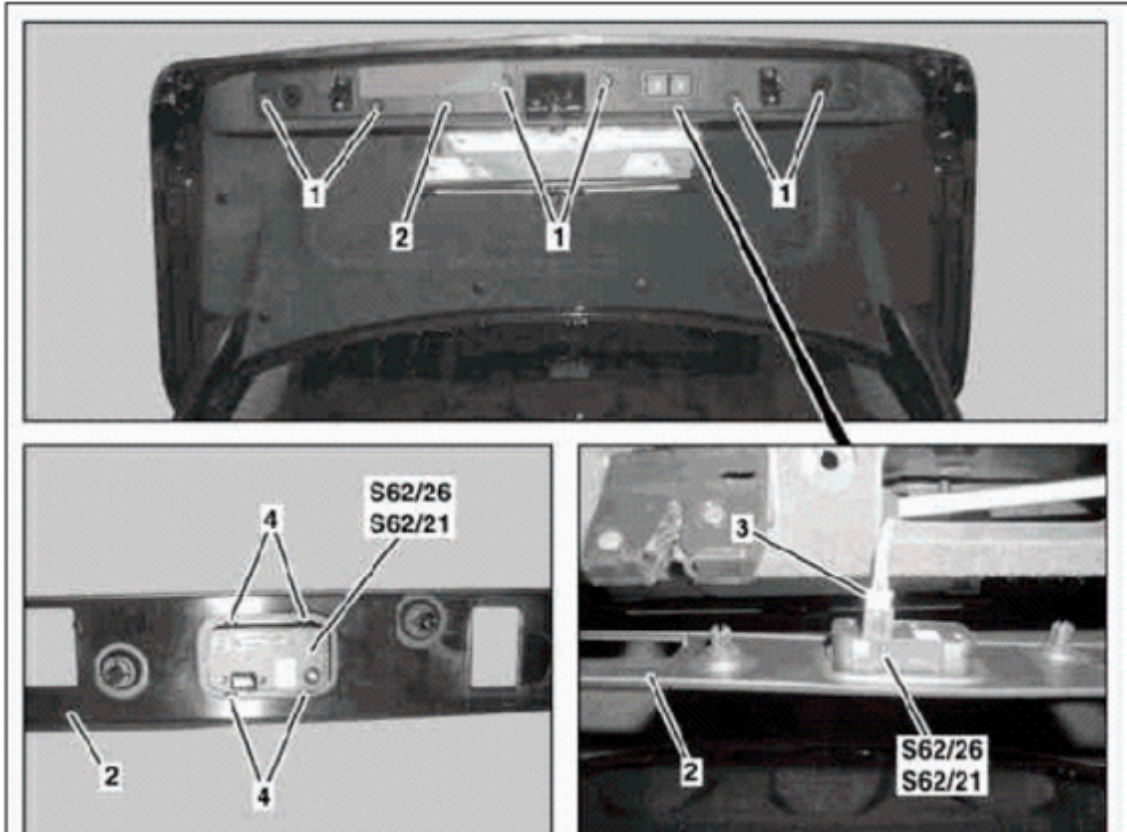

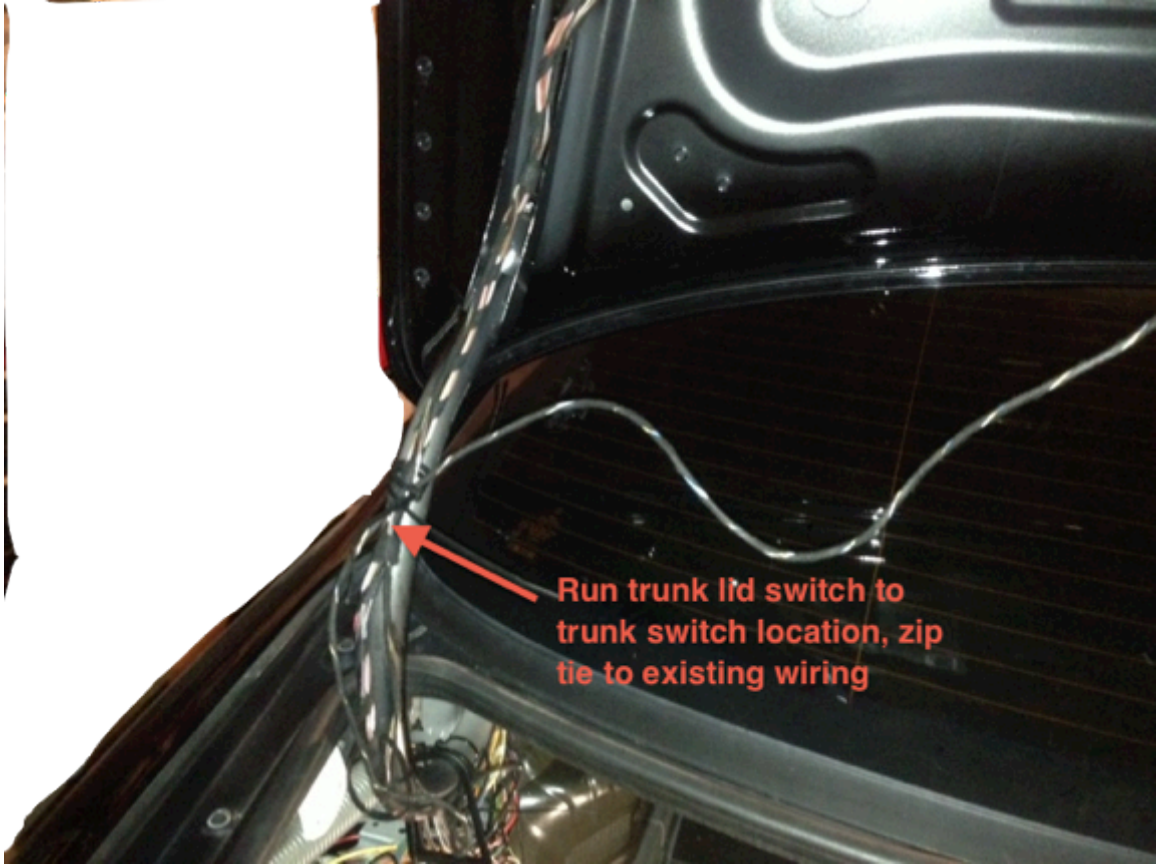

Here is a WIS photo I marked up for clarity:

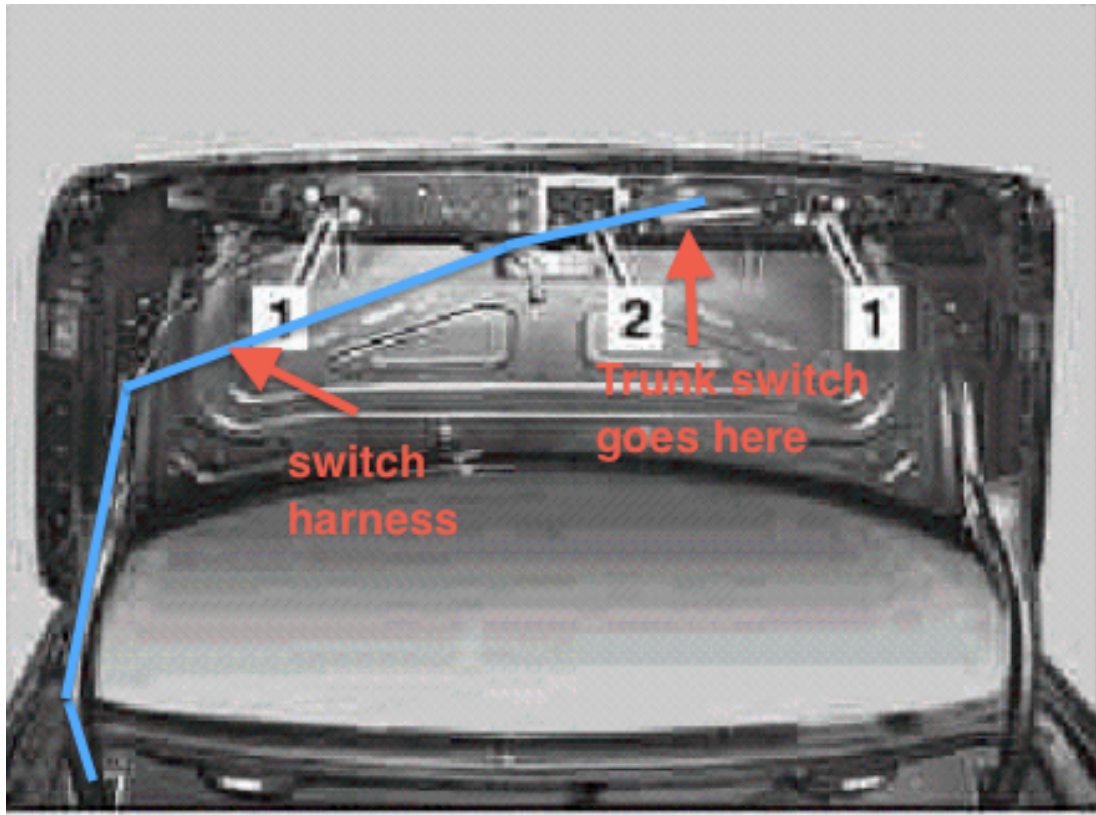

c. replace the trim after tip-tying the cable in place

Lastly, you will need to have a DAS to normalize the trunk.

With DAS go to:

1. Control Units
2. Seat and Doors
3. TLC - Trunk Lid control
4. Initial Start up
5. Initial Start up with MANUAL settings input (since this is a new install)
6. Follow the instructions given by the DAS for the next steps
7. It will take you to normalizing the potentiometer, again follow the instructions on the screen and then you are done!