

KEYLESS GO broken wire DIY

W211 2004 E500

Keyless Go not starting with button

No error messages un dashboard

Was thinking shifting knob is bad, but find out is BROKEN WIRE!

There is step by step instructions how fixit

I take pictures when i put together everything

And then REVERSED them

Click on images to enlarge them



if you want to take everything apart do next




connect wires back, start the car shift in N or D and take out ashtray holder. Shift back in P and maybe disconnect rear battery.



lift up console
remove those plastic things and lift that wire to right side of shifter
now you can put console on passenger side floor



raise up shifter slowly and take off that ring

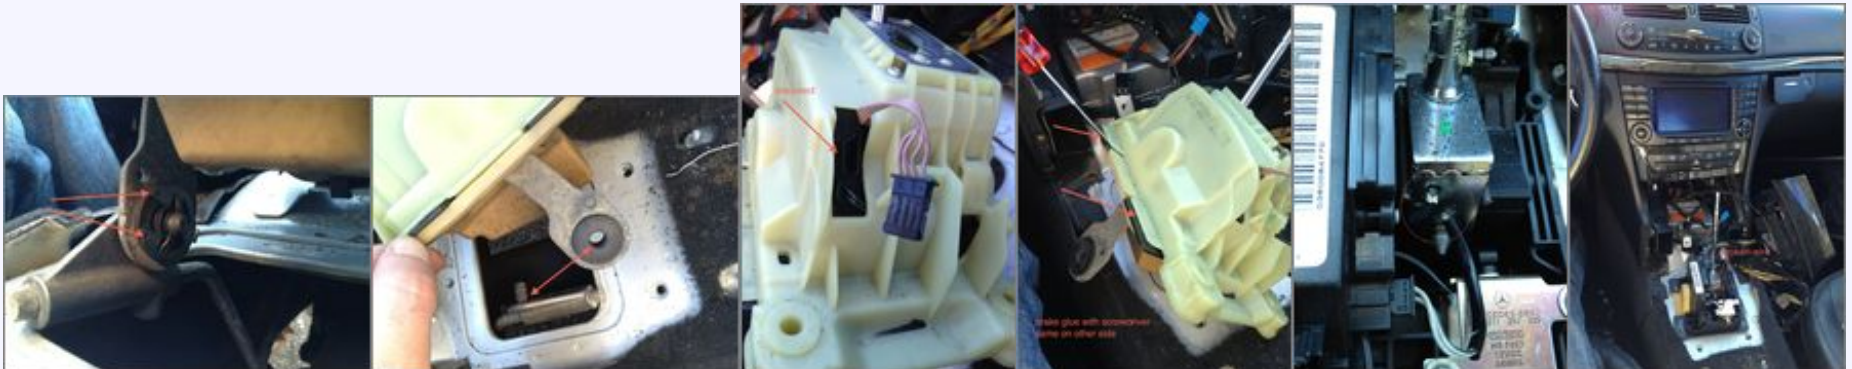



Now the HARDEST part
those two wires are really short and hard to clean and solder
DONT HOLD HEAT FOR TO LONG you can melt isolation



Thats how it look when i solder and put tape on.
Let the wire go on right side on shifter

Good luck and sorry about my english.