


MODEL 211.0 /2 /6 up to 30.6.04

Driver seat

MODEL 211.0 /2 /6 up to 30.6.04 except CODE (842) Folding front passenger backrest (usable as table)

Front passenger seat

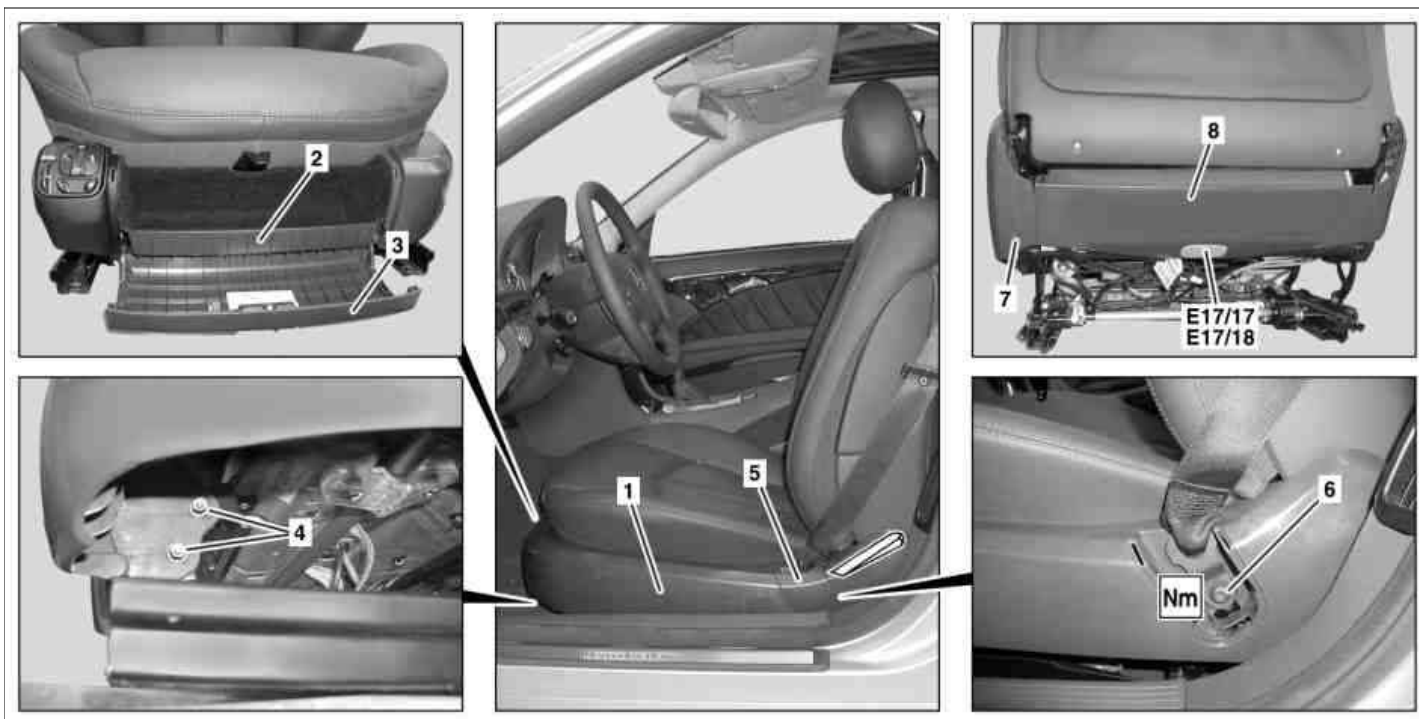

P91.10-2394-09

Shown on front seat with code (275)

Memory package (driver seat, steering column, mirrors)






- 1 Paneling for outer front seat frame
 2 Stowage tray
 3 Stowage compartment flap
 4 Nuts

- 5 Cover for belt end fitting
 6 Bolt
 7 Bolt
 8 Paneling for rear of front seat frame

- E17/17 Right rear footwell lamp
 E17/18 Left rear footwell lamp

Modification notes


28.1.04	Disconnect/connect ground line on battery		
---------	---	--	--

 	Remove/install		
1	Open flap of stowage compartment (3) on left or right front seat		
2	Push stowage tray (2) backwards and, using a mounting wedge, unclip it from brackets on the sides	 Use care when unclipping the stowage tray (2) to prevent the brackets from breaking.	*110589035900
3	Move front seat forward and up		
4	Unscrew nuts (4)		
5	Remove stowage compartment (3) flap		
6	Unclip cover for belt end fitting (5) using a mounting wedge		*110589035900
7	Unscrew screw (6) from belt end fitting	 Nm	*BA91.40-P-1001-01A
8	Remove screw (7)		
9	Unclip rear paneling of front seat frame (8) on both sides and fold downward		
10	Disconnect the electrical connector for the left rear footwell lamp (E17/18) or the right rear footwell lamp (E17/17), and then remove the paneling from the rear of the front seat frame (8).		

11	Swivel the rear section of front seat frame outside paneling (1) upward and release at the screw bolts at the front.	i Installation: Be sure that the bracket in the front seat frame outside paneling (1) is properly seated in place.	
12.1	Place the front seat frame outside paneling (1) to the side and unclip the seat adjustment switch.	Only on front seat without code (275) Memory package (driver seat, steering column, mirrors) or without code (242) Electrically adjustable front passenger seat with memory.	
13	Remove outer paneling for front seat frame (1)		
14	Install in the reverse order		

Nm Seat belts/emergency tensioning retractors

Number	Designation		Type 211.0	Type 211.2	Type 211.6
BA91.40-P-1001-01A	Belt end fitting bolt	Nm	32	32	32

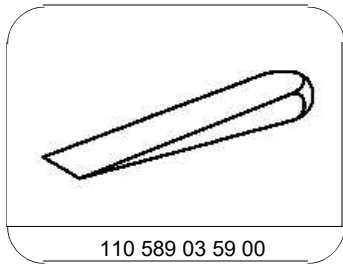

110 589 03 59 00

Mounting wedge