



Model 212
as of model year 2014

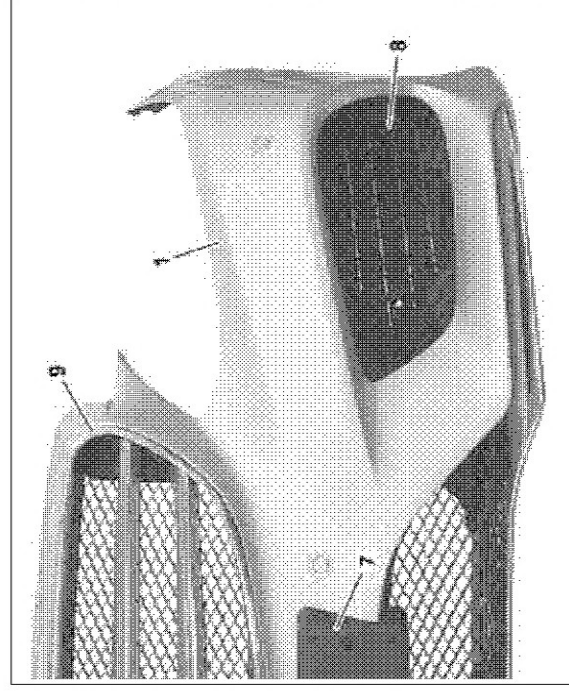

Shown with CODE 954 (AVANTGARDE)

- 1 Front bumper
- 7 License plate bracket
- 8 Air grille
- 9 Chrome molding on radiator trim

P88.20-3970-11

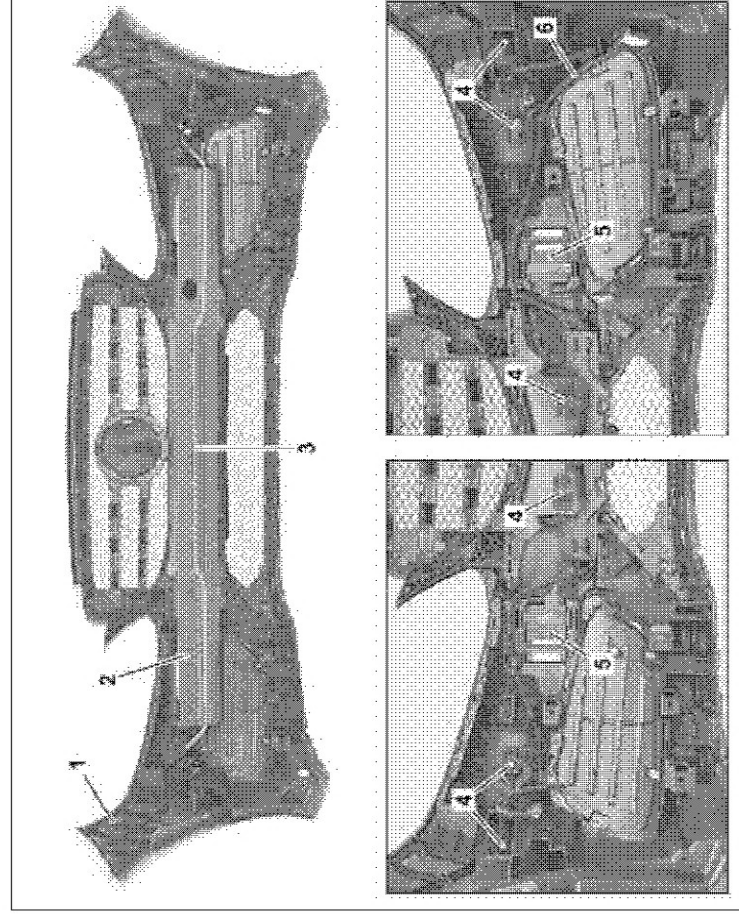


Shown with CODE 954 (AVANTGARDE)

- 1 Front bumper
- 2 Impact absorber
- 3 Pedestrian protection sensor
- 4 Parktronic sensors
- 5 Distronic Plus sensor
- 6 Electrical wiring harness


P88.20-3966-06

Shown with CODE 954 (AVANTGARDE)

- 10 Center basic carrier
- 11 Blind rivet
- 12 Lip

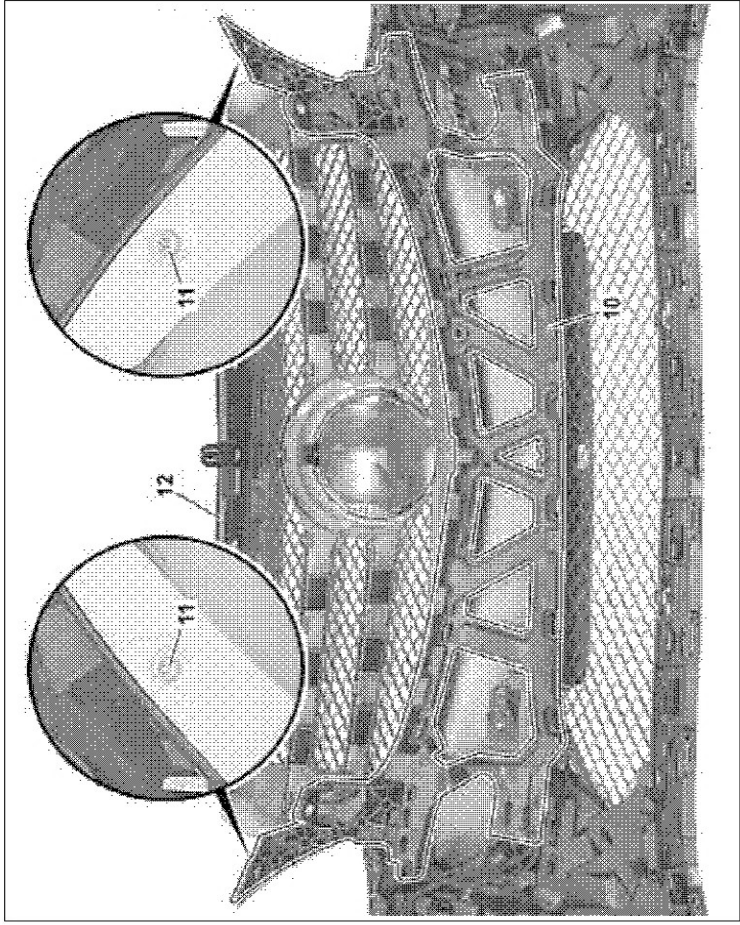

P88.20-3967-06

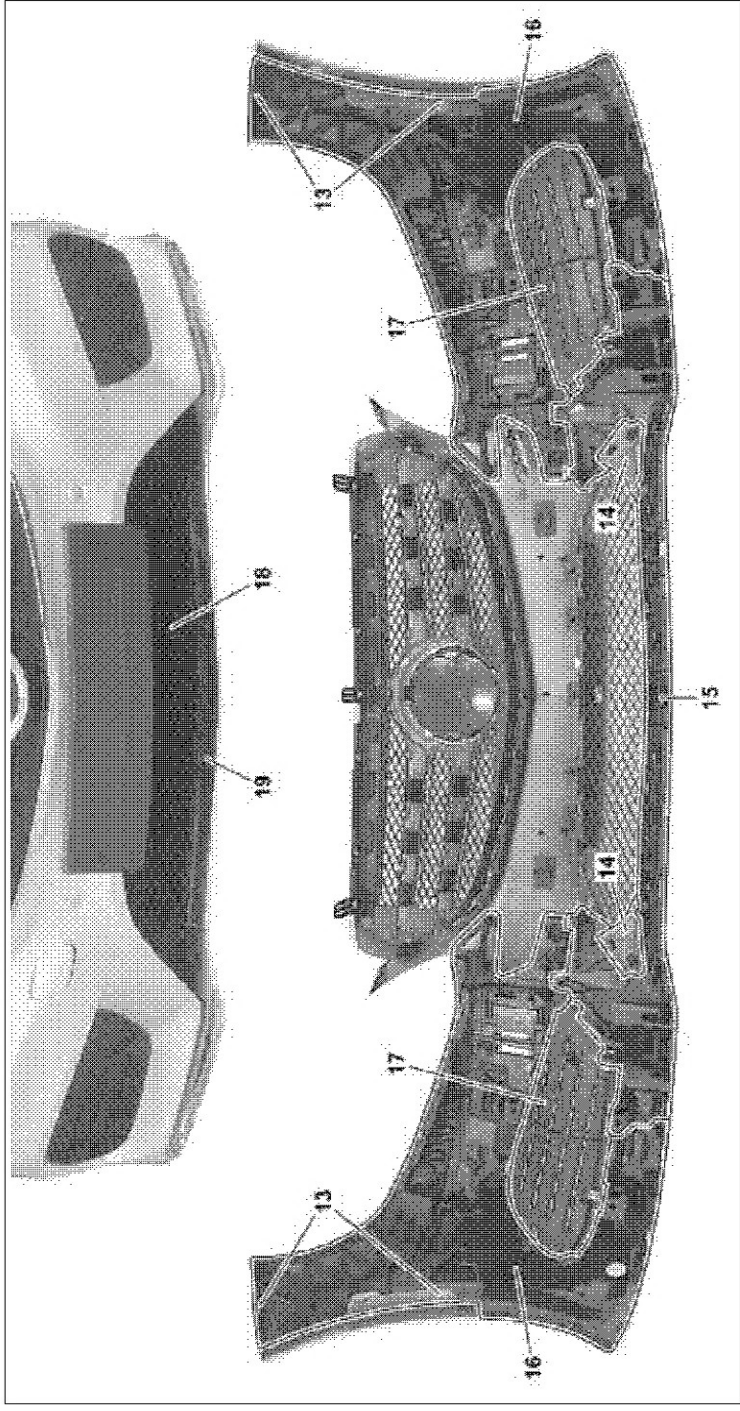

P88.20-3969-09


Shown with CODE 954 (AVANTGARDE)

- 13 Pop rivets
- 14 Bracket
- 15 Bottom basic carrier
- 16 Side basic carrier

- 17 Air grille cover
- 18 Bottom air grille
- 19 Lower trim piece


Shown with CODE 954 (AVANTGARDE)

- 20 Pop rivets
- 21 Radiator grille

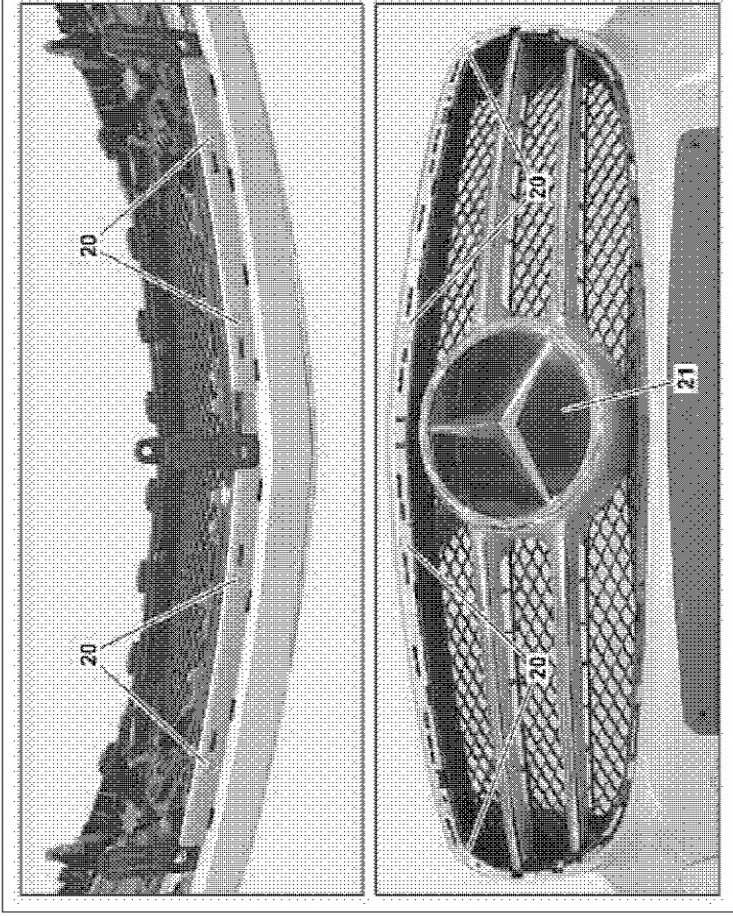

P88.40-3082-06

	Disassemble/assemble	
1	Remove front bumper (1)	AR88.20-P-2000EWM
2	Remove license plate bracket (7)	
3	Remove air grille (8)	
4	Remove chrome molding on radiator grille (9) from radiator grille	Mounting wedge
5	Remove pedestrian protection sensors (3)	With CODE U60 (Pedestrian protection)
6	Remove impact absorber (2)	AH88.20-P-1000-01A
	General information on the impact absorber	
7	Drill out blind rivets (11) and remove center basic carrier (10)	Mounting wedge
8	Remove Parktronic sensors (4) with electrical wiring harness (6)	With CODE 220 (PARKTRONIC) with CODE 230 (Exclusive parking assist)
9	Remove Distronic Plus sensors (5) with electrical wiring harness (6)	If installed. With CODE 233 (DISTRONIC PLUS)
10	Drill out blind rivets (13) and remove bracket (14), bottom basic carrier (15) and side basic carrier (16)	If installed. Mounting wedge
11	Remove air grille covers (17) and bottom air grille (18)	Mounting wedge
12	Remove lower trim piece (19)	Mounting wedge
13	Remove sealing lip (12)	
14	Drill out blind rivets (20) and remove radiator grille (21) toward rear	Mounting wedge
15	Assemble in the reverse order	
	Check	
16	Check whether PARKTRONIC or active parking assist is ready for operation	Switch on ignition and PARKTRONIC, engage reverse gear and release parking brake. The PARKTRONIC automatically performs a self-test and the operational readiness is signaled via the warning indicators.

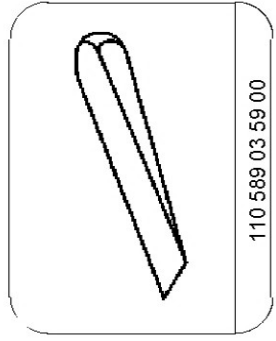

110 589 03 59 00

Mounting wedge