



MODEL 212
with CODE 871 (Sensor system for trunk lid opening/closing)

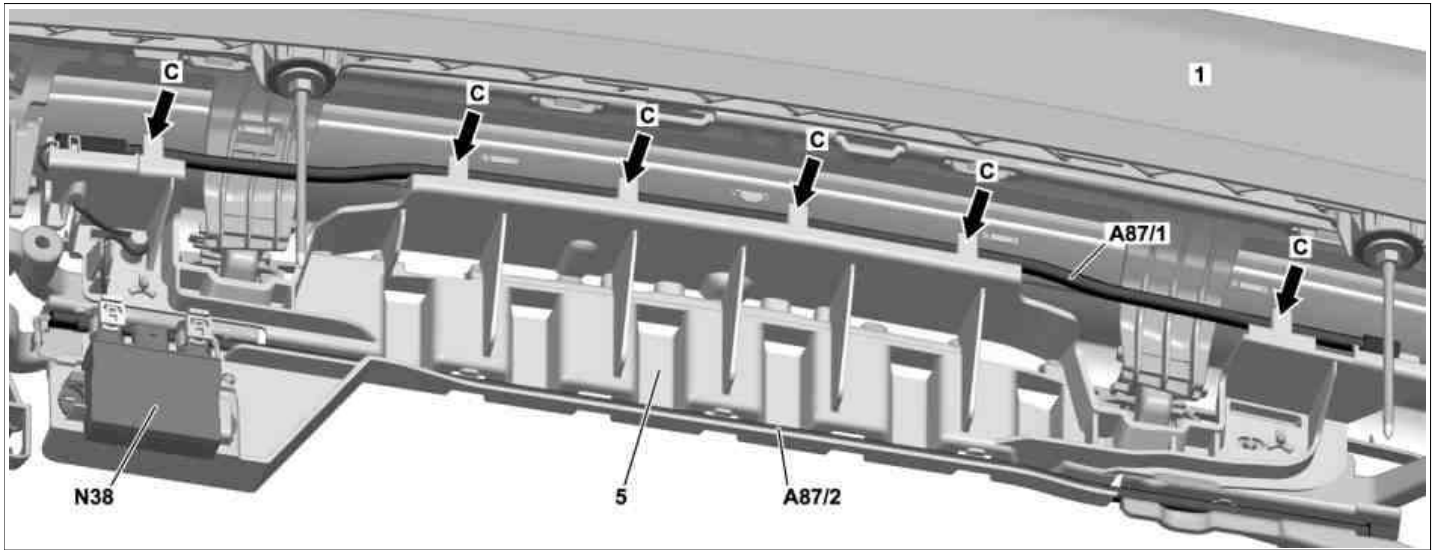

P80.61-2721-08


- 1 Rear bumper
- 5 Carrier plate
- 2 Electrical connectors
- 3 White electrical wiring harness
- 4 Black electrical wiring harness
- N38 Rear switching module
- A87/1 Rear switching module upper sensor
- A87/2 Rear switching module lower sensor
- N38 Rear switching module

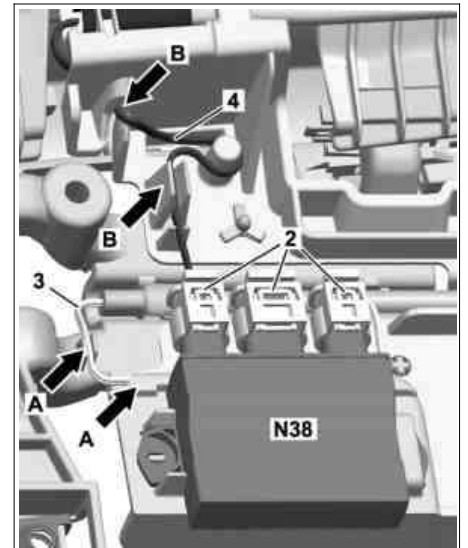

P80.61-2722-02

ⓘ	Information on preventing damage to electronic components due to electrostatic discharge	AH54.00-P-0001-01A
⊗ ⊗	Remove/install	
1	Remove rear bumper (1)	AR88.20-P-2200EW
2	Separate electrical connectors (2)	

3	Expose white electrical wiring harness (3) of rear switching module lower sensor (A87/2) from bracket (arrows A)	When removing lower rear switching module sensor (A87/2). i Observe routing and attachment of white electrical wiring harness (3).	
4	Unclip lower rear switching module sensor (A87/2) from carrier plate (5) and remove	When removing lower rear switching module sensor (A87/2). i Installation: Install lower rear switching module sensor (A87/2) at same point. Otherwise the system function is not ensured. i The lower rear switching module sensor (A87/2) can be recognized by the white electrical wiring harness (3) and notched connection point. W Mounting wedge	*110589035900
5	Expose black electrical wiring harness (4) of upper rear switching module sensor (A87/1) on bracket (arrows B)	When removing upper rear switching module sensor (A87/1).	
6	Unclip upper rear switching module sensor (A87/1) from carrier plate (5) and remove	When removing upper rear switching module sensor (A87/1). i Installation: Install upper rear switching module sensor (A87/1) at same point. Otherwise the system function is not ensured. i Slightly press carrier plate (5) away from rear bumper (1) (arrows C) and remove upper rear switching module sensor (A87/1). i The upper rear switching module sensor (A87/1) can be recognized by the white electrical wiring harness (4) and notched connection point. W Mounting wedge	*110589035900
7	Install in the reverse order		

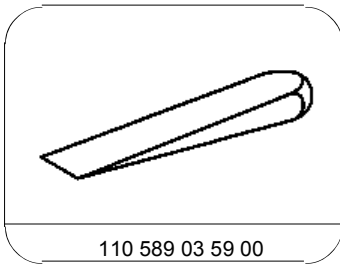

110 589 03 59 00

Mounting wedge