
## AR68.50-P-3400EW Remove, install roller sun blind

MODEL 212.0 /1 with CODE (540) Electric rear window roller blind

- 1 Rear shelf
- 1.1 Rear section of rear shelf
- 2 Center seat belt
- 3 Roller sun blind
- 4 Screw
- 5 Support

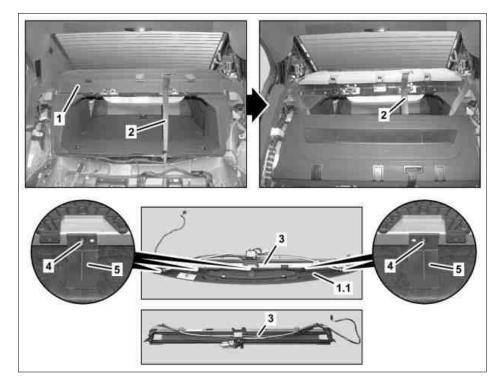

P68.50-2525-06

XX	Remove/install		
1	Remove rear shelf (1) and rear section of rear shelf (1.1)	<ul> <li>Ensure that the rear shelf (1) in the vehicle is not damaged.</li> <li>Lay rear shelf (1) down in vehicle with center seat belt (2) installed.</li> </ul>	AR68.30-P-4580EW
2	Unscrew bolts (4) and remove roller sun blind (3) from mounts (5)	<b>i Installation:</b> Ensure that the roller sun blind (3) is inserted into all mounts (5).	
3	Install in the reverse order		