


MODEL 212.0 /1

Shown on vehicle without code (287) Through-loading feature and without code (224) Design rear bucket seat system


- 1 Rear seat belt
- 2 Screw




P68.30-3425-01

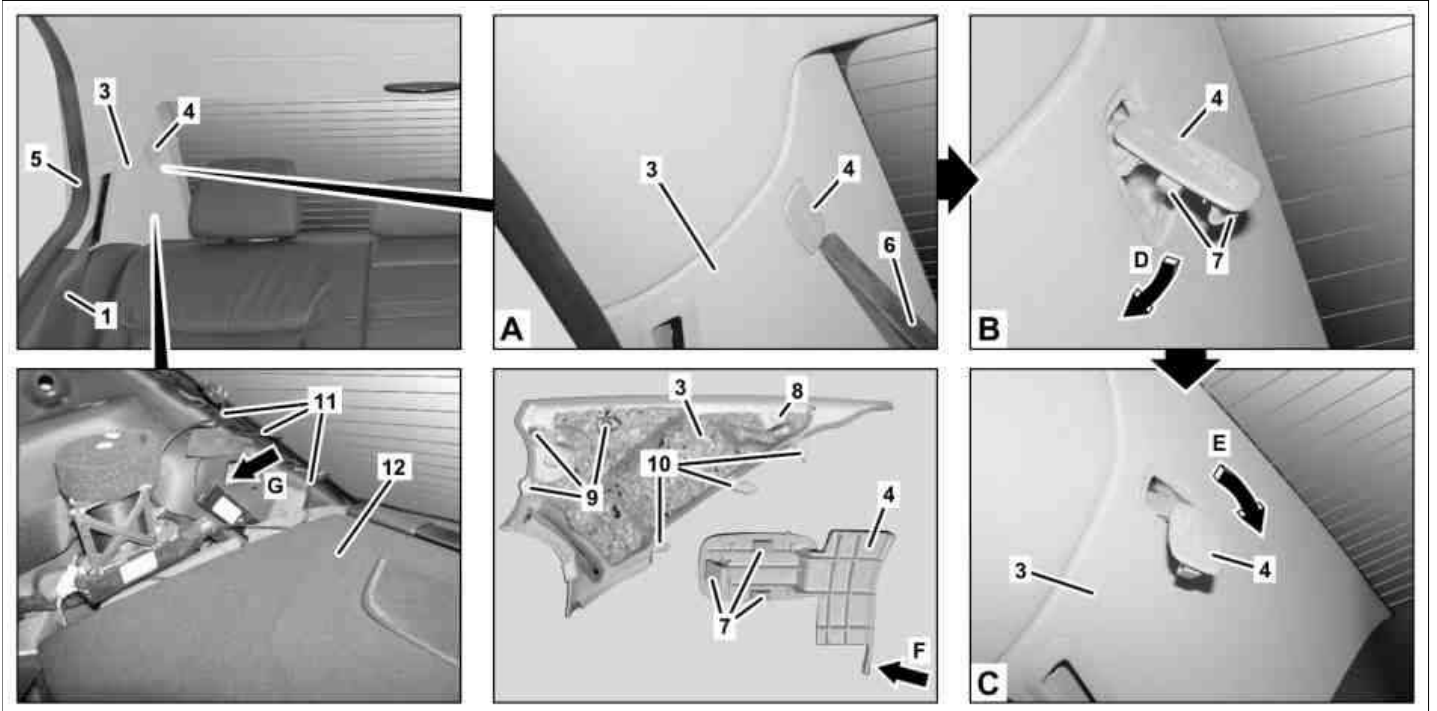


P68.30-3426-09





- 1 Rear seat belt
- 3 C-pillar paneling
- 4 Cover
- 5 Edge guard
- 6  Mounting wedge
- 7 Catch hook
- 8 Lug
- 9 Clip
- 10 Guides
- 11 Electric wiring harnesses
- 12 Rear shelf

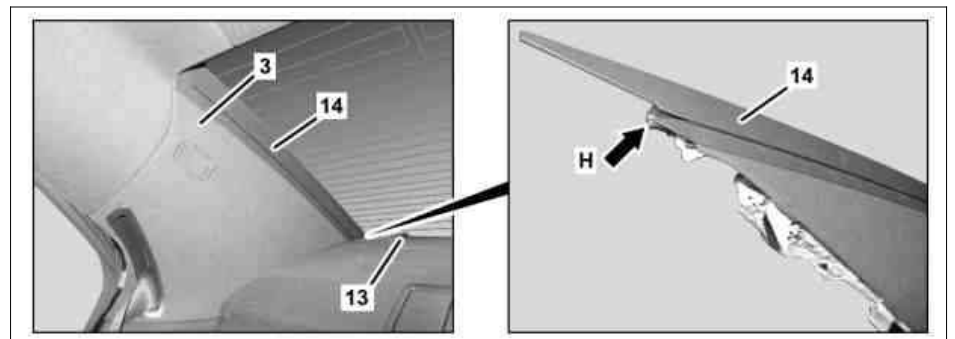
- 3 C-pillar paneling
- 13 Roller sun blind (with code (540) Electric roller blind for rear window)
- 14 Guide rail (with code (540) Electric roller blind for rear window)



P68.30-3427-04

	Remove/install		
1	Remove rear seat cushion	Vehicles without code (224) Design individual rear seat system	AR91.12-P-1020CW

		Vehicles with code (224) Design individual rear seat system	AR91.12-P-1020EW
2	Unscrew bolt (2) from lower belt end fitting on rear seat belt (1)		
3	Unclip catch hook (7) from cover (4) from bottom with assembly wedge (6) (see picture A).	ⓘ Ensure that catch hooks (7) are not damaged. 	*110589035900
4	Lift cover (4) in lower area and turn approx. 90° in direction of arrow (arrow D) (see picture B).	ⓘ Ensure that the stay (arrow F) or the catch hooks (7) are not damaged.	
5	Guide cover (4) out of C-pillar (3) in direction of arrow (arrow E) (see picture C).	ⓘ Ensure that the stay (arrow F) or the catch hooks (7) are not damaged.	
6	Unclip guide rail (14) on roller sun blind (13) from C-pillar paneling (3) starting at top	On vehicles with code (540) Electric roller blind for rear window  The guide rail (14) can be replaced without removing the C-pillar paneling (3).  Installation: Hook guide rail (14) into lower area of C-pillar paneling (3). Insert roller sun blind (13) into opening (arrow H).	
7	Loosen edge guard (5) in area of C-pillar paneling (3).		
8	Unclip clips (9) from C-pillar paneling (3), guide rear seat belt (1) through C-pillar paneling (3) and remove C-pillar paneling (3)	ⓘ Installation: Ensure that lug (8) is not trapped in electric wiring harnesses (11) when installing C-pillar paneling (3). Otherwise electric wiring harnesses (11) are torn off of the contacts on the rear window and it is necessary to replace the rear window.  Installation: Check clips (9), replace if necessary. Insert lug (8) on C-pillar paneling (3) into opening (arrow G). Insert guides (10) on C-pillar paneling (3) into rear shelf (12).	
9	Install in the reverse order		

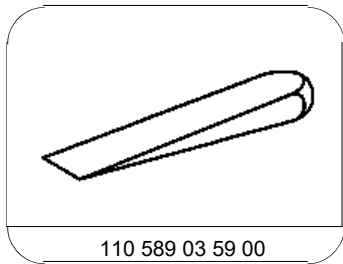

110 589 03 59 00

Mounting wedge