


MODEL 204.0, 212.0, 218.3 with CODE (287) Through-loading feature

Shown on model 204.0

- 1 Side bolster
- 2 Seat belt
- 3 Screw
- 4 Guide sleeve
- 5 Clip

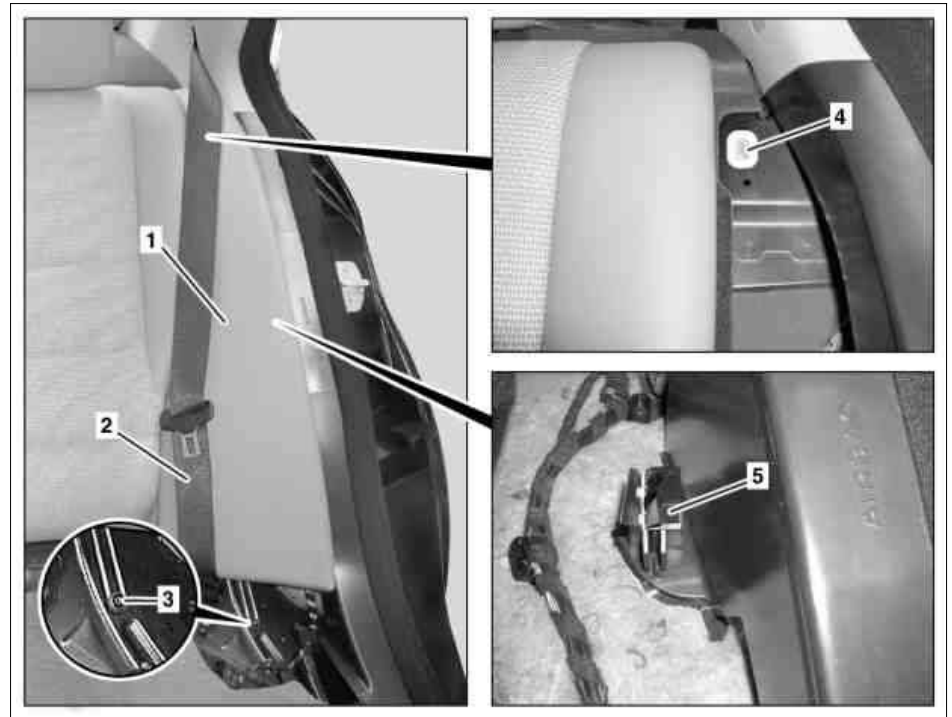

P91.12-3043-06

☒ ☒	Remove/install		
1	Remove rear seat cushion	Model 204 Model 212 except code (224) Design rear bucket seats Model 218.3	AR91.12-P-1020CW AR91.12-P-1020EL
2	Unscrew bolt (3)		
3	Pull seat belt (2) to one side		
4	Pull side bolster (1) at top out of guide sleeve (4) and remove from vehicle	i Installation: Make sure that the wire clip of the side bolster (1) is engaged into the clip (5) on the wheel arch.	
5	Install in the reverse order		