
MODEL 212.0 /1 with CODE (810) Sound system

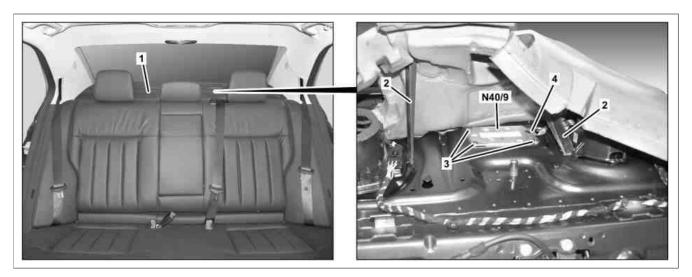

P82.62-3491-08

1 Insulation mat


Mounting wedge

2

- 3 Bolts
 - Electrical connector

N40/9 Rear bass speaker amplifier

X	Remove/install		
1	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.	
2	Remove rear shelf		AR68.30-P-4580EW
3	Lift damping mat (1) until rear bass speaker amplifier (N40/9) is accessible and support	3	*110589035900
	insulating mat (1) with assembly wedges (2)n		
4	Remove bolts (3)		
5	Lift rear bass speaker amplifier (N40/9)		
6	Disconnect electrical connector (4)		
7	Remove rear bass speaker amplifier (N40/9)		
8	Install in the reverse order		

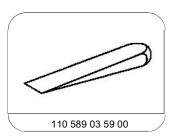

Mounting wedge