


**i** Work procedure shown on model 212.

- 1 Open lid of glove box (1).
- 2 Unclip cover (2) from media interface electrical connector (X18/70) and remove.

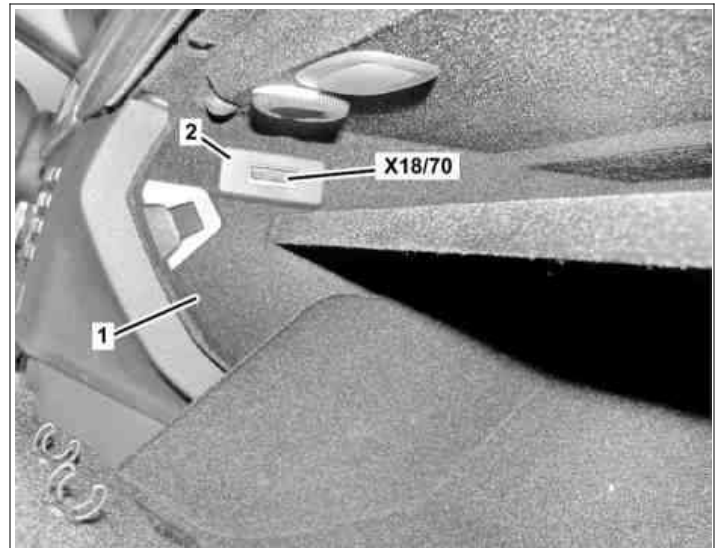


P68.10-4150-11

- 3 Unlock media interface electrical connector (X18/70) from catch hooks (3) on glove compartment (1) and guide media interface electrical connector (X18/70) out of glove compartment (1) toward rear.

**i** Ensure that catch hooks (3) locks correctly on glove box (1).

- 4 Install in the reverse order.

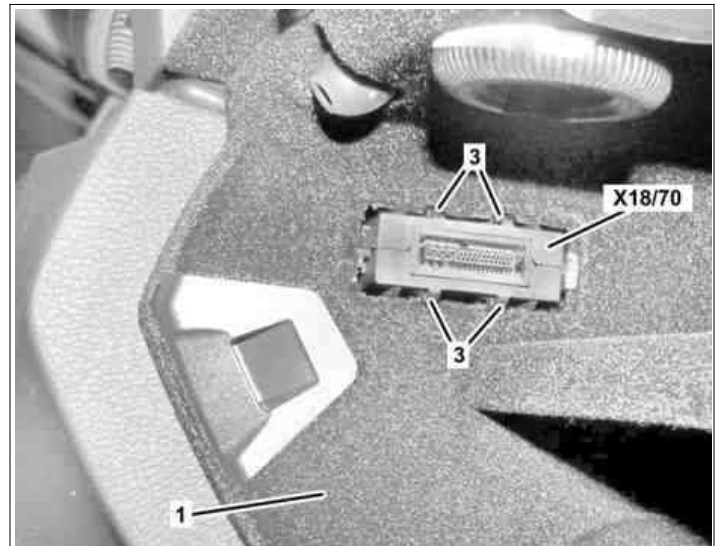

P68.10-4149-11