



AR82.60-P-0001-01TJ	Remove/install fiber optical cable module for the Media Oriented System Transport (MOST)		
---------------------	--	--	--

- 1 Detach connector (31) from the COMAND operating, display and control unit (A40/3).
- 2 Unlock connector lock (31) and pull out carrier (32).
- 3 Remove fuse (30) from carrier (32), unlock locks and remove damaged fiber optical cable module 22.
- 4 Cut off damaged fiber optical cable module 22 and strap down with insulation tape.

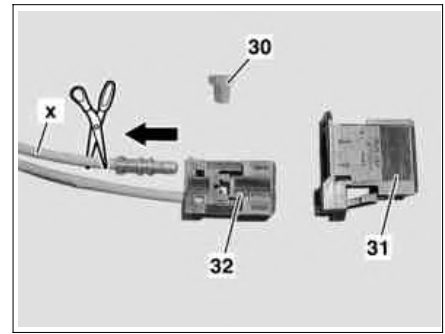


P82.60-4800-01

- 5 Install the new fiber optical cable module (22) in contact cavity 1 (input) of the connector for the COMAND operating, display and control unit (A40/3).
- 6 Route the new fiber optical cable module (22) from the connector for the COMAND operating, display and control unit (A40/3) into the left front footwell as per the guidelines.

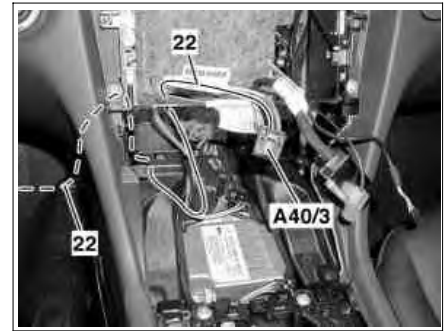


P82.60-4850-01

- 7 Route the new fiber optical cable module (22) from the radio recess along the parking brake cable (35) into the cable duct of the left front footwell and attach.
- 8 Fasten in area of damping (see arrows) of fiber optical cable module (22) using felt tape.
- 9 Route fiber optical cable module (22) as per the guidelines to the rear in the cable duct.

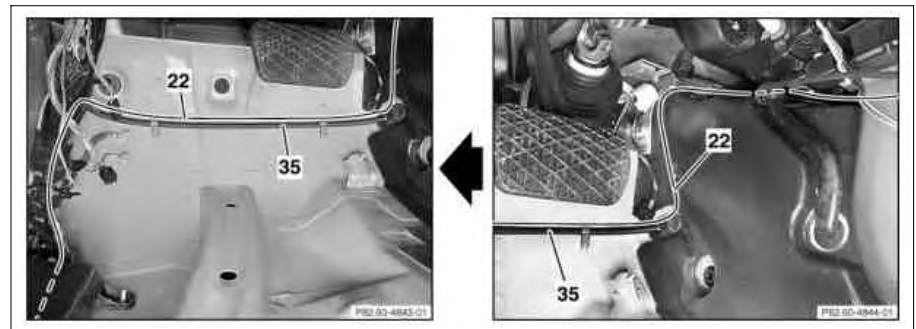

P82.60-4845-04

- 10 Route the new fiber optical cable module (22) along existing lines in the left of the luggage compartment and fasten in place as per the guidelines.

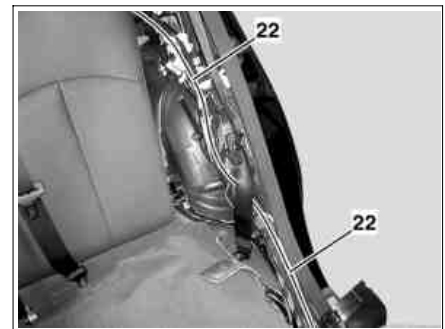


P82.60-4846-01

Shown on model 211.0


- 11 Route the new fiber optical cable module (22) along existing lines to the audio gateway control unit (N93/1) and fasten in place as per the guidelines.
- 12 Detach connector (31) for fiber optical cable on audio gateway control unit (N93/1).

Shown on model 211.0

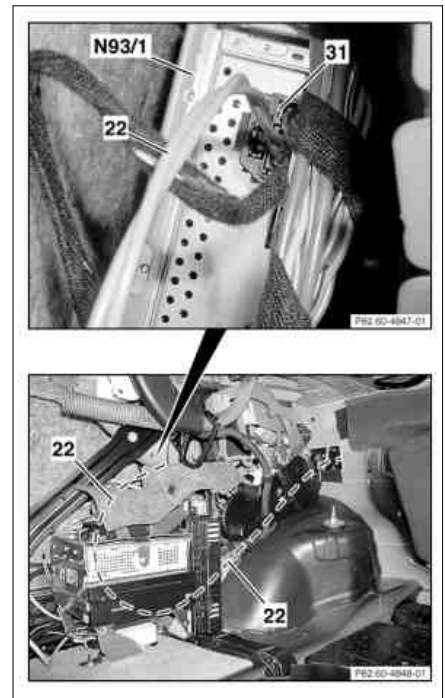

P82.60-4849-03

- 13 Unlock connector lock (31) and pull out carrier (32).
- 14 Remove fuse (30) from carrier (32), unlock locks and remove damaged fiber optical cable module 22.
- 15 Cut off damaged fiber optical cable module 20 and strap down with insulation tape.
- 16 Install the new fiber optical cable module 22 in contact cavity 2 (output) of the connector for the audio gateway control unit (N93/1).
- 17 Complete connector again and connect to the audio gateway control unit (N93/1).

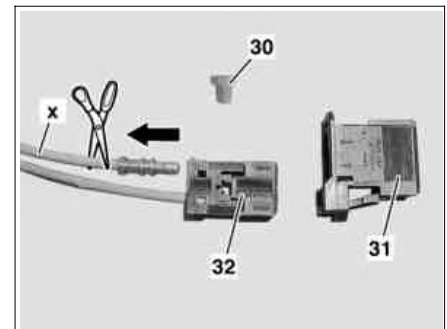

P82.60-4800-01