

**Document number:**

pe72.29-p-2101-97fa

**Document title:**

Wiring diagram for left front door control unit (DCU)


**Code:** **Designation:** **Position:**

A0	Color code key	
A26/1	Left front IR receiver	34L
CAN B	Interior CAN	
CAN B	Interior CAN	
E17/3	Left front door entrance/exit lamp	14L
E6/5	Left outside mirror turn signal lamp	18L
F34	Interior fuse box	2L
F34	Interior fuse box	4L
F34f21	Fuse 21	2K
F34f22	Fuse 22	4K
M10/3	Left front power window motor	16L
M14/6	Left front door GL [ZV] motor	36L
M21/1	Left electrically adjustable and heated outside mirror	22L
M21/1h1	Automatic dimming mirror	21K
M21/1m1	Mirror up/down adjustment motor	23K
M21/1m2	Mirror in/out adjustment motor	23K
M21/1m3	Mirror fold-in motor	
M21/1r1	Mirror heater	20K
M21/1x1	Left electrically adjustable and heated exterior mirror connector	18J
N69/1	Left front door control unit	4A
N69/1	Left front door control unit	12A
N69/1	Left front door control unit	21A
N69/1	Left front door control unit	28A
N69/1	Left front door control unit	36A
N69/1	Left front door control unit	44A
S20/1	Driver power window switch group	41L
S20/1s1	Left front power window switch	41L
S20/1s2	Right front power window switch	42L
S20/1s3	Left rear power window switch	44L
S20/1s4	Right rear power window switch	45L
S20/1s5	Rear side windows child safety lock switch	46L
S20/1s6	Trunk lid release switch	43L
S21/2	Front passenger power window switch	38L
S91/2	Left front door ESA [ESV] switch group (with memory)	30L
S91/2s1	Seat fore/aft switch	31K
S91/2s13	Steering column up/down and in/out switch	31J
S91/2s14	Memory button 1, 2, 3 switch	29K
S91/2s2	Rear seat raise/lower switch	31K
S91/2s3	Front seat raise/lower switch	31K


**Document number:** pe72.29-p-2101-97fa

**Document title:** Wiring diagram for left front door control unit (DCU)

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
S91/2s4	Head restraint raise/lower switch	29J
S91/2s5	Backrest switch	30K
S91/2s9	Memory switch	29J
U12	Valid for left-hand drive vehicles	1G
U12	Valid for left-hand drive vehicles	5G
U12	Valid for left-hand drive vehicles	21D
U12	Valid for left-hand drive vehicles	21D
U12	Valid for left-hand drive vehicles	30J
U12	Valid for left-hand drive vehicles	40E
U12	Valid for left-hand drive vehicles	33E
U13	Valid for right-hand drive vehicles	1H
U13	Valid for right-hand drive vehicles	3G
U13	Valid for right-hand drive vehicles	5G
U13	Valid for right-hand drive vehicles	33E
U13	Valid for right-hand drive vehicles	37E
U144	Valid for fold-out mirrors	25D
U144	Valid for fold-out mirrors	26D
U145	Valid for mirror memory	24D
U145	Valid for mirror memory	24D
U145	Valid for mirror memory	24D
U145	Valid for mirror memory	25D
U52	Valid for Japan	33E
U57	Valid for model 203.2	13E
U57	Valid for model 203.2	43G
U58	Valid for model 203.0	13E
U58	Valid for model 203.0	43G
W18	Ground (left front seat crossmember)	6L
W19	Ground (right front seat crossmember)	5L
X30/7	Left voltage distributor (CAN) connector	8L
X35/1	Left front door separation point	2E
X35/2	Right front door separation point	10H

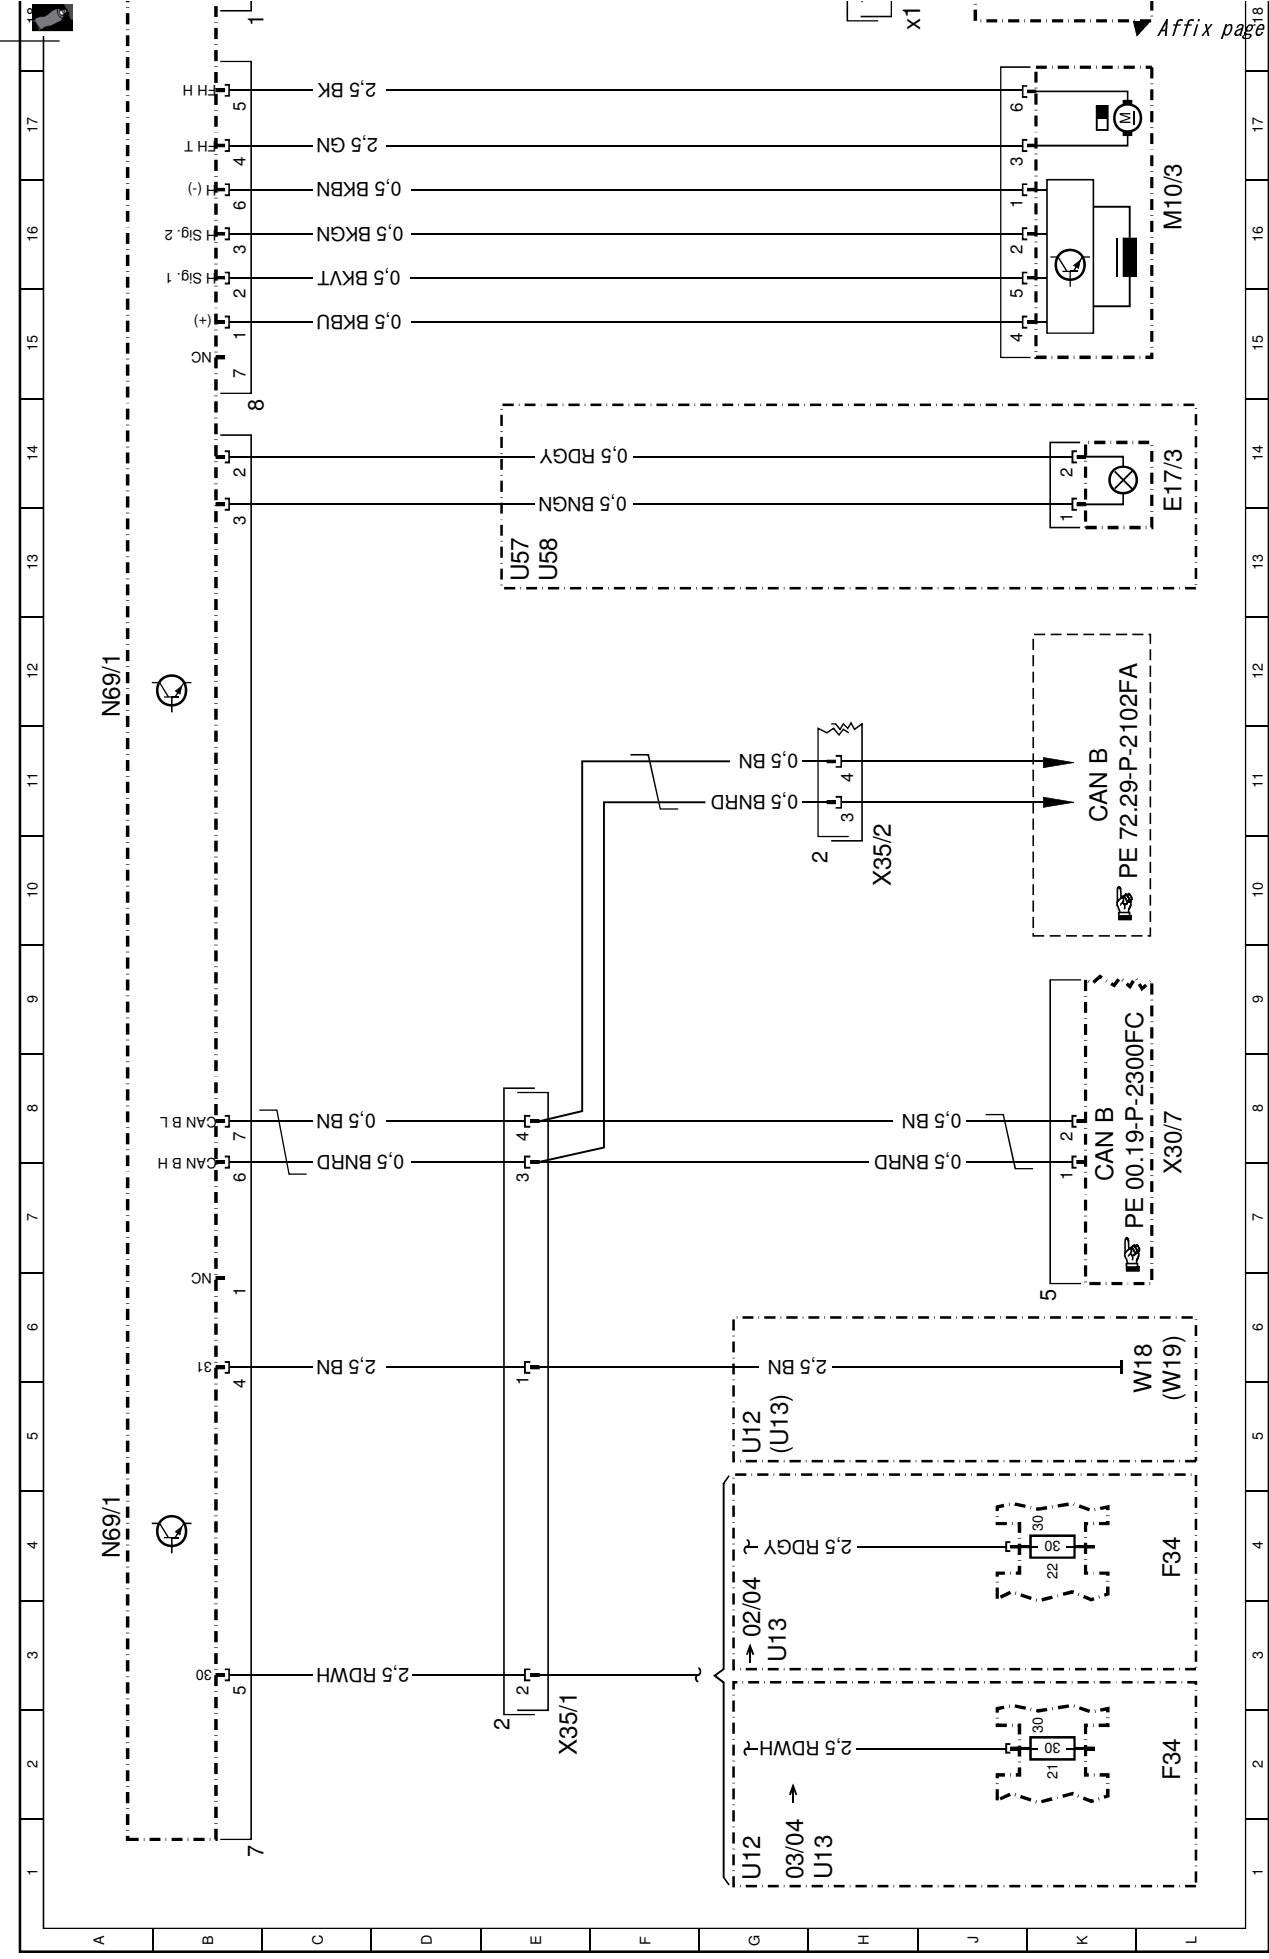


Affix page 2 here ▼

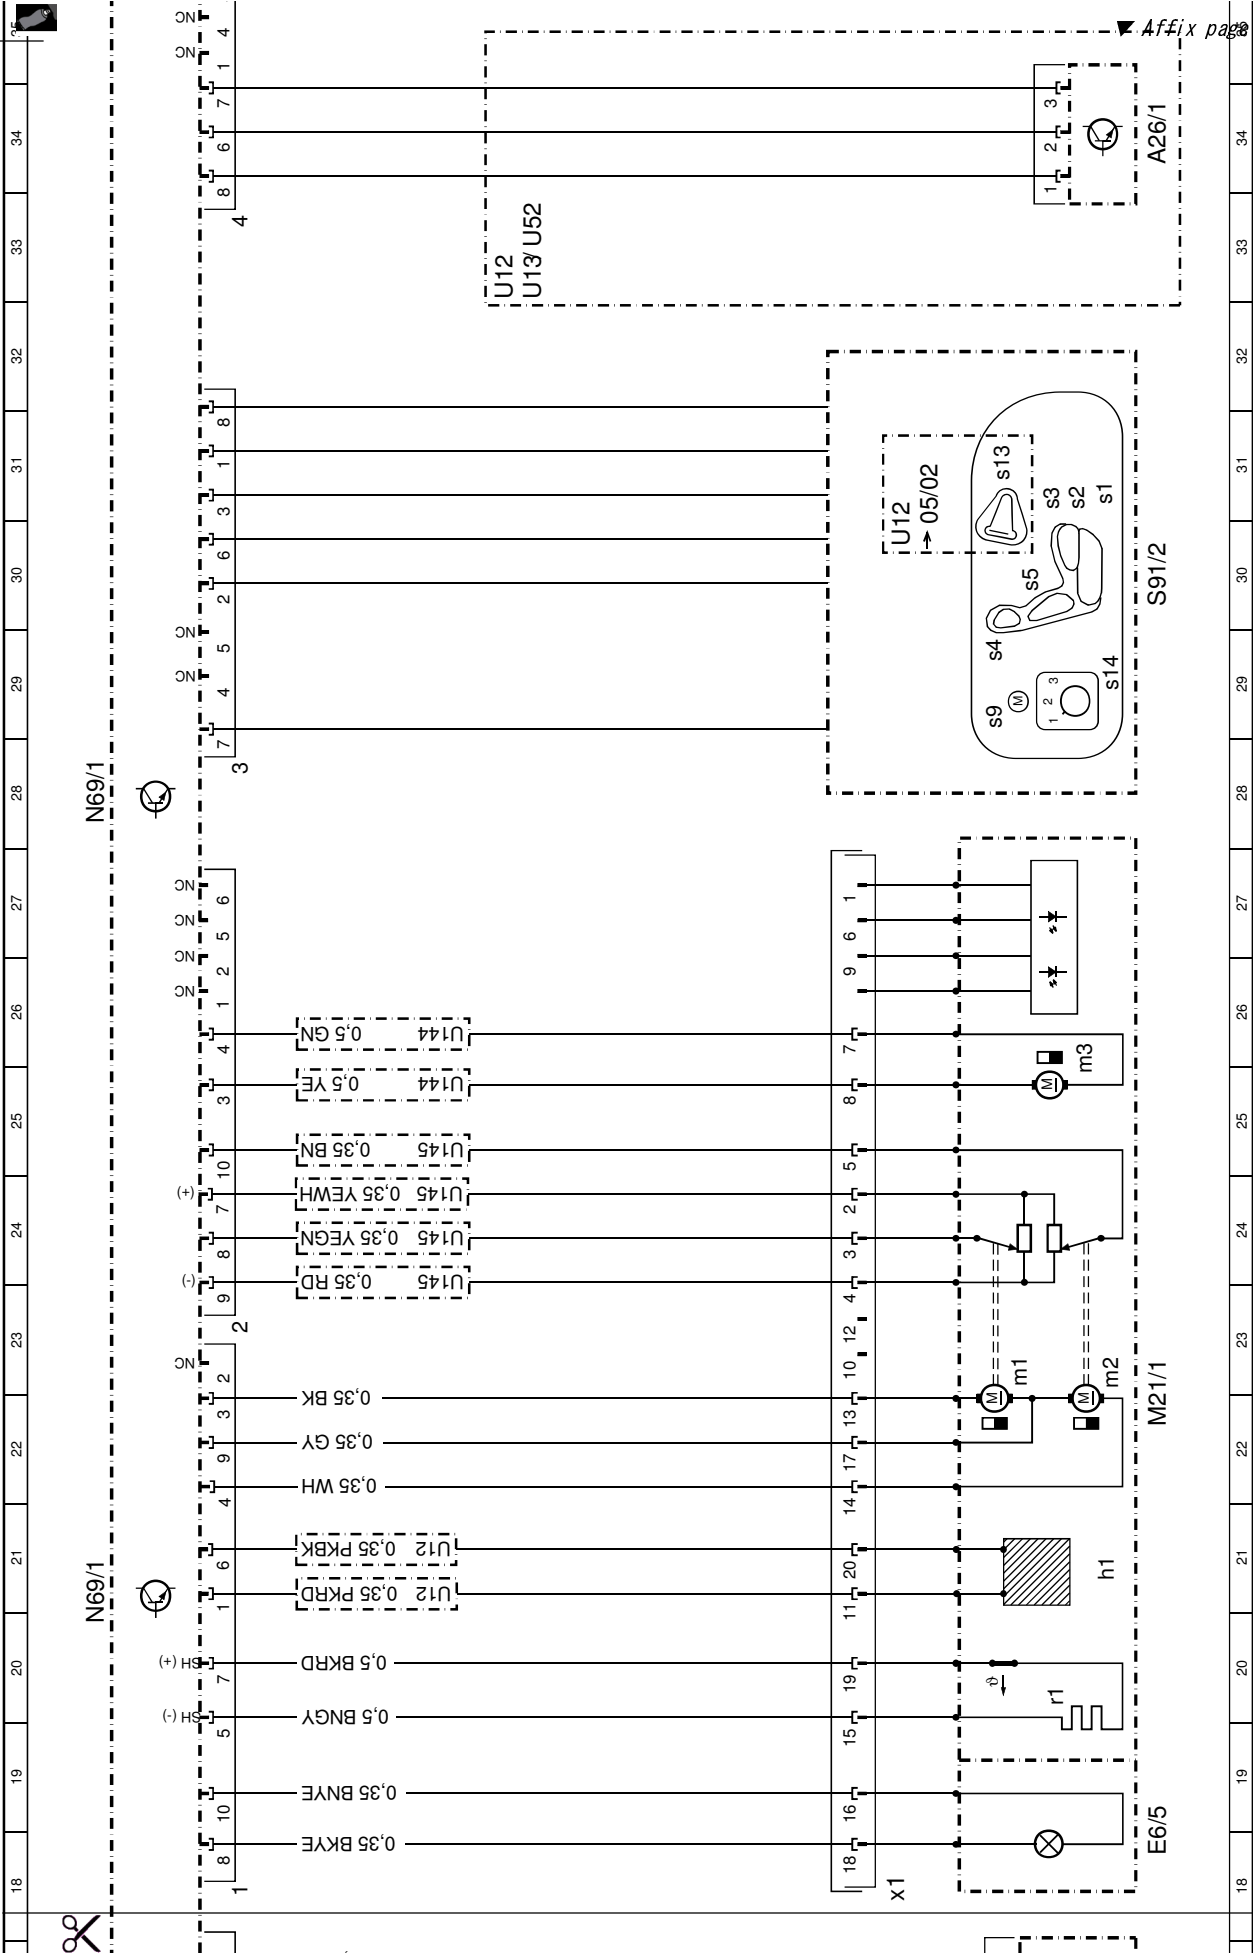

▼ Affix page 3 here ▼

Cut here

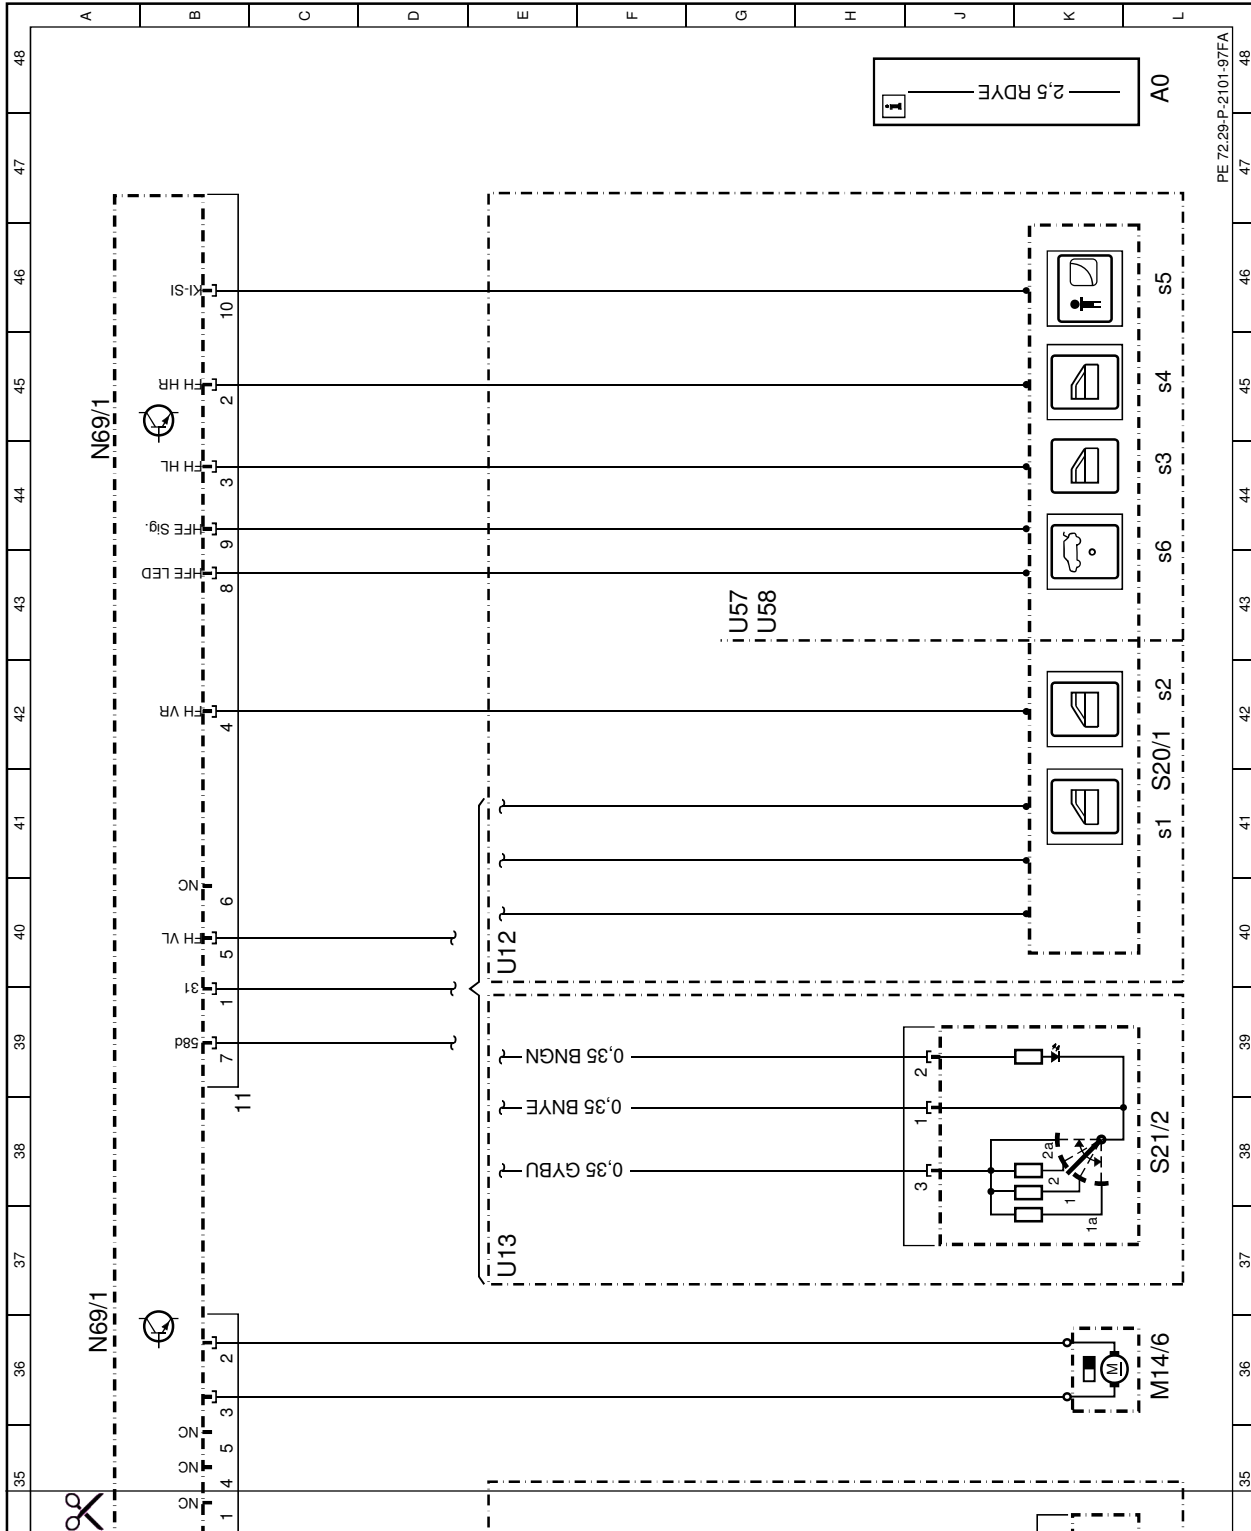

Cut here