


- 15 Remove cable grommet (10) from housing on front SAM control unit with fuse and relay module (N10/1).

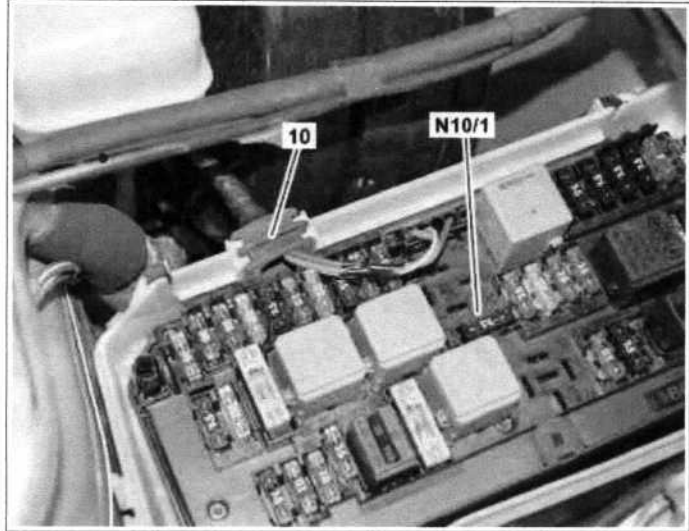


P88.40-3045-11

- 16 Remove cable grommet (11) from housing on front SAM control unit with fuse and relay module (N10/1).

i Cable grommet (11) is no longer required.

- 17 Route black line (sw) along front SAM control unit with fuse and relay module (N10/1).
- 18 Route black line (sw) through opening in housing of front SAM control unit with fuse and relay module (N10/1) and install cable grommet installed on black line (sw).

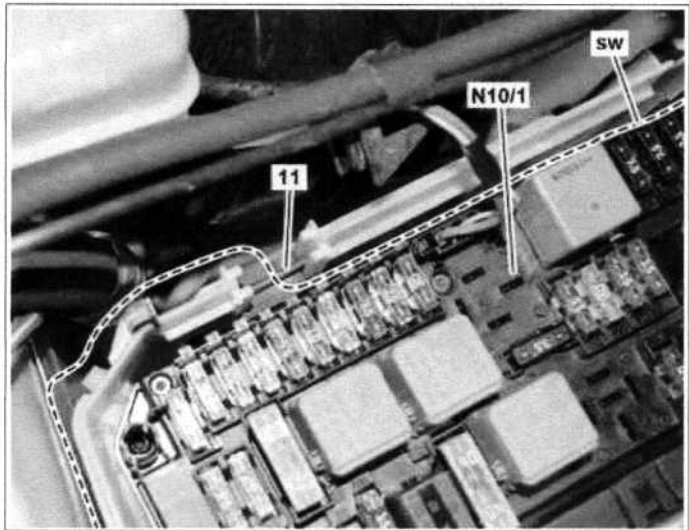

P88.40-3044-11