


MODEL 204.2

- 1 Left paneling
- 2 Right trim piece



P82.10-5038-01

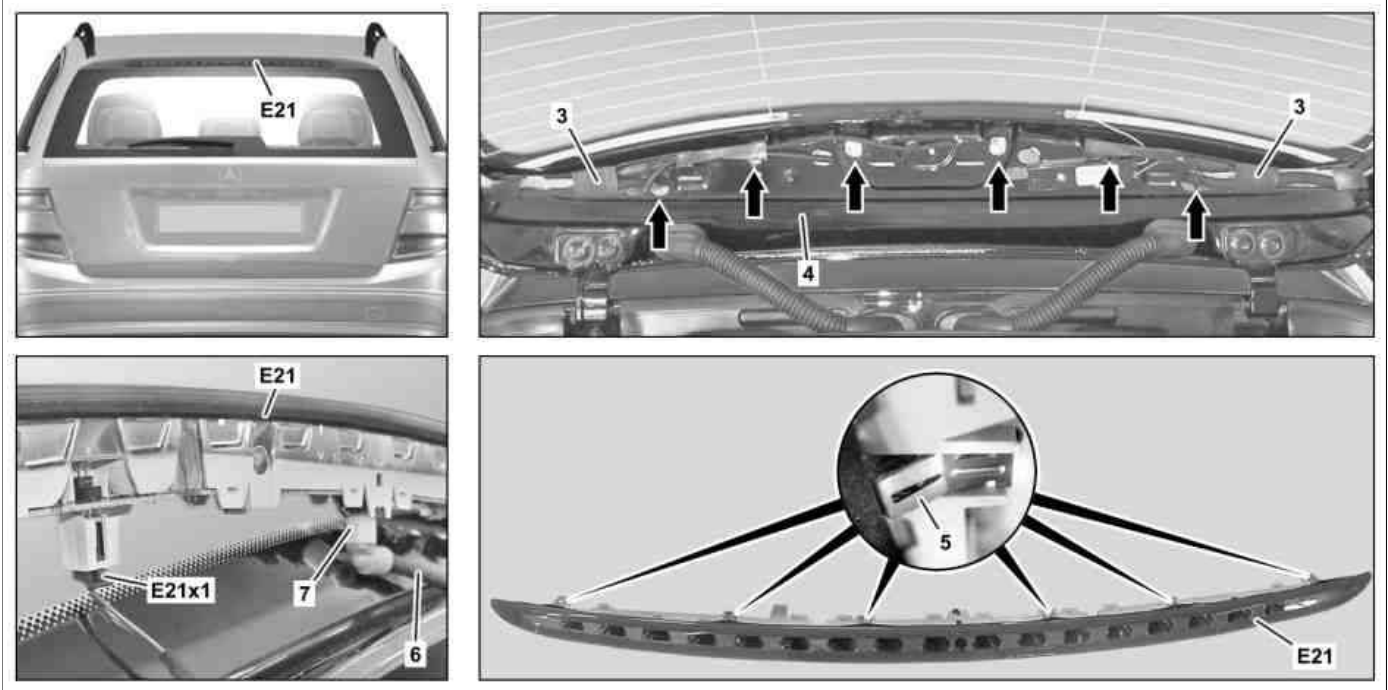

P82.10-5039-09

- 3 Wiring harness mount
- 4 Tailgate
- 5 Spring

- 6 Washer fluid hose
- 7 Ring

- E21 Center stop lamp
- E21x1 Center brake lamp electrical connector

☒ ☒	Remove/install		
1	Remove left paneling (1) and right paneling (2).		AR72.20-P-6616CW
2	Unclip left and right wiring harness brackets (3) from rear-end door (4)		
3	Starting at one side, push back springs (5) one after the other and simultaneously pull center brake lamp (E21) out of rear-end door (4) in stages	<p>⚠ Unclip and pull out center brake lamp (E21) with care, since the center brake lamp (E21) is extremely fragile.</p> <p>i The springs (5) are on the underside of the center brake lamp (E21). The springs (5) can be accessed through the openings (arrows) on the inside of the rear-end door (4).</p>	
4	Disconnect electrical connector of center brake lamp (E21x1)		
5	Twist ring (7) and disconnect washer fluid hose (6) from spray nozzle		
6	Remove center brake lamp (E21)		
7	Install in the reverse order		