

P68.10-3803-07

Shown on model 204.0


- | | | | | | |
|---|-------------------|---|-----------------------------|--------|--|
| 1 | Cover | 4 | Bolts | B10/36 | Right front footwell air outlet temperature sensor |
| 2 | Door sill molding | 5 | Bottom of A-pillar paneling | E17/15 | Right front footwell lamp |
| 3 | Edge guard | 6 | Catch hook | | |

| ☒ ☒ | Remove/install | | |
|-----|---|--|--|
| 1 | Adjust right front seat toward rear to end position | | |
| 2 | Remove door sill molding (2) | Model 204, 207 | |
| 3 | Loosen edge guard (3) in area of bottom A-pillar paneling (5). | Model 204, 207 | |
| 4 | Remove A-pillar paneling at bottom (5) | Model 204, 207 | |
| 5 | Fold floor covering to passenger side | Model 212, 218 | |
| 6 | Unscrew bolts (4) and lower cover (1) | i Installation: Guide catch hook (6) into corresponding lug on AC housing. | |
| 7 | Disconnect electrical connector from air outlet temperature sensor on right front footwell vent (B10/36) and right front footwell lamp (E17/15) | | |
| 8 | Remove cover (1) out of the footwell | | |
| 9 | Install in the reverse order | | |

MODEL 204, 207, 212, 218

Shown on model 204

- 1 Slide
- 1a Clip
- 2 Activated charcoal dust filter
- 3 AC housing
- A32m1 Blower motor

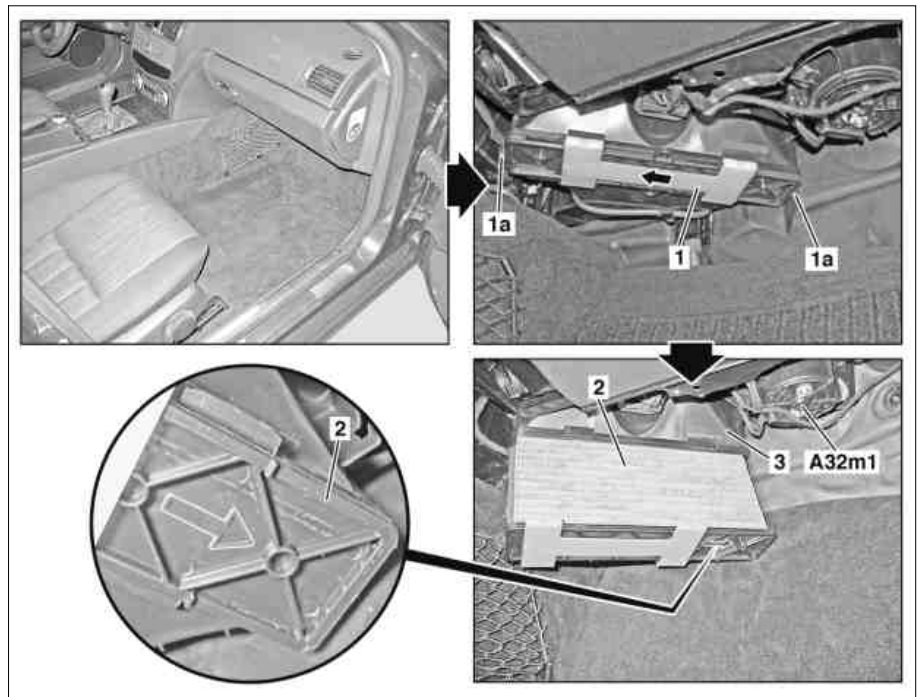

P83.00-2268-06

| | | | |
|--------|---|--|------------------|
| | Remove | | |
| 1 | Remove cover below right dashboard | | AR68.10-P-1520CW |
| 2 | Lever up and remove clips (1a) | | |
| 3 | Unlock slide (1) in the direction of the arrow and remove activated charcoal dust filter (2) downwards from air conditioner housing (3) | | |
| | Clean | | |
| 4 | Clean area surrounding air conditioner housing (3) | | |
| | Disassemble | | |
| 5 | Remove slide (1) from old activated charcoal dust filter (2) | | |
| | Assemble | | |
| 6 | Mount slide (1) at new activated charcoal dust filter (2) | | |
| | Install | | |
| 7 | Slide new activated charcoal dust filter (2) into air conditioner housing (A32) | The arrow marked on the activated charcoal dust filter (2) must point toward the blower motor (A32m1). | |
| 8 | Lock activated charcoal dust filter (2) with slide (1) against the direction of the arrow | The recess on the air conditioner housing cover must point toward the center console. Make sure that the seal is seated correctly. | |
| 9 | Press clamps (1a) together | | |
| 10 | Install cover below dashboard on right | | AR68.10-P-1520CW |