

P82.62-3513-09

Shown on model 207.3 with code (537a)
Digital radio, code (863) Digital/analog
TV tuner and code (889) Keyless-Go

- 1 Rear headliner cover
2 Right C-pillar paneling
3 Left C-pillar paneling
4 Screw

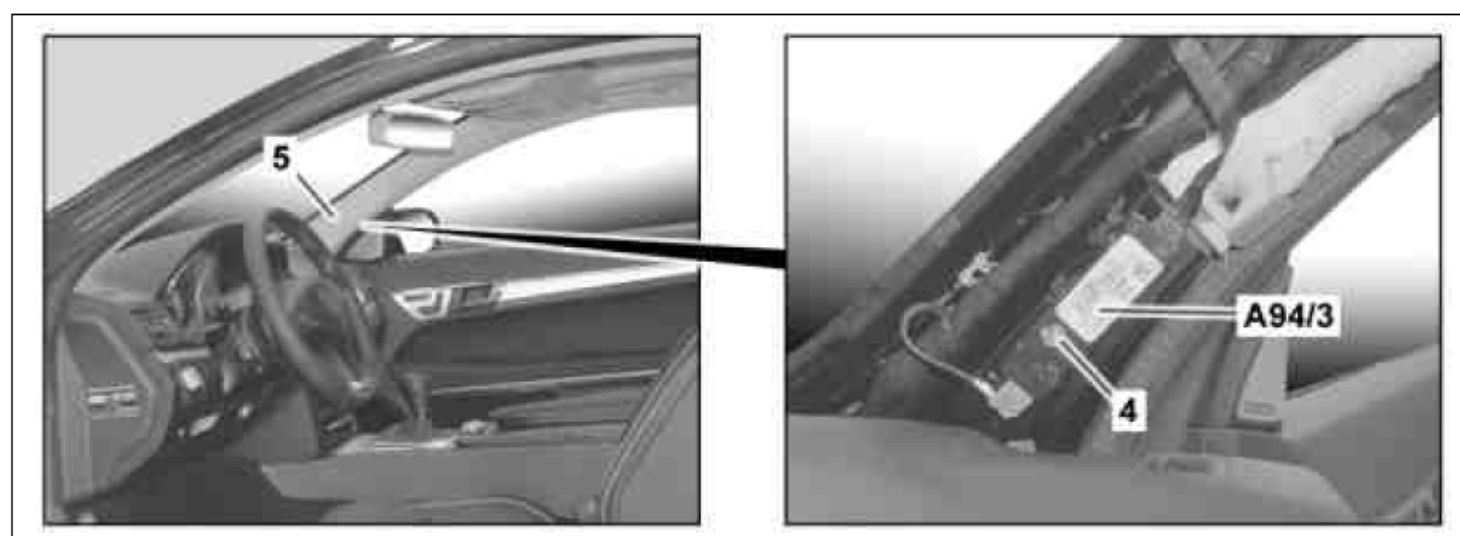
- A2/18 FM, AM and CL [ZV] antenna
amplifier
A2/19 Rear window antenna FM
antenna amplifier

- A94/1 TV 1 antenna amplifier (863)
Digital/analog TV tuner or code
(537) Digital radio)
A94/2 Antenna amplifier for TV 2 and
KEYLESS-GO (with code (863)
Digital/analog TV tuner or code
(889) Keyless Go)



Shown on model 207.3 with code (863)
Digital/analog TV tuner


- 4 Screw
5 Right A-pillar paneling

A94/3 TV 3, FM 2 and DAB band III
antenna amplifier (with code
(863) Digital/analog TV tuner)



P82.62-3514-04

 	Remove/install		
1	Unclip rear headliner cover (1) and remove	When removing FM , AM and CL antenna amplifier (A2/18) or antenna amplifier for TV 2 and KEYLESS-GO (A94/2) on vehicles with code (863) Digital/analog TV tuner or code (889) Keyless Go.	
2.1	Remove right C-pillar paneling (2)	Model 204.3 with removal of TV 1 and DAB band III antenna amplifier (A94/1) on vehicles with code (863) Digital/analog TV tuner or code (537) Digital radio.	AR68.30-P-4490EC
2.2	Remove right C-pillar paneling (2)	Model 207.3 with removal of TV 1 antenna amplifier (A94/1) on vehicles with code (863) Digital/analog TV tuner or code (537) Digital radio.	
3	Remove left C-pillar paneling (3)	When removing rear window antenna FM antenna amplifier (A2/19).	AR68.30-P-4490EC

4.1	Remove right A-pillar paneling (5).	Model 204.3 with removal of TV 3 antenna amplifier (A94/3) on vehicles with code (863) Digital/analog TV tuner.	
4.2	Remove right A-pillar paneling (5).	Model 207.3 with removal of TV 3, FM 2 and DAB band III antenna amplifier (A94/3) on vehicles with code (863) Digital/analog TV tuner.	
5	Remove screw (4) from respective antenna amplifier (A2/18, A2/19, A94/1, A94/2 or A94/3)	 The screw (4) remains in respective antenna amplifier (A2/18, A2/19, A94/1, A94/2 or A94/3).	
6	Remove respective antenna amplifier (A2/18, A2/19, A94/1, A94/2 or A94/3) until the electrical connectors are accessible		
7	Detach electrical connectors respective each antenna amplifier (A2/18, A2/19, A94/1, A94/2 or A94/3) and remove respective antenna amplifier (A2/18, A2/19, A94/1, A94/2 or A94/3)		
8	Install in the reverse order		