


AR88.70-P-9020LF	Remove/install mirror glass	27.07.2017
------------------	-----------------------------	------------

Model	205, 213, 217, 222, 238, 253
-------	------------------------------

P88.70-2676-07

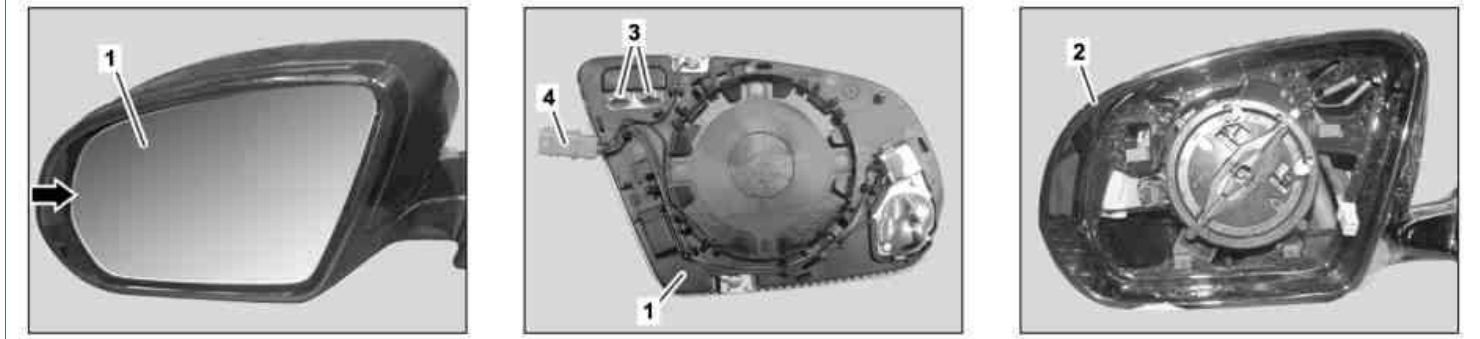

Shown on model 222

1	Mirror glass	3	Electrical connections			
2	Exterior rearview mirrors	4	Connector			

	Warningseverity=W	Risk of injury caused by irritation of the skin, eyes and respiratory system through contact or inhalation of substances contained in the mirror lens.	Wear protective gloves and safety glasses.		Risk of injury caused by irritation of the skin, eyes and respiratory system through contact or inhalation of substances contained in the mirror lens.
		Remove/install			
1		Tilt out mirror glass (1) on outside (arrow)			
2		Loosen mirror glass (1) from outside mirror (2) using assembly wedge and unclip carefully		Mounting wedge	*110589035900
3		Remove female space connectors from electrical connections (3)			
4		Disconnect connector (4) from socket			
5		Install in the reverse order			

Mounting wedge

110 589 03 59 00

