


MODEL 204

MODEL 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277)





MODEL 212.074/077/274/277

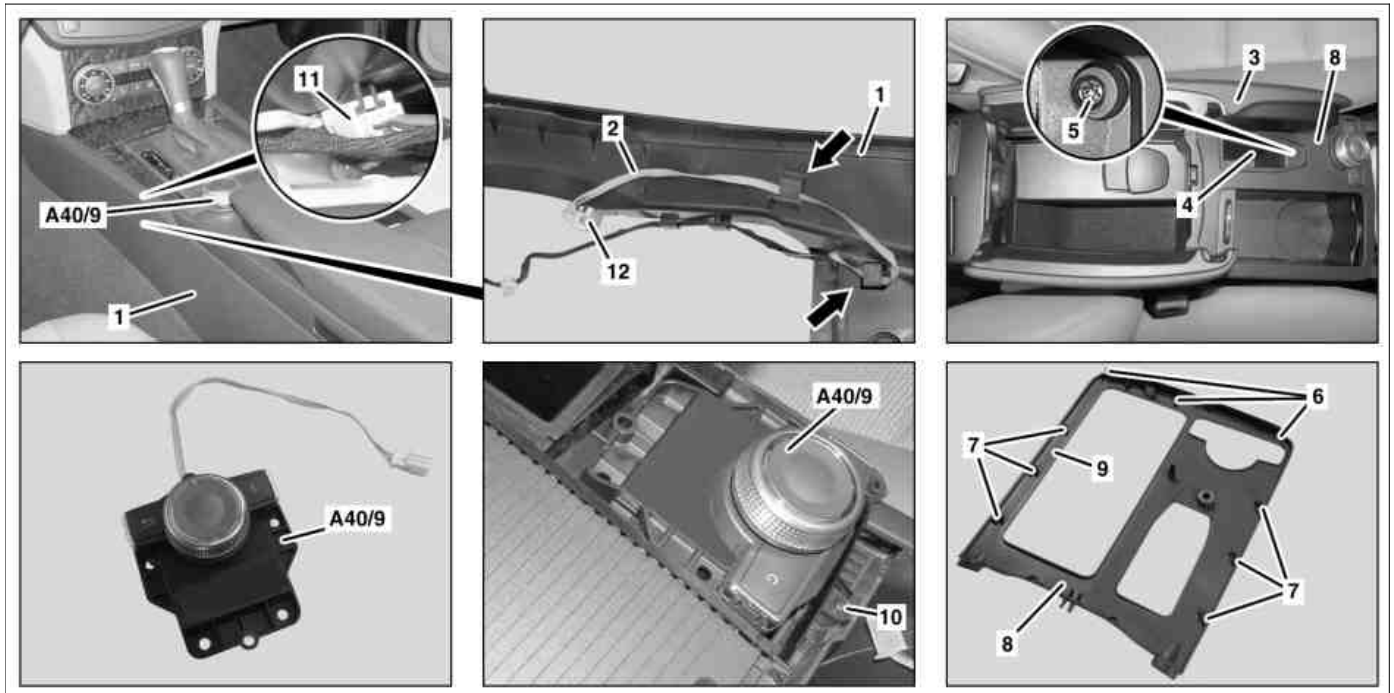

P54.21-2757-09

Shown on model 204.0

1	Center console	6	Front catch hook	11	Electrical connector
2	Electrical line	7	Side catch hook	12	Connector
3	Armrest	8	Cup holder cover	A40/9	Audio/COMAND control panel
4	Waste receptacle	9	Web		
5	Screw	10	Screw		

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Buffer basic data from Audio/COMAND control panel (A40/9) in STAR DIAGNOSIS	When replacing Audio/COMAND control panel (A40/9) i Installation: Transfer buffered basic data to new Audio/COMAND control panel (A40/9).	AD00.00-P-2000-04A
2	Open armrest (3) and take out waste receptacle (4)		
3	Remove screw/bolt (5)		
4	First unclip front catch hook (6), then side catch hook (7) and remove cup holder cover (8)	 Carefully remove cup holder cover (8). Otherwise bar (9) on cup holder cover (8) may break.	
5	Loosen the center console (1) until the electrical line (2) is accessible on the underside of the center console (1)	MODEL 204	AR68.20-P-2000CW
6	Remove bolt (10)		
7.1	Disconnect electrical connection (12)	MODEL 204.9 as of model year 2013	
7.2	Disconnect electrical connector (11)	MODEL 204.0/2/3, MODEL 204.9 up to model year 2013, MODEL 212 i On model 212, electrical connector (11) is accessible without releasing center console (1).	

8.1	Unclip plug (11) from center console (1), unhook electrical line (2) from guides (arrows) and remove Audio/COMAND control unit (A40/9)	MODEL 204.9 as of model year 2013	
8.2	Unclip plug (12) from center console (1), unhook electrical line (2) from guides (arrows) and remove Audio/COMAND control unit (A40/9)	MODEL 204.0/2/3, MODEL 204.9 up to model year 2013, MODEL 212	
9	Install in the reverse order		