

P91.25-2507-09

Shown on left front seat


- 1 Back shell
- 2 Cover
- 3 Long wedge
- 4 Felt strip
- 5 Cover
- 6 Bolts

- S109/4 Driver seat lumbar support and side bolster adjustment switch group
- S109/5 Front passenger seat lumbar support and side bolster adjustment switch group

- S109/4x1 Driver seat lumbar support and side bolster adjustment switch electrical connector
- S109/5x1 Front passenger seat lumbar support and side bolster adjustment switch electrical connector

	Remove/install		
1	Adjust left or right front seat toward rear		
2	Adjust backrest toward rear until cover (5) can be removed		
3	Attach felt strip (4) to back shell (1) as shown	<p> Do not scratch or damage painted back shell (1), as otherwise back shell (1) must be replaced.</p> <p> Felt strip (4) is used to protect back shell (1) when unclipping cover (5) with long wedge (3).</p>	
4	Lift cover (5) with long wedge (3) as shown and unclip catch hooks (arrows A) of cover (5)	<p> Do not scratch or damage painted back shell (1), as otherwise back shell (1) must be replaced.</p> <p>Do not damage cover (2) with long wedge (3), as otherwise cover (2) must be replaced.</p> <p></p>	*115589035900
5	Remove cover (5) until driver seat lumbar support and side bolster adjustment switch electrical connector (S109/4x1) or front passenger seat lumbar support and side bolster adjustment switch electrical connector (S109/5x1) can be disconnected		
6	Disconnect driver seat lumbar support and side bolster adjustment switch electrical connector (S109/4x1) or front passenger seat lumbar support and side bolster adjustment switch electrical connector (S109/5x1)		
7	Take off cover (5)		

8	Unclip coupling of driver seat lumbar support and side bolster adjustment switch electrical connector (S109/4x1) or front passenger seat lumbar support and side bolster adjustment switch electrical connector (S109/5x1) from bracket (arrow B) of cover (5)		
9	Remove screws/bolts (6) from cover (5)	<p>i Installation: When screwing screws/bolts (6) into cover (5), check unobstructed movement of shift paddles of driver seat lumbar support and side bolster adjustment switch group (S109/4) or front passenger seat lumbar support and side bolster adjustment switch group (S109/5), loosen screws/bolts (6) if necessary and correspondingly align driver seat lumbar support and side bolster adjustment switch group (S109/4) or front passenger seat lumbar support and side bolster adjustment switch group (S109/5) and then tighten screws/bolts (6).</p>	
10	Remove driver seat lumbar support and side bolster adjustment switch group (S109/4) or front passenger seat lumbar support and side bolster adjustment switch group (S109/5) from cover (5)		
11	Install in the reverse order		

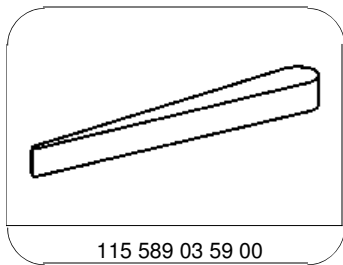

Long wedge