


Assignment of fuse box in interior

1 Cockpit fuse box (F3)
78 to 86 Fuses

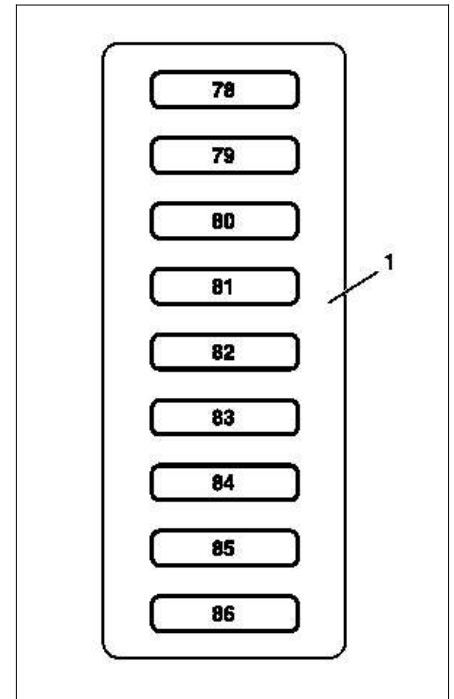

P54.15-2473-03

| Fuse | Terminal | Color of fused wire | Fused function | Rating in amperes (A) |
|------|----------|----------------------------|---|-----------------------|
| f78 | 30z | rt 4.0 mm ² | <ul style="list-style-type: none"> ● Alarm signal horn with additional battery (H3/1) ● Steering column module (N80) ● EIS control unit (N73) ● ME-SFI control unit (N3/10) | 7.5 |
| f79 | 30 | rt/ge 0.5 mm ² | <ul style="list-style-type: none"> ● Instrument cluster (A1) | 5 |
| f80 | 30 | rt/sw 0.75 mm ² | <ul style="list-style-type: none"> ● Upper control panel control unit (N72/1) | 10 |
| f81 | 30 | rt/bl 0.75 mm ² | <ul style="list-style-type: none"> ● Data link connector (X11/4) | 10 |
| f82 | 30 | rt/ws 1.5 mm ² | <ul style="list-style-type: none"> ● AAC [KLA] control and operating unit (N22) ● Heating system delivery unit (A31) | 10 |
| f83 | 30 | rt/vi 0.75 mm ² | <ul style="list-style-type: none"> ● Central gateway control unit (N93) | 10 |
| f84 | 15 | sw/gn 0.5 mm ² | <ul style="list-style-type: none"> ● Instrument cluster (A1) ● Data link connector (X11/4) | 5 |
| f85 | 15R | sw/ge 0.5 mm ² | <ul style="list-style-type: none"> ● Instrument cluster (A1) | 5 |
| f86 | 15R | sw/gr 1.5 mm ² | <ul style="list-style-type: none"> ● Front cigar lighter with ashtray illumination (R3) | 15 |