


## N82/1 Vehicle power supply control unit

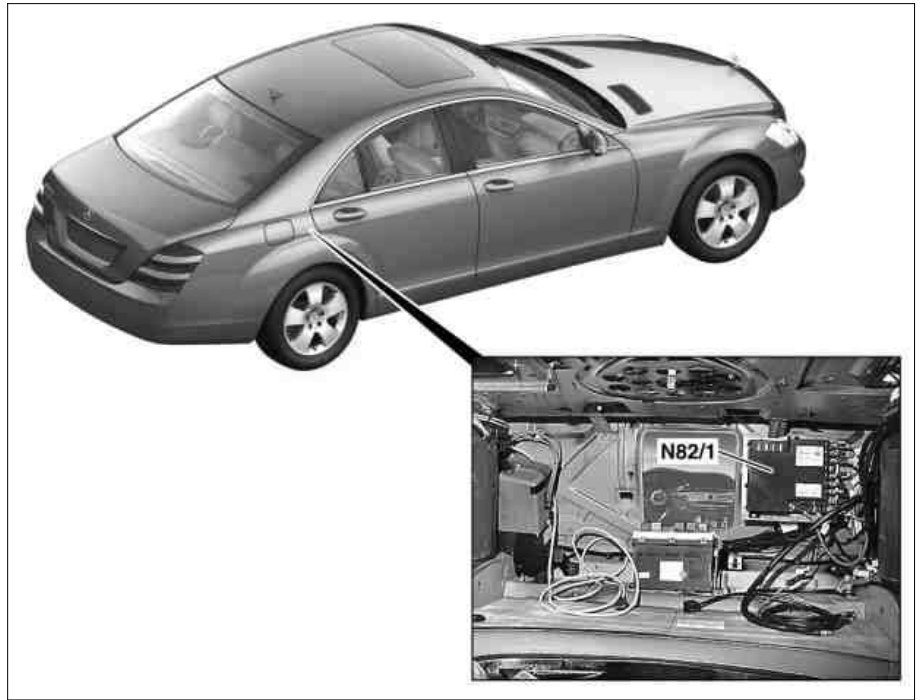

P54.15-2790-06

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
N82/1f1	30	25.0 RD	<ul style="list-style-type: none"> <li>● Front prefuse box (F32) (via on-board electrical network line pyrofuse (N82/1f1))</li> </ul>	-
N82/1f2	30	16.0 RD	<b>Valid for code (597) Heated windshield (model 221):</b> <ul style="list-style-type: none"> <li>● Heated windshield control unit (N61)</li> </ul>	125
N82/1f3	30	10.0 RD	<ul style="list-style-type: none"> <li>● Right instrument panel fuse box (F1/6)</li> </ul>	80
N82/1f4	30	16.0 RD	<ul style="list-style-type: none"> <li>● Rear SAM control unit with fuse and relay module (N10/2)</li> </ul>	200
N82/1f5	30	6.0 RD	<b>Valid for special-purpose vehicles (model 221):</b> <ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	100
N82/1f6	30	16.0 RD	<ul style="list-style-type: none"> <li>● Rear SAM control unit with fuse and relay module (N10/2)</li> </ul>	150
N82/1f7	30	10.0 RD	<ul style="list-style-type: none"> <li>● Front SAM control unit with fuse and relay module (N10/1)</li> </ul>	100
N82/1f8	30	10.0 RDWH	<ul style="list-style-type: none"> <li>● Left instrument panel fuse box (F1/7)</li> </ul>	80
N82/1f9	30	0.75 RDGN	<ul style="list-style-type: none"> <li>● Front SAM control unit with fuse and relay module (N10/1)</li> </ul>	5
N82/1f10	30	0.75 RD	<b>Valid for code (359) TELE AID emergency call system (model 216):</b> <ul style="list-style-type: none"> <li>● Emergency call system control unit (N123/4)</li> </ul>	5