


MODEL 170, 202, 208, 210

- 31 Screws
 32 Bracket
 33 Casing tube cover
 S4 Combination switch
 S40 Cruise control switch
 S4_1 Connector, combination switch
 S40_1 Connector, cruise control switch (CC)

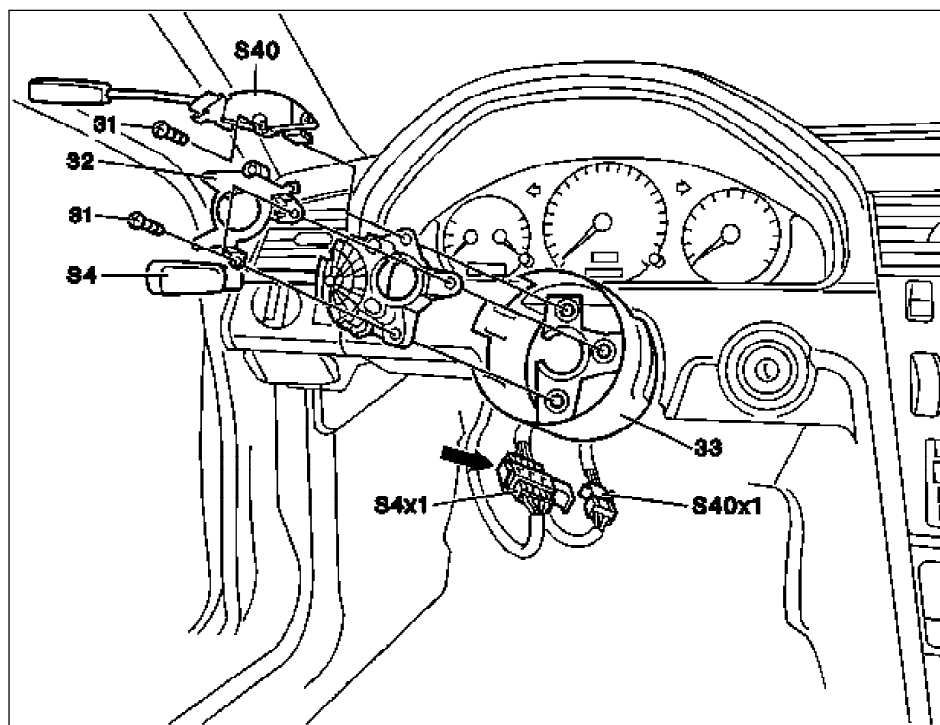

P54.25-0001-06

☒ ☒	Removal, installation		
1	Disconnect ground cable at the battery	⚠ On model 210 insulate terminal on ground cable to prevent unintentional contact between disconnected ground cable and ground W10.	AR54.10-P-0003A
2	Remove steering wheel	⚠ Caution when handling airbag unit. Improper handling may cause damage to the airbag unit	AR46.10-P-0100B
3	Remove contact spiral		AR46.10-P-0200A
4.1	Remove cover below instrument panel (driver's side)	Model 170 Model 202 Model 210	AR68.10-P-1500G AR68.10-P-1500E AR68.10-P-1500F
4.2	Remove bottom section of instrument panel (driver's side)	Model 208	AR68.10-P-1505K
5	Unscrew screw (31)		
6	Take out bracket (32)		
7	Separate connector (S4x1)	Take connector out of fixture and push bar (arrow)	
8	Separate connector (S40x1)	Cruise control (code 440a) Take connector out of fixture	
9	Detach wiring		
10.1	Take out casing tube cover (33) together with combination switch (S4)	without cruise control	
10.2	Take out casing tube cover (33) with combination switch (S4) and cruise control switch (S40)	with cruise control (code 440a)	
11.1	Take combination switch (S4) out of casing tube cover	without cruise control	
11.2	Take combination switch (S4) and cruise control switch (S40) out of casing tube cover	with cruise control (code 440a)	
12	Reinstall in opposite order		