




# Werkstattinformationssystem Display Document

Sales designation: CLK 500 Cabriolet    Vehicle ident. number: WDB209475\*    Engine number: 113.968    Automatic transmission: 722633    Gr.: 77.37    Entry:    Mod.Y.:    Op. no.:  
AR77.37-P-4171QA    Remove/install hydraulic cylinder for soft top actuation    Full-size view    Validity OFF    Page: 2 / 5

AR77.37-P-4171QA    Remove/install hydraulic cylinder for soft top actuation    14.3.03

MODEL 209.4



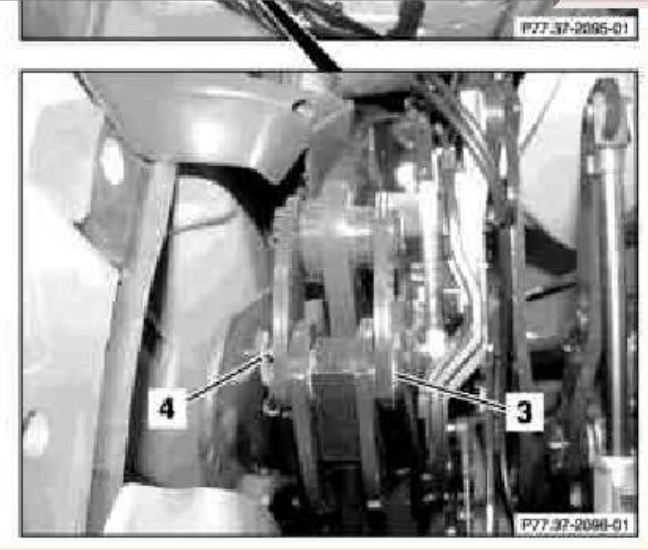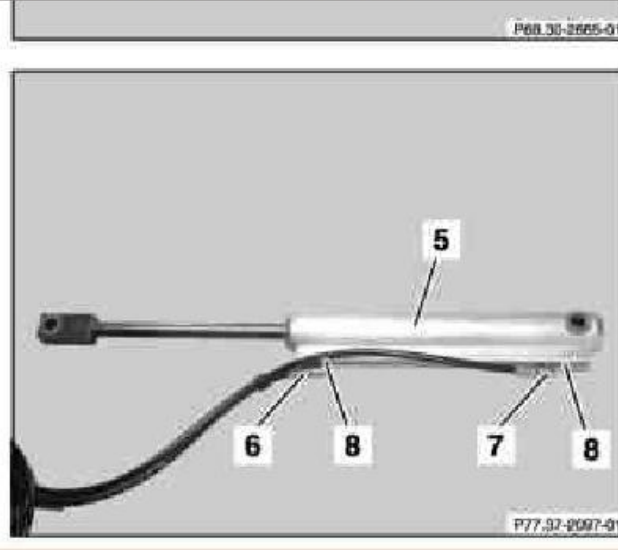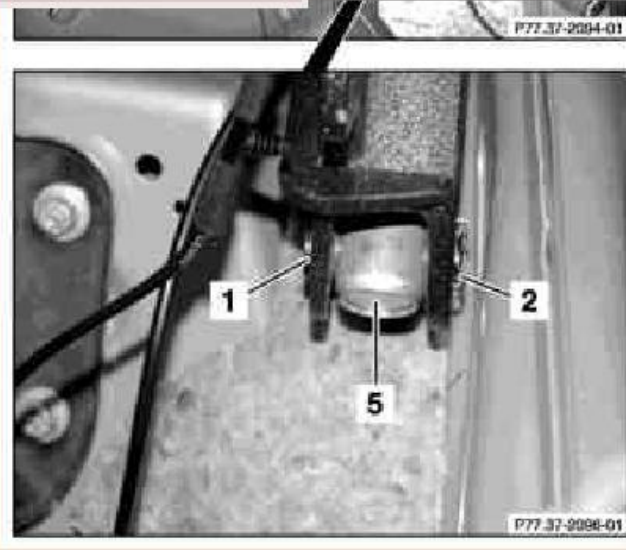

P77.37-2099-09

- 1 Bolt
- 2 Fuse
- 3 Bolt
- 4 Fuse

- 5 Hydraulic cylinder
- 6 Hydraulic line
- 7 Hydraulic line
- 8 Locking plates

	<b>Remove/install</b>		
<b>Danger!</b>	Injury hazard from roll bar extending	Before working in the area of the roll bar pull rear head restraints out by hand.	AS91.00-Z-0003-01QA



wis AR77.37-P-4171QA Remove/install hydraulic cylinder for soft top actuation Normal view validity OFF Page: 3 / 4

	Remove/install		
<b>Danger!</b>	Injury hazard from roll bar extending	Before working in the area of the roll bar pull rear head restraints out by hand.	AS91.00-Z-0003-01QA
<b>Danger!</b>	<b>Risk of injury. Moving parts can pinch, crush or, in extreme cases even sever extremities.</b>	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0009-01A
<b>Danger!</b>	<b>Risk of injury</b> to skin or eyes from hydraulic fluid spraying out under pressure. <b>Risk of poisoning</b> from swallowing hydraulic fluid.	Release the pressure in the hydraulic system completely before starting any work on the system. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
1	Remove rear seat and rear backrest		AR91.12-P-1700QA
2	Remove side paneling in rear		AR68.30-P-4780QA
3	Close soft top	Leave soft top bow and soft top compartment cover in upright position	
4	Cover vehicle in rear area	To prevent scratching the paint during assembly work.	
5	Expose hydraulic lines (6) and (7)	If necessary, detach tie strap and electric leads to prevent leads from damage.	
6	Remove fuse (2) from bolt (1).		
7	Pull out bolt (1)		
8	Remove fuse (4) from bolt (3).		
9	Pull out bolt (3)		

Start wis Benzworl... << 12:00

wis AR77.37-P-4171QA Remove/install hydraulic cylinder for soft top actuation Normal view validity OFF Page: 4/4

	Close soft top	ⓘ Leave soft top bow and soft top compartment cover in upright position	
4	Cover vehicle in rear area	ⓘ To prevent scratching the paint during assembly work.	
5	Expose hydraulic lines (6) and (7)	ⓘ If necessary, detach tie strap and electric leads to prevent leads from damage.	
6	Remove fuse (2) from bolt (1).		
7	Pull out bolt (1)		
8	Remove fuse (4) from bolt (3).		
9	Pull out bolt (3)		
10	Remove hydraulic cylinder (5)		
11	Remove locking plates (8) of hydraulic lines (6) and (7)		
12	Pull hydraulic lines (6) and (7) out of hydraulic cylinder (5)		
13	Plug hydraulic lines (6) and (7) with plug	ⓘ Use plug from brake caliper vent nipple	
14	Install in reverse order		
15	Check for proper function and leakage		

Start wis Benzworl... << 12:01