


Model 166, 172, 190, 197, 201, 204, 205 (except 205.012/013/047/053/054/147/212/213/247/253), 207, 212, 213 (except 213.016/050/053/054/216), 217, 218, 221, 222 (except 222.004/057/104/157/163), 231, 253 (except 253.354/954), 292

- 1 Cover
- 2 Bracket
- 3 Brake pedal
- 4 Stop lamp switch

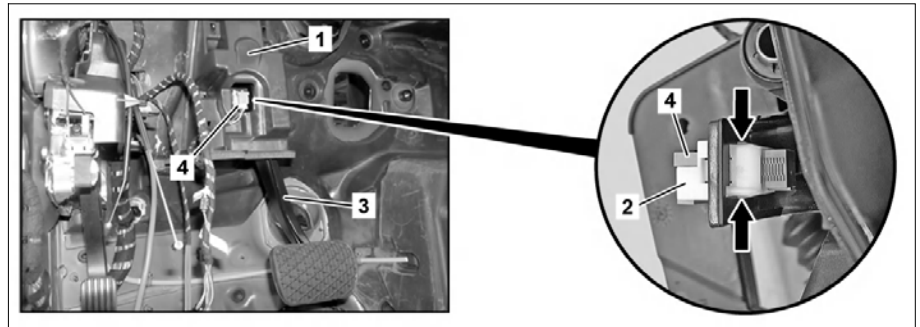

P42.10-3093-04

| | Notes on safety-relevant components | | AH00.00-Z-0019-01A |
|----|---|---|---|
| | Remove | | |
| 1 | Remove cover below instrument panel on driver's side. | Model 166, 172, 190, 197, 201, 204, 205 (except 205.012/013/047/053/054/147/212/213/247/253), 207, 212, 213 (except 213.016/050/053/054/216), 217, 218, 221, 222 (except 222.004/057/104/157/163), 231, 253 (except 253.354/954), 292 Model 221.0/1 Model 166, 292 Model 217, 222.0 (except 222.004/057), 222.1 (except 222.104/157/163), 222.9 Model 231 Model 205 (except 205.012/013/047/053/054/147/212/213/247/253) Model 253 (except 253.354/954) Model 213 (except 213.016/050/053/054/216) Model 190, 197 | AR68.10-P-1500SX AR68.10-P-1500GQ AR68.10-P-1500LF AR68.10-P-1500RK AR68.10-P-1500LW AR68.10-P-1501LWE AR68.10-P-1501RQ |
| 2 | Disconnect electrical connector from brake light switch (4). | | |
| 3 | Remove cover (1). | | |
| 4 | Pull out brake light switch (4). | | |
| 5 | Squeeze catches (arrows) together and detach bracket (2). | | |
| | Install | | |
| 6 | Fully depress brake pedal (3) and insert brake light switch (4) with bracket (2). | | |
| 7 | Fully depress brake light switch (4). | | |
| 8 | Release brake pedal (3) and pull back. | | |
| 9 | Install cover (1). | | |
| 10 | Connect electrical connector to brake light switch (4). | | |
| 11 | Install cover below instrument panel on driver's side. | Model 166, 172, 190, 197, 201, 204, 205 (except 205.012/013/047/053/054/147/212/213/247/253), 207, 212, 213 (except 213.016/050/053/054/216), 217, 218, 221, 222 (except 222.004/057/104/157/163), 231, 253 (except 253.354/954), 292 Model 221.0/1 Model 166, 292 Model 217, 222.0 (except 222.004/057), 222.1 (except 222.104/157/163), 222.9 Model 231 Model 205 (except 205.012/013/047/053/054/147/212/213/247/253) Model 253 (except 253.354/954) Model 213 (except 213.016/050/053/054/216) | AR68.10-P-1500SX AR68.10-P-1500GQ AR68.10-P-1500LF AR68.10-P-1500RK AR68.10-P-1500LW AR68.10-P-1501LWE |

