


Model 218


Shown up to model year 2015 except CODE 518 (Media Interface)

- 1 Center console
- 3 Armrest
- 6 Support plate
- X39/45 Electrical connector for AUX connection (up to model year 2015)
- X58/25 Center console socket (up to model year 2015)

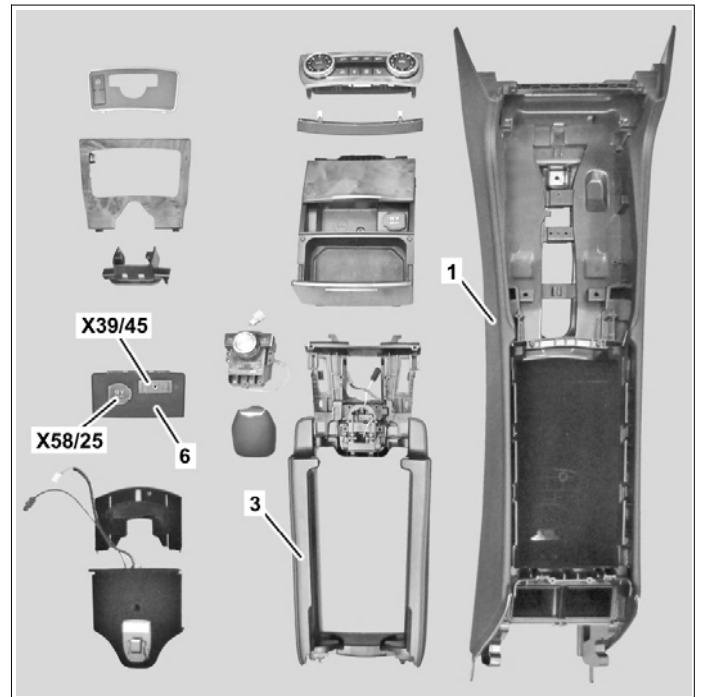

P68.20-4386-12


- 1 Center console
- 2 Bolts
- 3 Armrest
- 4 Bolts
- 5 Electrical connectors

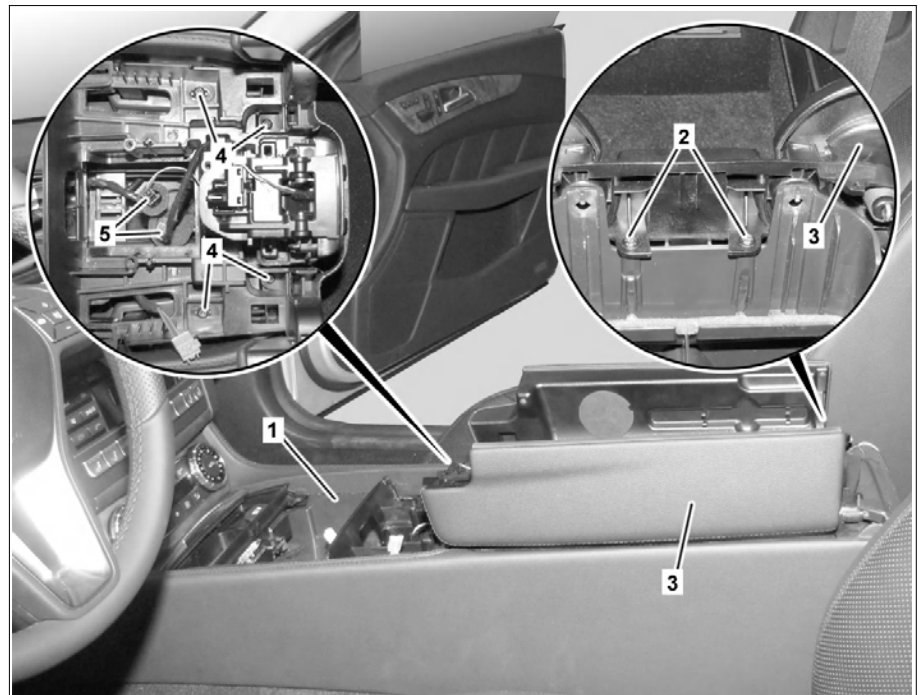

P68.20-4385-06

**Shown up to model year 2015**


- 6 Support plate
- X18/70 Electrical connector for Media Interface (up to model year 2015 with code 518 (Media Interface) front center console)
- X39/45 Electrical connector for AUX connection (up to model year 2015 except code 518 (Media Interface) front center console)
- X58/25 Center console socket (up to model year 2015)
- X115 USB electrical connector

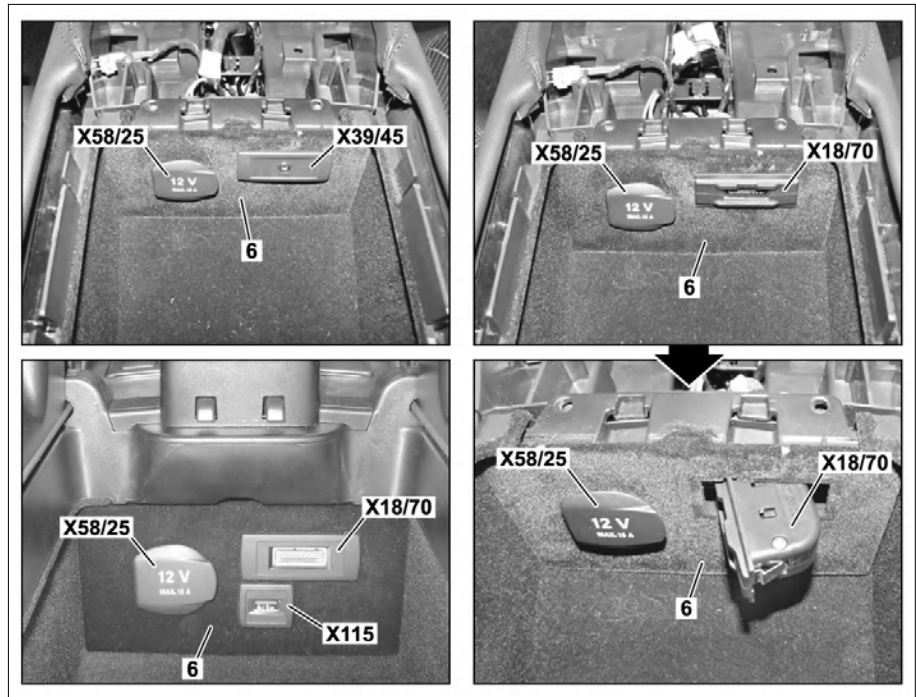

P68.20-4387-06

**Up to model year 2015**


- 8 Cover
- 9 Pliers
- 10 Plug housing
- 11 Roll pin
- X58/25 Center console socket

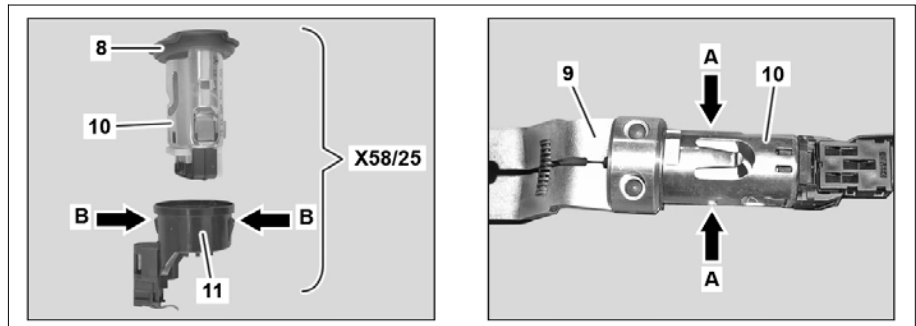

P68.20-4393-04

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Disassemble/assemble</b>		
1	Switch off ignition and remove transmitter key or KEYLESS-GO stop/start button		
2	Remove rear center console	Model 218.3	AR68.20-P-2020EL
3	Remove rear air vent	Model 218.9	AR83.10-P-4800EL AR68.20-P-2420EL
4	Remove stowage compartment or ashtray housing		AR82.70-P-8919EW
5	Remove Bluetooth module in armrest (3)	Model 218 with code 386 (Comfort telephony)	AR68.20-P-2350EW
6	Remove center cover on center console (1)	Model 218 Model 218 (except 218.374/375/376/392/974/975/976/992)	
7	Unscrew bolts (2) at rear on armrest (3)		
8	Unscrew bolts (4) at front on armrest (3)		
9	Disconnect electrical connections (5)		
10	Remove armrest (3)		
11	Disconnect electrical connector from center console socket (X58/25)	Model 218 up to model year 2015	
12	Disconnect electrical connector from USB electrical connector (X115)	Model 218 up to model year 2015 The USB electrical connector (X115) remains in the mounting plate (6).	

13.1	Disconnect electrical connector from AUX socket electrical connector (X39/45)	Model 218 up to model year 2015 except code 518 (Media interface)Center console, front <b>i</b> The electrical connector for the AUX connection (X39/45) remains in the mounting plate (6).	
13.2	Unclip Media Interface electrical connector (X18/70) and guide toward front through opening in mounting plate (6)	Model 218 up to model year 2015 with code 518 (Media interface)Center console, front	
14.1	Unclip mounting plate (6) and remove	Model 218 up to model year 2015	
14.2	Unclip mounting plate (6), remove electrical connector on USB electrical connector (X115) and remove mounting plate (6)	Model 218 as of model year 2015	
15	Open cover (8) on center console socket (X58/25) and pull connector housing (10) approx. 5 cm out of spring pin (11) using pliers (9).	Model 218 up to model year 2015 When replacing mounting plate (6) or center console socket (X58/25). <b>i</b> The pins on the <b>9</b> pliers (9) should reach into the cutout of the connector housing (10) (arrows A). <b>9</b> Pliers	*169589003700
16	Press back catch hooks (arrows B) and remove center console socket (X58/25) together with connector housing (10) and spring pin (11).	Model 218 up to model year 2015 When replacing mounting plate (6) or center console socket (X58/25). <b>i</b> It is not possible to disassemble the center console socket (X58/25). <b>i</b> <b>Installation:</b> Check for correct installation position of spring pin (11).	
17	Unclip USB electrical connector (X115)from mounting plate (6) and remove	When replacing mounting plate (6) or USB connection electrical connector (X115).	
18	Unclip AUX connection electrical connector (X39/45) from mounting plate (6) and remove	Model 218 up to model year 2015 When replacing mounting plate (6) or AUX connection electrical connector (X39/45).	
19	Remove center console (1)	When replacing center console (1).	AR68.20-P-2000EL
20	Remove blower motor in rear	Model 218 with code 581 (Automatic air conditioning) When replacing center console (1).	AR83.30-P-5565EW
21	Transfer wiring harnesses and fasten	When replacing center console (1). <b>i</b> Ensure that wiring harnesses are routed and fastened without chafing.	
22	Assemble in the reverse order		

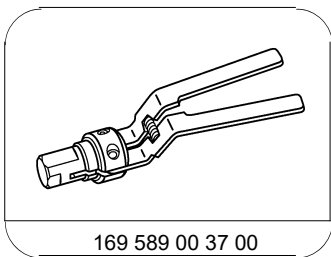

169 589 00 37 00

Pliers