



MODEL 218.3

Shown on left rear seat cushion (1)

- 1 Rear seat cushion
- 2 Strut
- 3 Coupling (with code (872) Electric seat heater for left and right rear seat)
- 4 Connector (with code (872) Electric seat heater for left and right rear seat)
- 5 Hook

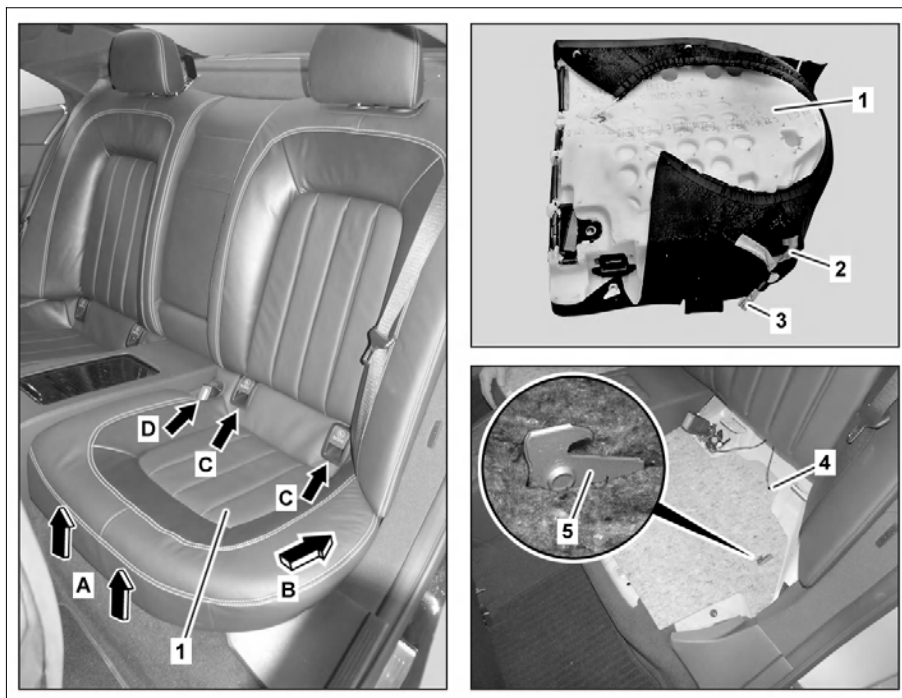

P91.12-3543-06

	Remove/install		
1	Move corresponding front seat forwards		
2	Pull rear seat cushion (1) upwards (arrows A) and out of the guide sleeves		
3	Push rear seat cushion (1) on outer side to rear (arrow B) and lift	<p><b>i</b> Unhook the strut (2) in the rear seat cushion (1) from the hook (5).</p>	
4	Detach connector (4) from coupling (3)	<p>For vehicles with code (872) Electrically heated left and right rear seats</p>	
5	Remove rear seat cushion (1)	<p><b>i</b> <b>Installation:</b> Insert rear seat cushion (1) into ISOFix child seat attachment (arrows C) and seat belt buckle for rear seat (arrow D)</p>	
6	Install in the reverse order		