


Model	204.0 (except 204.077), 204.2 (except 204.277), 204.9
Model	211.0, 211.2/6 as of 8/15/07
Model	212
Model	218
Model	219.3 as of 8/14/07
Model	463.202/236/237 up to model year 2013
Model	463.222/270/271/303/340/341 up to model year 2013
Model	463.242 as of model year 2013 up to model year 2019
Model	463.306/336 up to model year 2013
Model	463.346 up to model year 2013 /FACELIFT 2012

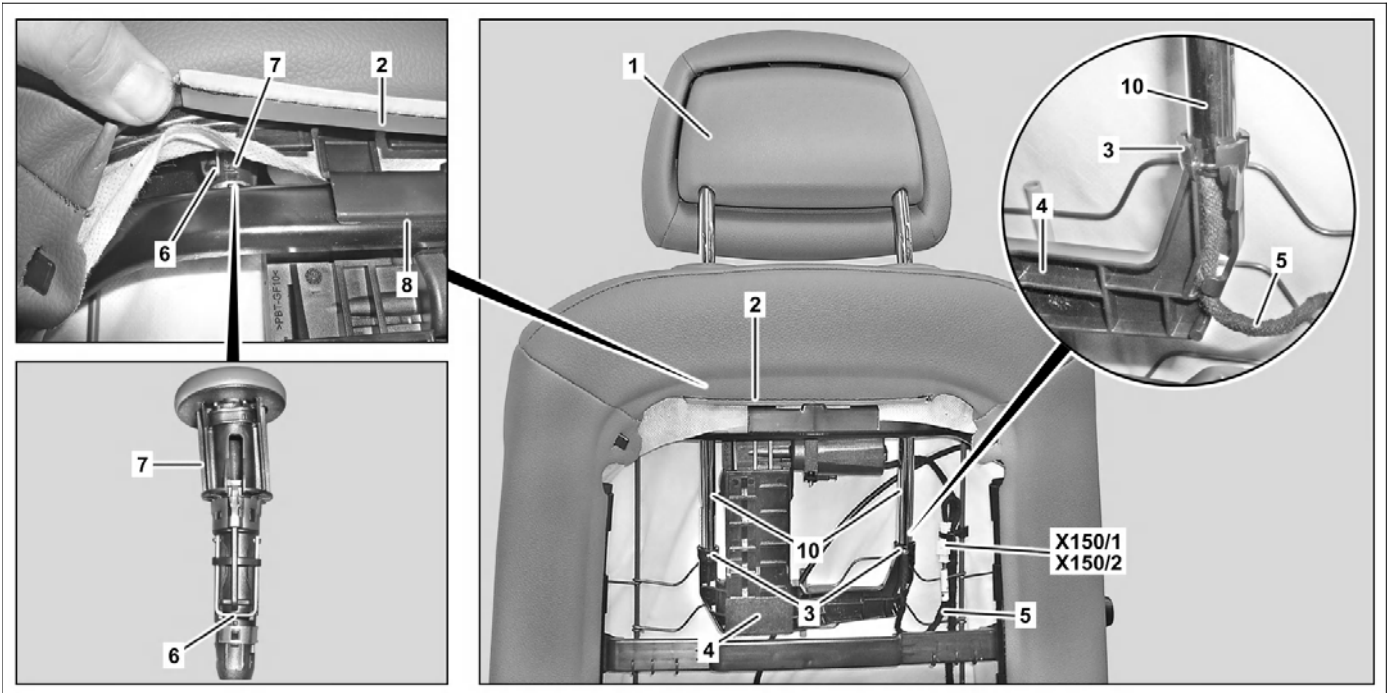

P91.16-2672-09

Shown on model 204.052, left front seat with code (275) Memory package (Driver seat, steering column, mirrors)

1	Head restraint	7	Head restraint guide
2	Securing strap	8	Backrest frame
3	Supports	10	Head rest supports
4	Bracket	X150/1	Driver NECK-PRO head restraint electrical connector
5	Electrical line	X150/2	Front passenger NECK-PRO head restraint electrical connector
6	Spring		

Caution	<b>Risk of injury</b> caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1	Switch off ignition		
2	Remove transmitter key from electronic ignition switch control unit	Only on vehicles with code (889) KEYLESS-GO	

		<p><b>i</b> Press KEYLESS-GO start and stop button repeatedly until ignition is switched off. Remove the transmitter key from the vehicle and store it in a location beyond its transmission range (at least 2 meters).</p>	
3	Disconnect battery ground line	<p>Model 463.236 up to model year 2013 with code 979 (Special protection MB Guard) with code E26 (Auxiliary battery) with code ZS6 (Special protection version FB6) Model 463.236 up to model year 2013 with code 979 (Special protection MB Guard) with code E26 (Auxiliary battery) with code ZS7 (Special protection version FB7) Model 463.242 as of model year 2013 up to model year 2015 with code E26 (Auxiliary battery) Model 463.222/270/271/303/340/341 up to model year 2013 Model 463.306/336 up to model year 2013 Model 219.3 as of 8/14/07 Model 211.2 as of 8/15/07 Model 211.0, 211.6 as of 8/15/07 Model 212 Model 218 Model 204.0 (except 204.077), 204.2 (except 204.277), 204.9</p>	<p>AR54.10-P-0003PM         AR54.10-P-0003G  AR54.10-P-0003TX AR54.10-P-0003TA AR54.10-P-0003T <b>AR54.10-P-0003EW</b> AR54.10-P-0003CW</p>
4	Remove seat-back lining from left or right backrest	<p>Model 463.202 up to model year 2010 Model 463.222/270/271/303/340/341 up to model year 2010 Model 463.242 as of model year 2013 up to model year 2019 Model 219.3 as of 8/14/07 Model 463.202/236/237 as of model year 2010 up to model year 2013 Model 463.222/270/271/303/340/341 as of model year 2010 up to model year 2013 Model 463.306/336 up to model year 2013 Model 463.346 up to model year 2013 Model 204.0 (except 204.077), 204.2 (except 204.277), 204.9 Model 212 Model 218 Model 211.0, 211.2/6 as of 8/15/07 Driver seat Model 211.0, 211.2/6 as of 8/15/07 except code 842 (Folding front passenger seat) Passenger seat</p>	<p>AR91.10-P-1910GN   AR91.10-P-1910GGG  AR91.10-P-1910TX AR91.10-P-1910GP   <b>AR91.10-P-1910CW</b>   AR91.10-P-1910TB</p>
5	Adjust backrest toward rear	<p><b>i</b> Adjust backrest toward rear until head restraint (1) can be removed from backrest.</p>	
6	Disconnect driver NECK-PRO head restraint electrical connector (X150/1) or front passenger NECK-PRO head restraint electrical connector (X150/2)		
7	Unclip head restraint (1) from left and right mount (3) of bracket (4)	<p><b>i</b> <b>Installation:</b> Ensure head restraint supports (10) are properly seated in mounts (3) of bracket (4).</p>	
8	Route electrical line (5) of head restraint (1) through right mount (3)	<p><b>i</b> Observe routing of electrical line (5).</p>	
9	Unhook securing strap (2) of cover from backrest frame (8) and pull cover upwards until spring (6) of head restraint guide (7) is accessible	<p><b>w</b> Do not pull cover too far upward. Otherwise cover can tear at seam.</p>	
10	Release head restraint (1) at left head restraint guide (7) using adjustment button		
11.1	Lift spring (6) of left head restraint guide (7), pull out head restraint (1) and route electrical line (5) through the right head restraint guide (7)	<p>Model 204.0 (except 204.077), 204.2 (except 204.277), 204.9 Model 212, 218</p>	

11.2	Lift spring (6) of left head restraint guide (7) and remove head restraint (1)	Model 463.202/236/237 up to model year 2013 Model 463.222/270/271/303/340/341 up to model year 2013 Model 463.242 as of model year 2013 up to model year 2019 Model 463.306/336 up to model year 2013 Model 463.346 up to model year 2013	
12	Remove head restraint (1)		
13	Install in the reverse order		