




P68.10-3273-07

1 Center air outlet

E10/1 Center air outlet illumination

☒ ☒	Remove/Install		
1	Pull center air outlet (1) out with pulling hook on left and right (arrows A)	i Installation: Ensure that center air outlet (1) arrests properly. ☒	*140589023300
2	Remove center air outlet (1) from instrument panel until center air outlet illumination (E10/1) is accessible		
3	Press against housing (arrow B) and unclip center air outlet illumination (E10/1)	i Installation: Ensure that center air outlet illumination (E10/1) is positioned correctly	
4	Remove center air outlet illumination (E10/1) from center air outlet (1) and allow to hang on electrical line		
5	Remove center air outlet (1)		
6	Install in the reverse order		

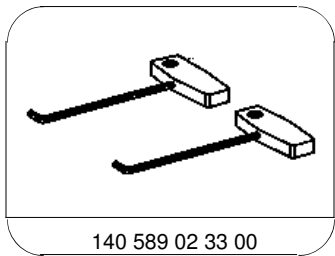

140 589 02 33 00

Pulling hook