











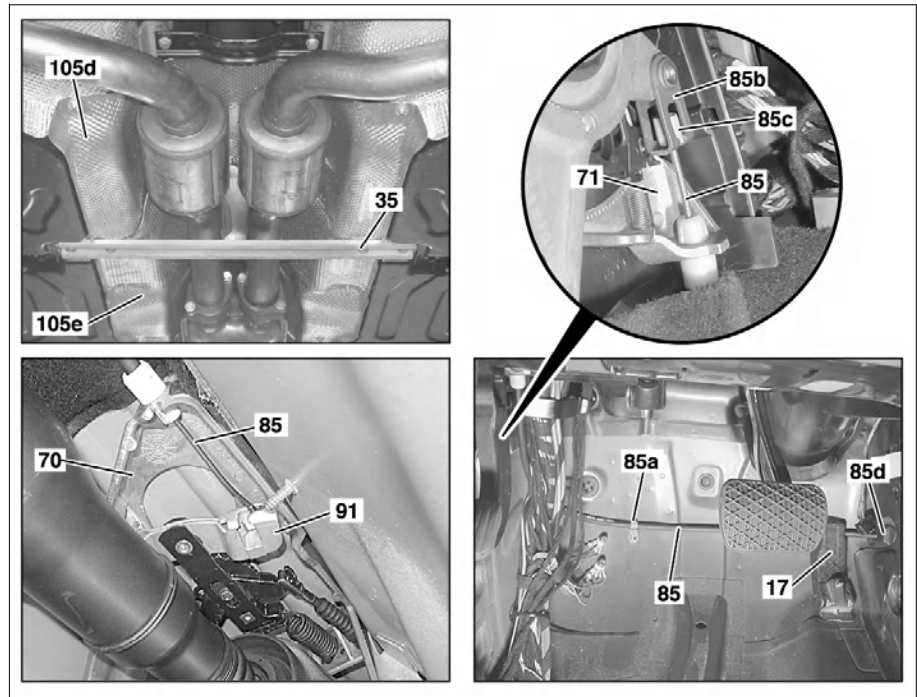


MODEL 219

- 17 Supporting wedge
 35 Crossmember
 70 Bridge
 71 Pedal assembly
 85 Brake cable
 85a Retaining clip
 85b Tensioning shackle
 85c Rubber ring
 85d Rubber grommet
 91 Cable slack adjuster
 105d Heat shield
 105e Heat shield




P42.20-2228-06

 	Remove/install		
1	Raise vehicle with lifting platform		AR00.60-P-1000TX
2	Remove crossmember (35)		*BA62.30-P-1001-01C
3	Loosen and move heat shields (105d, 105e) or remove them	Depending on accessibility	AR49.00-P-1000-01TX
4	Unhook brake cable (85) from cable slack adjuster (91).	<p> To do this, pre-tension automatic cable slack adjuster (91):</p> <p style="text-align: center;">↓</p> <p>Preload automatic slack adjuster.</p> <p> Installation: To attach brake cable (85):</p> <p style="text-align: center;">↓</p> <p>Once again pre-tension automatic cable slack adjuster.</p> <p> Installation: After attaching brake cable (85):</p> <p style="text-align: center;">↓</p> <p>Relieve load on automatic slack adjuster.</p>	<p>AR42.20-P-0520-01TX</p> <p>AR42.20-P-0520-01TX</p> <p>AR42.20-P-0520-02TX</p>
5	Remove retaining clips (85a) from propeller shaft tunnel	 Installation: Replace retaining clips (85a).	
6	Unclip brake cable (85) from bridge (70)		*129589116300
7	Remove front left floor covering		
8	Remove retaining clips (85a) in footwell	 Installation: Install new retaining clips (85a).	
9	Remove supporting wedge (17)		
10	Unhook brake cable (85) from tensioning shackle (85b).	 Installation: Pay attention to the correct position of the rubber ring (85c) in the tensioning shackle (85b).	
11	Unclip brake cable (85) from pedal assembly (71)		
12	Lever rubber grommet (85d) out of propeller shaft tunnel and pull front brake cable (85) into passenger compartment.	 Installation: Working from within the passenger compartment, push the brake cable (85) to the outside.	
13	Install in the reverse order		
	Checking		
14	Check pedal travel at parking brake pedal; adjust parking brake if necessary		AR42.20-P-0540TX

 Crossmember and front reinforcement

Number	Designation	Model 219
BA62.30-P-1001-01C	Bolt, crossmember to body	Nm 25

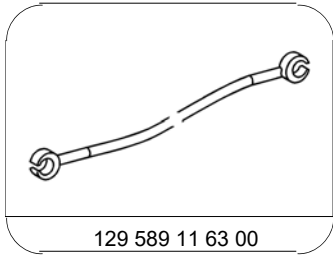

129 589 11 63 00

Snap-release tool