

P42.20-2229-09

- 35 Crossmember
- 71 Pedal assembly
- 72 Bolt
- 75 Parking brake pedal
- 76 Cover

- 77 Cover
- 79 Unlocking cable
- 79a Tensioning shackle
- 85 Brake cable
- 85a Tensioning shackle

- 85b Rubber ring
- 91 Cable slack adjuster
- 105d Heat shield
- 105e Heat shield

- S12 Parking brake indicator switch

🔧 🔩	Remove/install		
⚠	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Raise vehicle with lifting platform		AR00.60-P-1000TX
2	Remove crossmember (35)	Nm	*BA62.30-P-1001-01C
3	Loosen and move heat shields (105d, 105e) or remove them	Depending on accessibility	AR49.00-P-1000-01TX
4	Unhook brake cable (85) from cable slack adjuster (91).	<p>i To do this, pre-tension automatic cable slack adjuster (91):</p> <p style="text-align: center;">↓</p> <p>Preload automatic slack adjuster.</p> <p>i Installation: To attach brake cable (85):</p> <p style="text-align: center;">↓</p> <p>Pre-tension automatic cable slack adjuster (91) again.</p> <p>i Installation: After attaching brake cable (85):</p> <p style="text-align: center;">↓</p> <p>Relieve load on automatic slack adjuster.</p>	<p>AR42.20-P-0520-01TX</p> <p>AR42.20-P-0520-01TX</p> <p>AR42.20-P-0520-02TX</p> <p>AR68.10-P-1500TX</p>
5	Remove left cover below instrument panel		
6	Remove side paneling in left front footwell		
7	Detach front cover (76) of pedal assembly (71)		
8	Unlock and disconnect electrical connector on parking brake indicator switch (S12)		
9	Remove bolt (72) and take off pedal assembly (71).	Nm	*BA42.20-P-1001-01G
10	Remove cover (77) of pedal assembly (71).		
11	Unhook brake cable (85) from tensioning shackle (85a).	i Installation: Pay attention to the correct position of the rubber ring (85b) in the tensioning shackle (85a).	
12	Unclip brake cable (85) from pedal assembly (71)	🔗	*129589116300
13	Detach unlocking cable (79) from tensioning shackle (79a)		


14	Unclip unlocking cable (79) from pedal assembly (71) with tool for unlocking cable Tool for releasing parking brake control cable		WF58.50-P-4220-01A
15	Install in the reverse order		
	Checking		
16	Check pedal travel at parking brake pedal (75); adjust parking brake if necessary		AR42.20-P-0540TX

Nm Crossmember and front reinforcement

Number	Designation		Model 219
BA62.30-P-1001-01C	Bolt, crossmember to body	Nm	25

Nm Parking brake

Number	Designation		Model 219
BA42.20-P-1001-01G	Bolt, foot-operated parking brake pedal assembly at front wall pillar	Nm	12

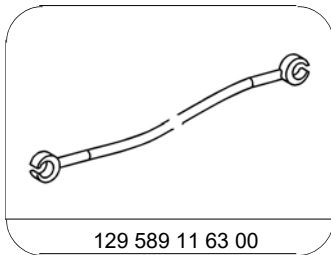

129 589 11 63 00

Snap-release tool