


P88.80-2100-09

- 1 Longitudinal member paneling
- 2 Expansion clip
- 3 Screw

- 4 Expansion clip
- 5 Expansion clip
- 6 Seal

- 7 Clip
- 8 Seal
- 9 Gasket

	Remove/Install		
1	Remove expansion clips (2)	i Installation: Replace damaged expansion clips (2).	
2	Unscrew bolt (3) from rear fender liner		
3	Remove expansion clips (4) from rear fender liner	i Installation: Replace damaged expansion clips (4).	
4	Remove expansion clips (5) from front fender liner	i Installation: Replace damaged expansion clips (5).	
5	Open front and rear doors		
6	Unclip longitudinal member paneling (1) from longitudinal member with mounting wedge	 i Installation: Replace damaged clips (7) on longitudinal member paneling (1) Ensure that longitudinal member paneling (1) is seated correctly on all mounting points on longitudinal member	*110589035900
7.1	Transfer seal (6, 8)	Only when replacing longitudinal member paneling (1).	
8	Install in the reverse order		

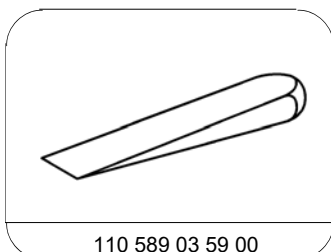

110 589 03 59 00

Mounting wedge