


Illustrated on model 209.4

A, D Seals

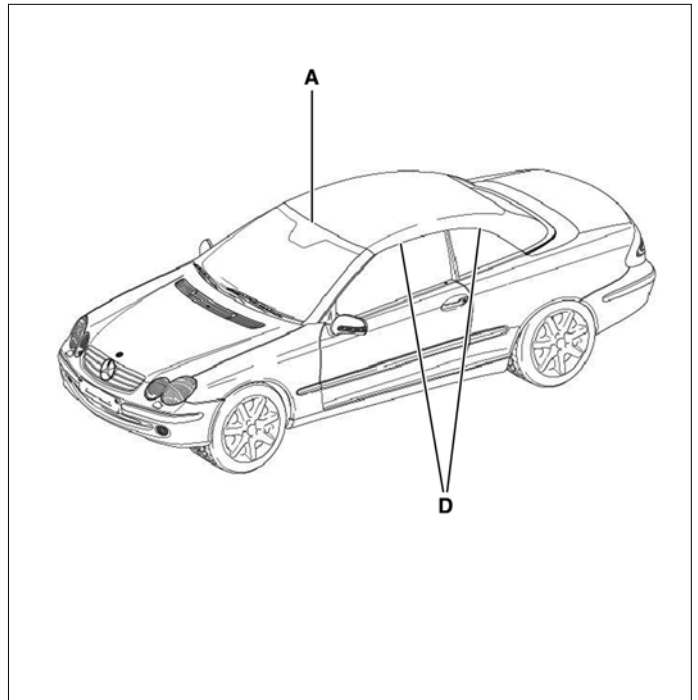

P77.30-2308-12

	Clean		
Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases, even sever extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
1	Open side windows		
2	Open soft top	i Only open the soft top until seal (A) of the windshield frame is accessible.	
3	Clean seals (A, D) at contact surfaces and dry		
4	Apply lubricant to seals (A, D)	i Only apply lubricant at the contact surfaces and allow it to work for 20 minutes. i Apply the lubricant sparingly. One bottle (30 ml) is enough for approx. 10 vehicles. Special sliding compound	*BR00.45-Z-1055-06A
5	Completely open and close soft top several times		
6	Remove excess lubricant		

Repair materials

Number	Designation	Order number
BR00.45-Z-1055-06A	Special sliding compound	A 000 989 36 60