
AR91.18-P-1820EC MODEL 204.3, 207

Cover 1 2 Back shell

в в С D 1 2 В C D С в Α Α А Ď

P91.18-2266-06

XX	Remove/install		
1	Remove back shell (2) from the front seat backrest		AR91.10-P-1915EC
2	Unhook cover (1) at hooks (arrows A)		
3	Unclip edge stripping in areas "B"		
4		 Carefully unhook clips (arrows C) as otherwise they may break. Installation: Turn clips (arrows C) in installation position and guide through padding by hand. 	
5		 Carefully unhook clips in area "D" as otherwise they may break. Removal and installation tool 	*116589016200
6	Slip cover (1) over back shell (2) and remove		
7	Install in the reverse order		

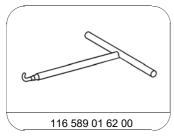

Removal and installation tool