


**Model 238**

K40/6 Driver-side fuse and relay module

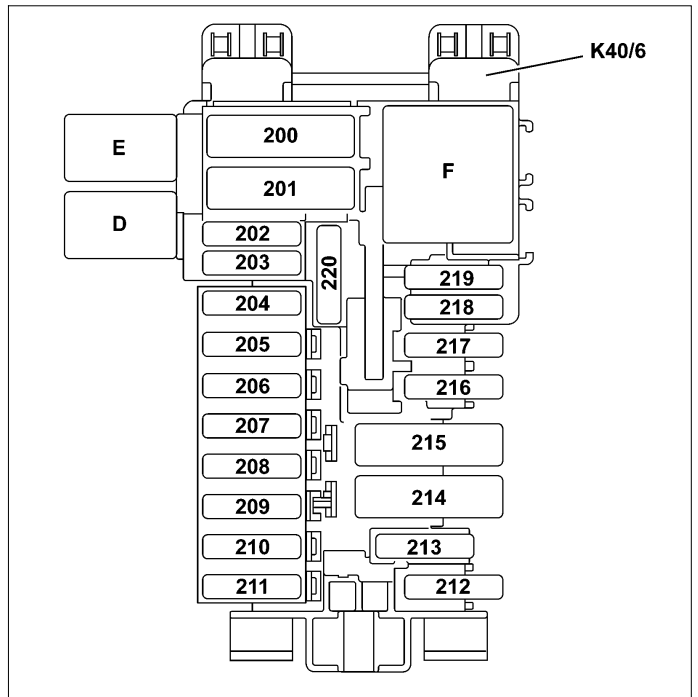

P54.15-3427-12

Slot	Fuse	Circuit	Line ID (line fused)	Fused function	Rating in amperes (A)
200	Electrical fuse 200 (K40/6f200)	30t	4.0 RD	Front SAM control unit (N10/6)	40
201	Electrical fuse 201 (K40/6f201)	30t	4.0 RDWH	Front SAM control unit (N10/6)	40
202	Electrical fuse 202 (K40/6f202)	30t	0.5 RDYE	<b>Engine 264 with code B01 (48V technology):</b> Starter alternator (M1/10)	5
			0.5 RDBK	<b>Engine 256:</b> Starter-alternator control unit (N129)	
203	Electrical fuse 203 (K40/6f203)	30t	2.5 RD	Left front door control unit (N69/1)	30
204	Electrical fuse 204 (K40/6f204)	30t	0.5 BKRD	<b>With code 498 (Japan version):</b> Dedicated Short-Range Communications control unit (A50/6) via cockpit fuse block (F11/1)	5
205	Electrical fuse 205 (K40/6f205)	30t	0.5 RDBU	Steering column tube module control unit (N80)	7,5
206	Electrical fuse 206 (K40/6f206)	30t	0.35 RDYE (0.5 RDYE)	Analog clock (A70/1)	5
			0.5 RD (0.5 RDYE)	<b>with code 896 (Vehicle access and drive authorization over mobile phone) or code 897 (Wireless mobile phone charging) or with code 899 (Multifunction telephony):</b> USB port on center console at front (X115/5)	
207	Electrical fuse 207 (K40/6f207)	30t	1.5 RDVT	<b>Transmission 716:</b> Electric steering lock control unit (N26/5)	20
208	Electrical fuse 208 (K40/6f208)	30t	0.5 RD	Audio/COMAND display (A40/8)	7,5
				<b>With code 464 (Full display digital instrument cluster):</b> Digital instrument cluster full display fan motor (M4/12)	
209	Electrical fuse 209 (K40/6f209)	30t	0.5 RDWH	Upper control panel control unit (N72/1) Climate control operating unit (N58/1)	5
210	Electrical fuse 210 (K40/6f210)	30t	1.5 RDBK	Climate control control unit (N22/1)	15
211	Electrical fuse 211 (K40/6f211)	30t	1.0 RD	<b>With code 443 (Steering wheel heater):</b> Steering column tube module control unit (N80)	15
212	Electrical fuse 212 (K40/6f212)	-	-	Spare	-
213	Electrical fuse 213 (K40/6f213)	30t	4.0 RDGN	Left front reversible emergency tensioning retractor (A76) Right front reversible emergency tensioning retractor (A76/1)	30

214...220	Electrical fuse 214 (K40/6f214) - Electrical fuse 220 (K40/6f220)	-	-	Spare	-
-----------	--	---	---	-------	---

Relays	Designation
D	Backup relay
E	Backup relay
F	Backup relay