


Model 205.0/1/3/4
 Model 213.0/1
 Model 238

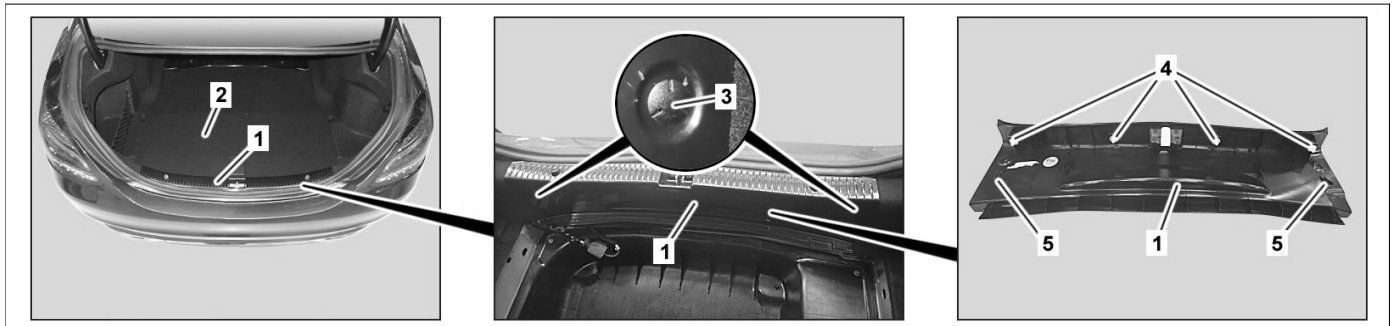


P68.30-3732-07

Shown on model 205.0


- 1 Rear center section paneling
- 2 Trunk floor
- 3 Mounting clip
- 4 Retaining clips
- 5 Retaining tab

	Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
		Remove/install		
1		Lift trunk floor (2).		
2		Remove retaining clips (3).	Model 213.016/053/054/153 Four retaining clips (3) are installed.	
			Dismantling tool	*000589956300
3		Remove rear-end center-section trim (1) from retaining clips (4).	Long wedge	*115589035900
4		Remove rear-end center-section trim (1) upward.	Installation: Insert rear center section paneling (1) into body with retaining tabs (5).	
5		Install in the reverse order.		

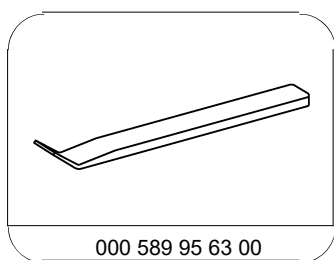

000 589 95 63 00

Dismantling tool

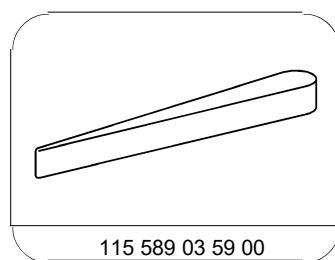

115 589 03 59 00

Long wedge