

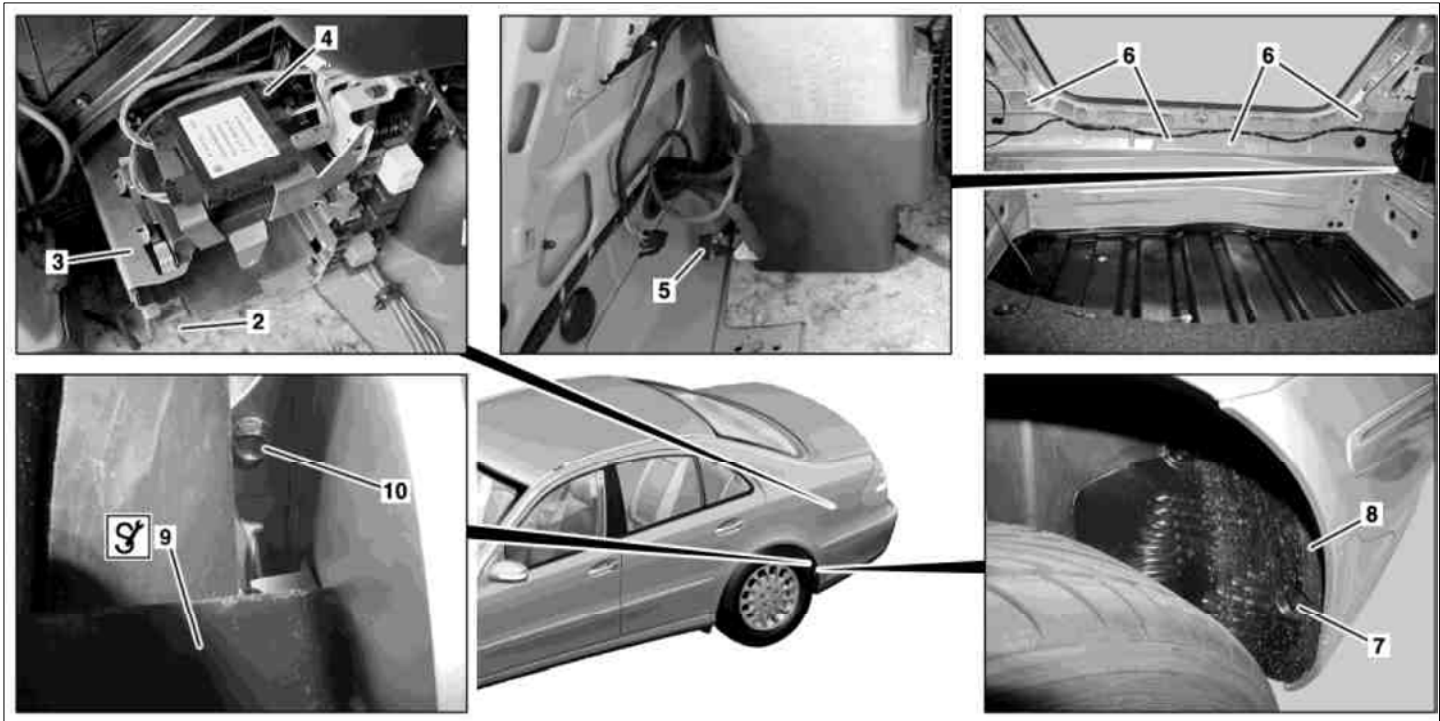


MODEL 211.0



P88.20-2252-09

- | | | |
|---|---|---|
| <p>2 Bolt
(with code (220a) Parktronic system (PTS)
or with code (527) COMAND APS (with navigation)
or with code (530) COMAND APS USA (with navigation)
or with code (860) TV tuner
or with code (889) Keyless Go
or with code (529) HIGH Class Japan
with code (404a) Left multicontour seat
or with code (529) HIGH Class Japan
with code (433) Left dynamic seat, incl. multicontour seat
or with code (529) HIGH Class Japan
with code (475) Tire pressure monitor
or with code (529) HIGH Class Japan
with code (550) Trailer hitch)</p> | <p>3 Control module bracket
(with code (220a) Parktronic system (PTS)
or with code (527) COMAND APS (with navigation)
or with code (530) COMAND APS USA (with navigation)
or with code (860) TV tuner
or with code (889) Keyless Go
or with code (529) HIGH Class Japan
with code (404a) Left multicontour seat
or with code (529) HIGH Class Japan
with code (433) Left dynamic seat, incl. multicontour seat
or with code (529) HIGH Class Japan
with code (475) Tire pressure monitor
or with code (529) HIGH Class Japan
with code (550) Trailer hitch)</p> | <p>4 Electrical connector
(with code (889) Keyless Go)
5 Electrical connector
(with code (220a) Parktronic system (PTS))
6 Nuts
7 Nut
8 Fender liner, left
9  Mounting wedge
10 Bolt</p> |
|---|---|---|

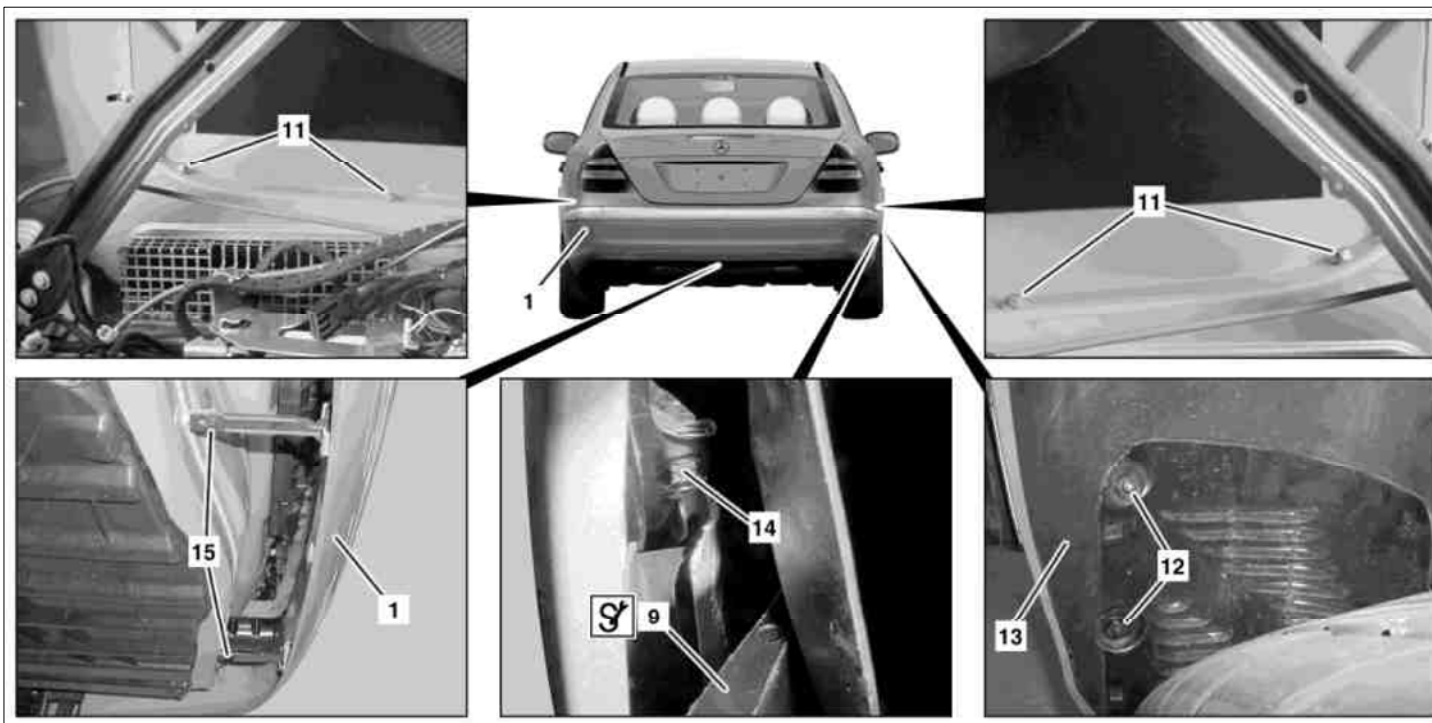

P88.20-2253-09

1 Rear bumper

12 Nuts

14 Bolt

9  Mounting wedge

13 Right fender liner

15 Bolts



11 Bolts

1 Rear bumper


16 Wiring harness
(with code (220a) Parktronic system
(PTS) or with code (889) Keyless Go)






17 Guide


18 Bracket

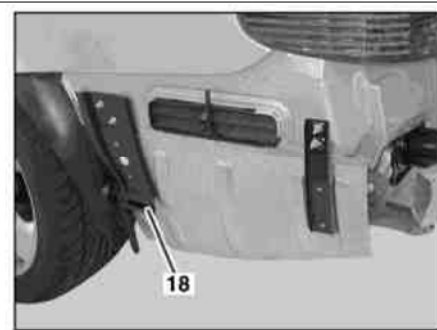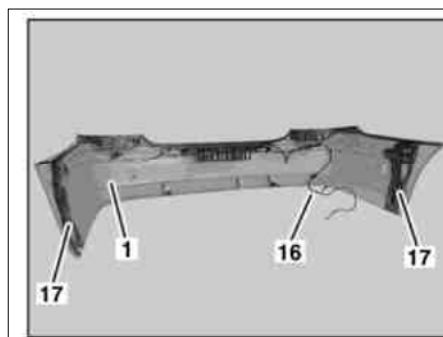

P88.20-2254-04

	Remove/Install		
1	Remove side paneling in left and right sides of trunk	On vehicles without code (287a)Through-loading facility On vehicles with code (287a)Through-loading facility	AR68.30-P-4800T AR68.30-P-4800TA
2.1	Unscrew bolt (2) and pivot control unit bracket (3) toward front	Only on vehicles with code (220a) Parktronic system (PTS) or with code (527) COMAND APS (with navigation) or with code (529) HIGH Class Japan and code (433) Left dynamic seat, incl. multicontour seat or with code (529) HIGH Class Japan and code (404a) Left multicontour seat or with code (529) HIGH Class Japan and code (475)Tire pressure monitor or with code (529) HIGH Class Japan and code (550) Trailer hitch or with code (530) COMAND APS USA (with navigation) or with code (860) TV tuner or with code (889) Keyless Go	
3.1	Unplug electrical connectors (4, 5)	Only on vehicles with Code (220a) Parktronic system (PTS) or Code (889) Keyless Go	
4	Unscrew nuts (6)		
5	Remove bolts (11)		
6	Unscrew nut (7)		

7	Loosen left fender liner (8) from fender with mounting wedge (9)	 Until bolt (10) is accessible. 	*110589035900
8	Unscrew bolt (10)		
9	Unscrew nuts (12)		
10	Loosen right fender liner (13) from fender with mounting wedge (9)	 Until bolt (14) is accessible. 	*110589035900
11	Unscrew bolt (14)		
12	Remove bolts (15)		
13	Remove rear bumper (1)	 Installation: Ensure that guides (17) are seated correctly on brackets (18)	
14.1	Move wiring harness (16) through opening in body	Only on vehicles with Code (220a) Parktronic system (PTS) or CODE (889) Keyless Go	
15	Install in the reverse order		

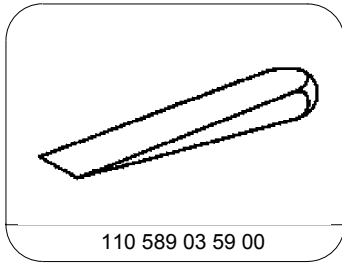

110 589 03 59 00

Mounting wedge