


## MODEL 211.0/ 2/ 6



- 1 Center console cover
- 2 Ashtray
- 3 Shift knob lock
- 4 Shift lever knob with shift lever sleeve
- 5 Gearshift lever
- 6 Electrical connectors

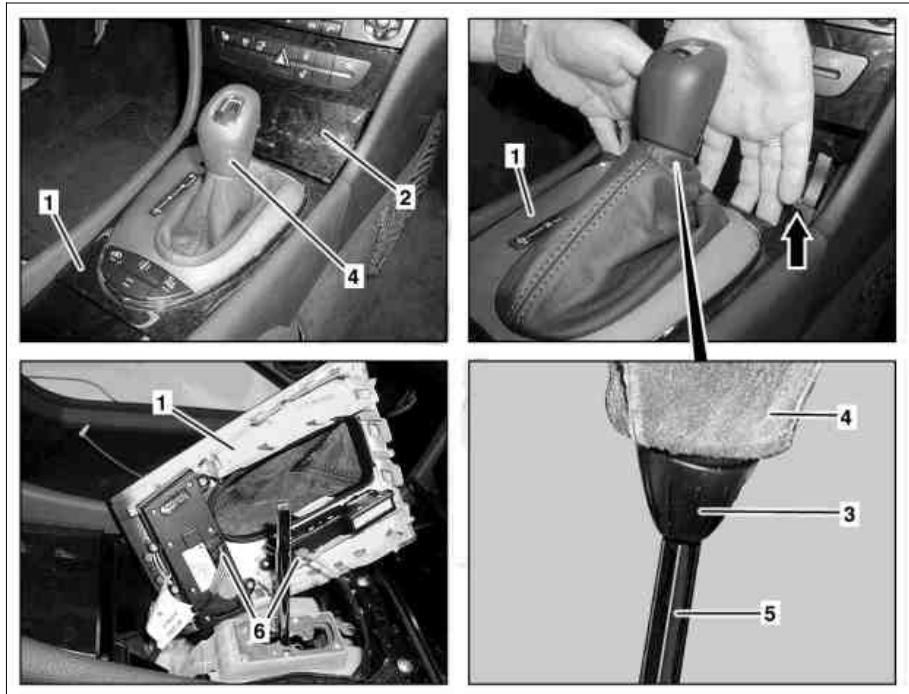

P68.20-2615-06

## Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

	Remove/install		
1	Open ashtray (2) and unclip the center console cover (1) in the direction of the arrow out of the center console		
2	Release shift lever knob arresting mechanism (3) counterclockwise		
3	Detach shift lever knob with shift lever sleeve (4) from gearshift lever (5)		
4.1	Separate electrical connectors (6)	On vehicles with code (489a) Airmatic (semi-active air suspension), (220a) Parktronic system (PTS), (889) Keyless Go, (423a) Automatic 5-speed transmission (NAG), (219a) Distronic (DTR), (228) Stationary heater  Number of electrical connectors (6) according to equipment.	
5	Remove center console cover (1) together with the shift lever knob with shift lever sleeve (4)		
6	Press shift lever knob with shift lever sleeve (4) out of the center console cover (1)		
7	Install in the reverse order		