


MODEL 211.0/ 2/ 6

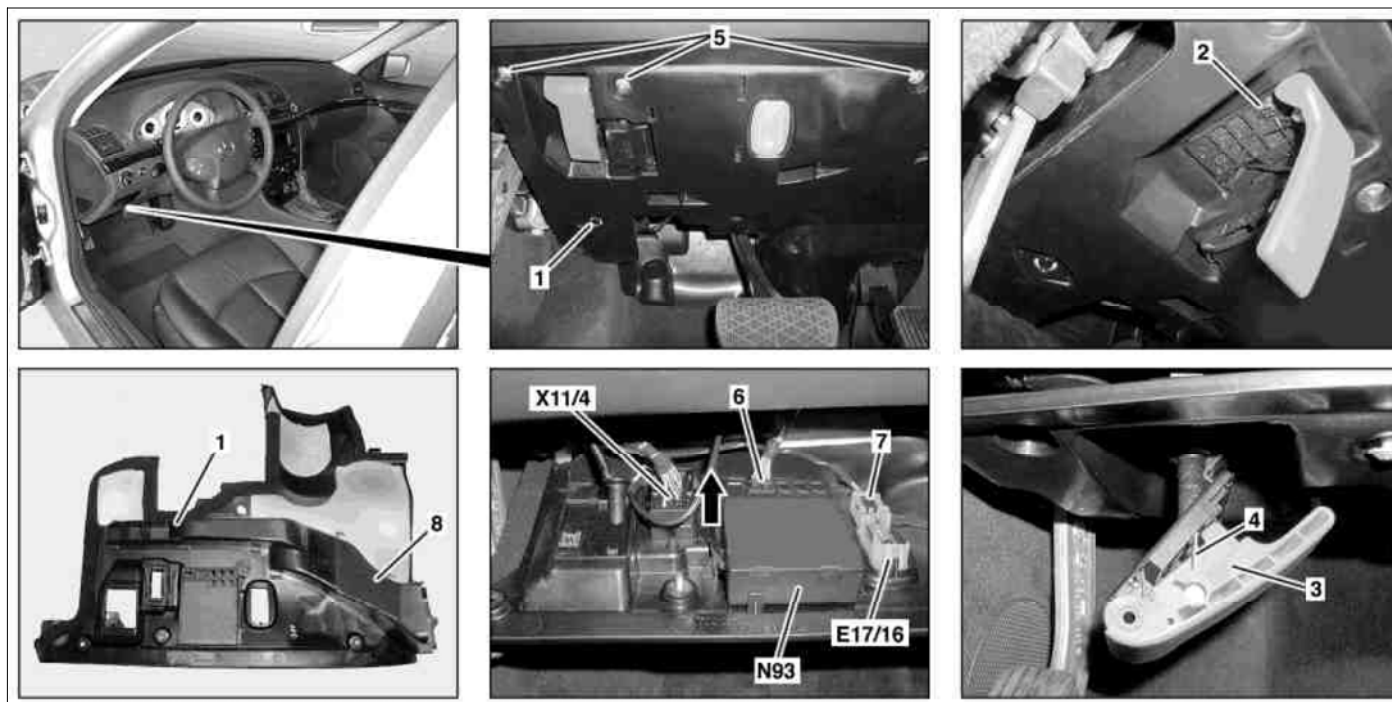

P68.10-2721-09

Shown on model 211.0

- 1 Cover  
2 Bolt  
3 Hood unlocking  
4 Release cable

- 5 Bolts  
6 Electrical connector  
7 Electrical connector  
8 Air duct

- E17/16 Left front footwell lamp  
N93 Central gateway control unit  
X11/4 Data link connector

	Remove/Install		
1	Move driver's seat all the way down		
2	Disconnect battery ground cable	Model 211.0/6 Model 211.2	AR54.10-P-0003T AR54.10-P-0003TA
3	Remove bolt (2)		
4.1	Unclip clip from cover (1)		
5	Pull hood release (3) out of the cover (1), detach release cable (4) and remove hood release (3).		
6	Unscrew bolts (5)		
7	Fold cover (1) downward	<b>Installation:</b> Ensure correct connection of the air duct (8).	
8	Slide lock on data link connector (X11/4) in direction of arrow and remove data link connector (X11/4) from cover (1)		
9	Disconnect electrical connector (6) at the central gateway control unit (N93)		
10	Disconnect electrical connector (7) at the left front footwell lamp (E17/16)		
11	Remove cover (1) out of the footwell		
12	Install in the reverse order		