



36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54

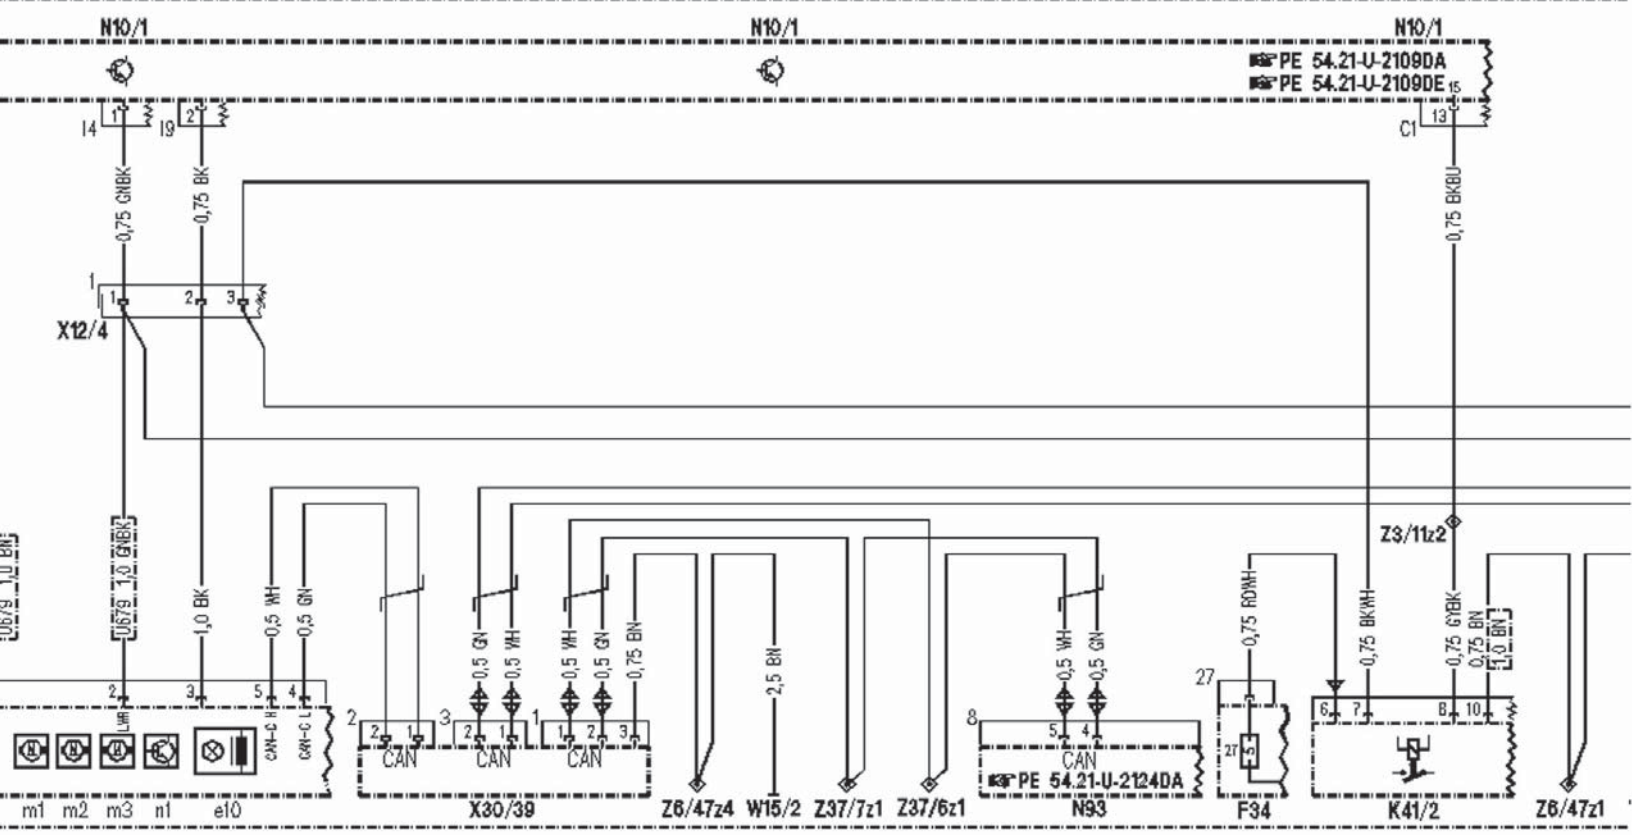

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54

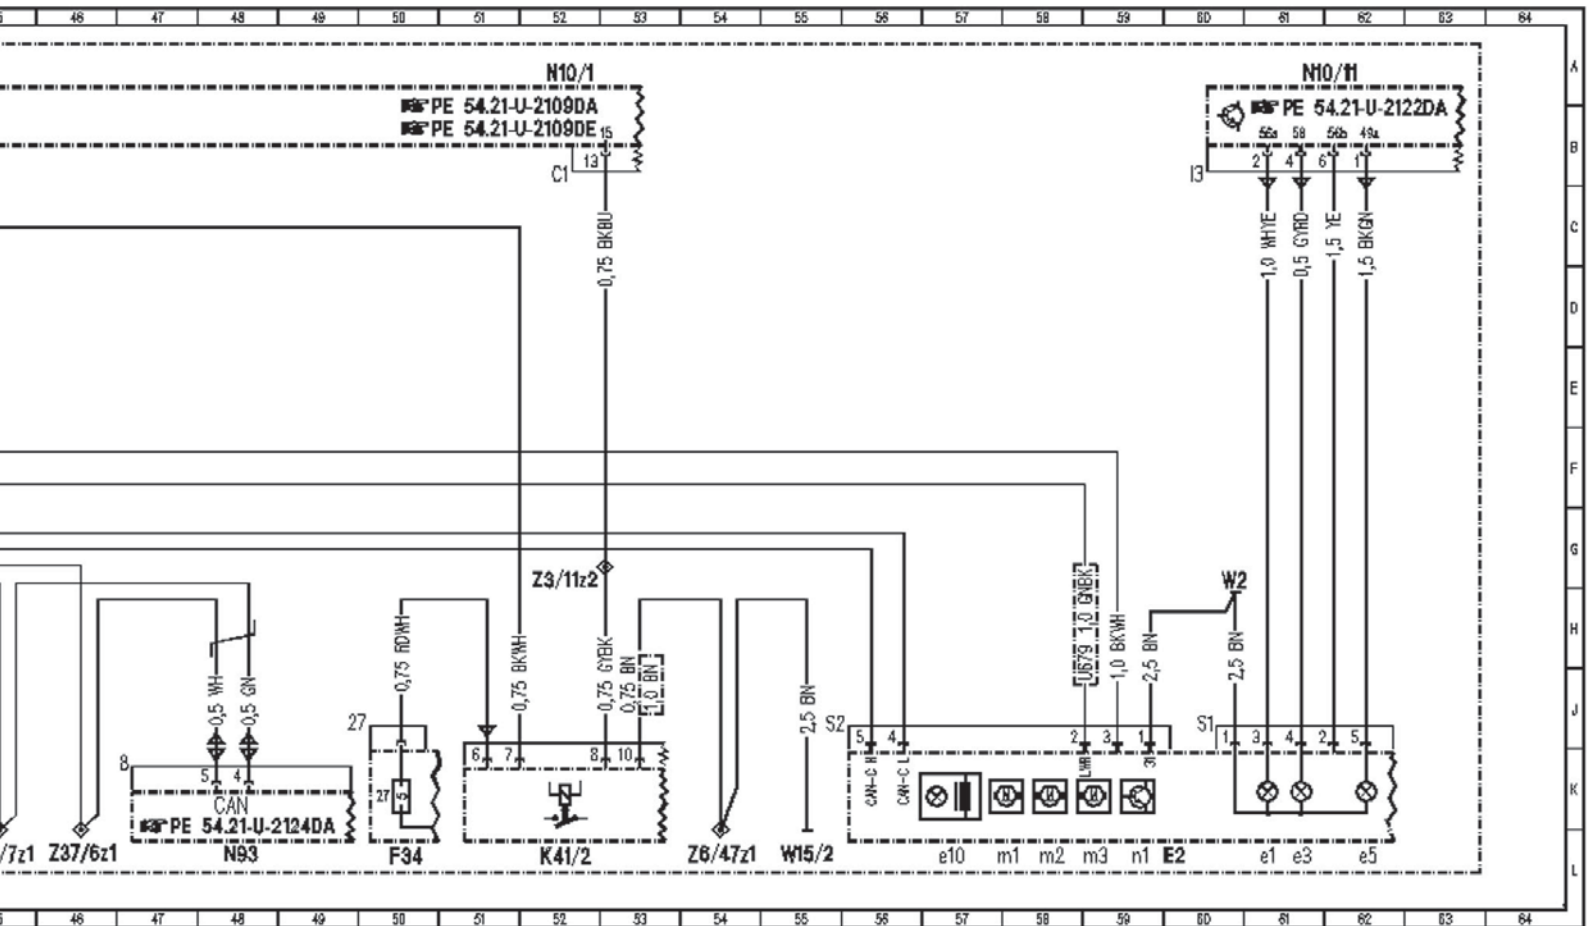

Item	Designation
B22/2	Front axle level sensor
B22/3	Rear axle level sensor
E1	Left front headlamp unit
E1e1	Left high beam
E1e2	Left low beam
E1e3	Left standing and parking lamp
E1e5	Left turn signal lamp
E1e10	Left bi-xenon lamp with integral ignition module
E1i1	Left high beam solenoid
E1m1	Left headlamp range adjustment motor
E1m2	Left dynamic cornering lamp motor
E1m3	Left light distribution cylinder motor
E1n1	Xenon headlamp control module
E1n2	Xenon headlamp ignition module
E1n3	HRA [LWR] power module
E1n4	Xenon headlamp supply module
E2	Right front headlamp unit
E2e1	Right high beam
E2e2	Right low beam
E2e3	Right standing and parking lamp

E2e5 Right turn signal lamp

E2e10 Right bi-xenon lamp with integral ignition module

E2I1 Right high beam solenoid

E2m1 Right headlamp range adjustment motor

E2m2 Right dynamic cornering lamp motor

E2m3 Right light distribution cylinder motor

E2n1 Xenon headlamp control module

E2n2 Xenon headlamp ignition module

E2n3 HRA [LWR] power module

E2n4 Xenon headlamp supply module

F34 Interior fuse box

F34f27 Fuse 27

K41/2 Circuit 15 relay

N10/1 Driver-side SAM control module with
fuse and relay module

N10/11 Passenger-side SAM control module

N93 Central gateway control module

U57 Valid for station wagon

U501 Valid for xenon headlamps

U514 Not valid for AIRMATIC

U679 Valid for version without xenon headlamps

U758 Valid for steel suspension

U803 Valid for dynamic cornering lamp

U930 Valid for rear axle level control

W2 Ground (at right headlamp unit)

W9 Ground (at left headlamp unit)

<u>W15/2</u>	Ground (left footwell)
<u>X12/4</u>	Terminal block (circuit 15 fused)
<u>X30/39</u>	CAN-D voltage distributor connector
<u>X62/32</u>	Left rear axle electrical distributor connector
<u>Z3/11z2</u>	Circuit 15 connector sleeve (fused)
<u>Z6/47z1</u>	Ground (W15/2) connector sleeve
<u>Z6/47z4</u>	Ground (W15/2) connector sleeve
<u>Z6/49z1</u>	Ground (W2) connector sleeve
<u>Z6/50</u>	Ground (W9) connector sleeve
<u>Z6/50z2</u>	Ground (W9) connector sleeve
<u>Z6/85</u>	Sensor ground connector sleeve
<u>Z7/41</u>	Sensor supply connector sleeve
<u>Z36/12</u>	Headlamp range adjustment (HRA [LWR]) control bus connector sleeve
<u>Z37/6z1</u>	CAN databus (high) connector sleeve
<u>Z37/7z1</u>	CAN bus (low) connector sleeve