









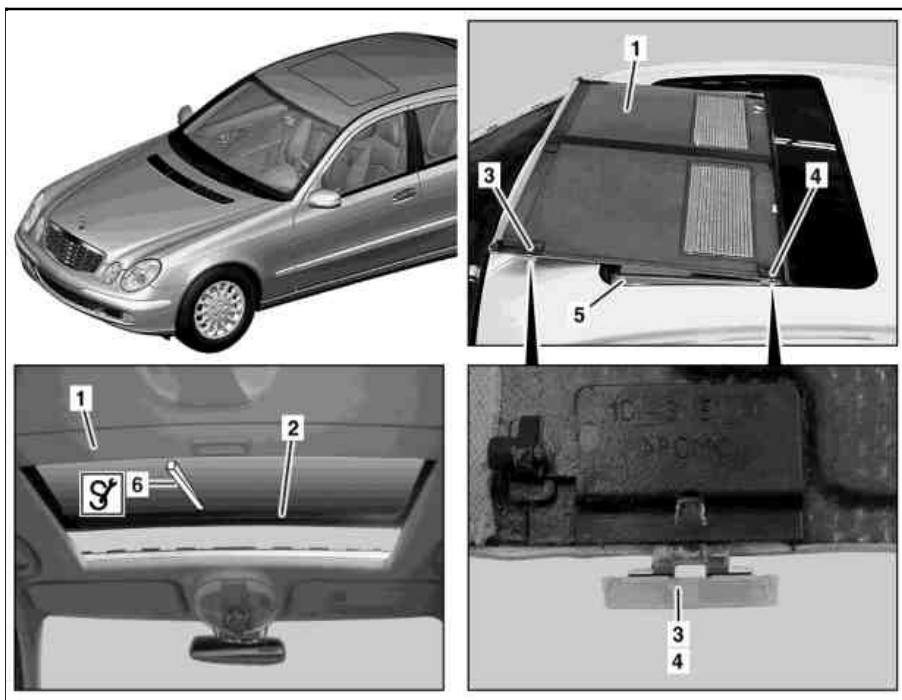


MODEL 211.0 /2, 240.0 with CODE (414) Glass electric tilting/sliding roof


Shown on model 211.0

- 1 Paneling
- 2 Covering
- 3 Front slide block
- 4 Rear slide block
- 5 Slide rail
- 6  Mounting wedge



P77.20-2268-06

	Remove/Install		
 Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Push paneling (1) toward rear	 See Operating Instructions	
2	Open tilting/sliding roof approx. 20 cm	 See Operating Instructions	
3	Unclip center and side covering (2) with mounting wedge (6), remove covering (2) from rubber bellows*	  Installation: Position covering (2) in center and clip in.	*110589035900
4	Completely open tilting/sliding roof		
5	Slide lining (1) forward		
6	Unhook front slide block (3) from slide rail (5)	 Press front slide block (3) back into mount toward center of vehicle with suitable tool and slide paneling (1) to opposite side to unhook.	
7	Lift paneling (1) out of slide rail (5)		
8	Pull cover (1) slightly forward over roof cutout until rear slide blocks (4) are accessible*	 Treat paneling carefully (1), otherwise paneling (1) or paint can be damaged.	
9	Unhook rear slide block (4) from slide rail (5).	 Press rear slide block (4) back into mount toward center of vehicle with suitable tool and slide paneling (1) to opposite side to unhook.	
10	Lift paneling (1) out of slide rail (5) and remove from vehicle		
11	Install in the reverse order		

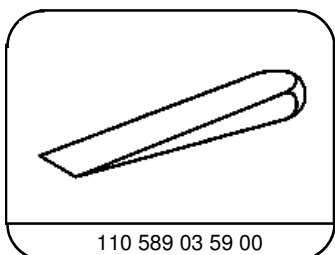

110 589 03 59 00

Mounting wedge