## MODEL 211.0 /2 /6

- 1 Driver-side wiper arm
- 2 Passenger-side wiper arm
- 3 Nu
- 4 Nuts



P82.30-2177-11


## **Modification notes**

1.7.08	Special tool added	Steps 4 and 6	*001589383300

XX	Remove/install		
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases even sever extremities.	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Move wiper arms to park position		
2.1	Switch ignition off, remove key from electronic ignition switch EIS	On vehicles without code (889) Keyless go	
2.2	Switch off engine, remove transmitter key for Keyless Go out of vehicle and keep outside the range of the transmitter	On vehicles with code (889) Keyless go	
3	Open engine hood and raise to vertical position	n	AR88.40-P-1000T
4	Unscrew nut (3) on the driver-side wiper arm (1)	Nm Y	*BA82.30-P-1004-01A *001589383300
5	Remove driver-side wiper arm (1)	installation: Adjust wiper blade to mark in windshield.	
6	Unscrew nuts (4) on passenger side wiper arr (2)	n Nm S	*BA82.30-P-1004-01A *001589383300
7	Remove passenger-side wiper arm (2)	installation: Adjust wiper blade to mark in windshield.	
8	Install in the reverse order		

## Nm Windshield wiper

Number	Designation	Model 211.0	Model 211.2	Model 211.6
BA82.30-P-1004-01A	Nut on wiper arm Nm	19	19	19

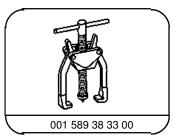

Puller