


MODELS 211.0 /2

with CODE (475) Tire pressure monitor (Beru)

with CODE (475) Tire pressure monitor (Siemens)

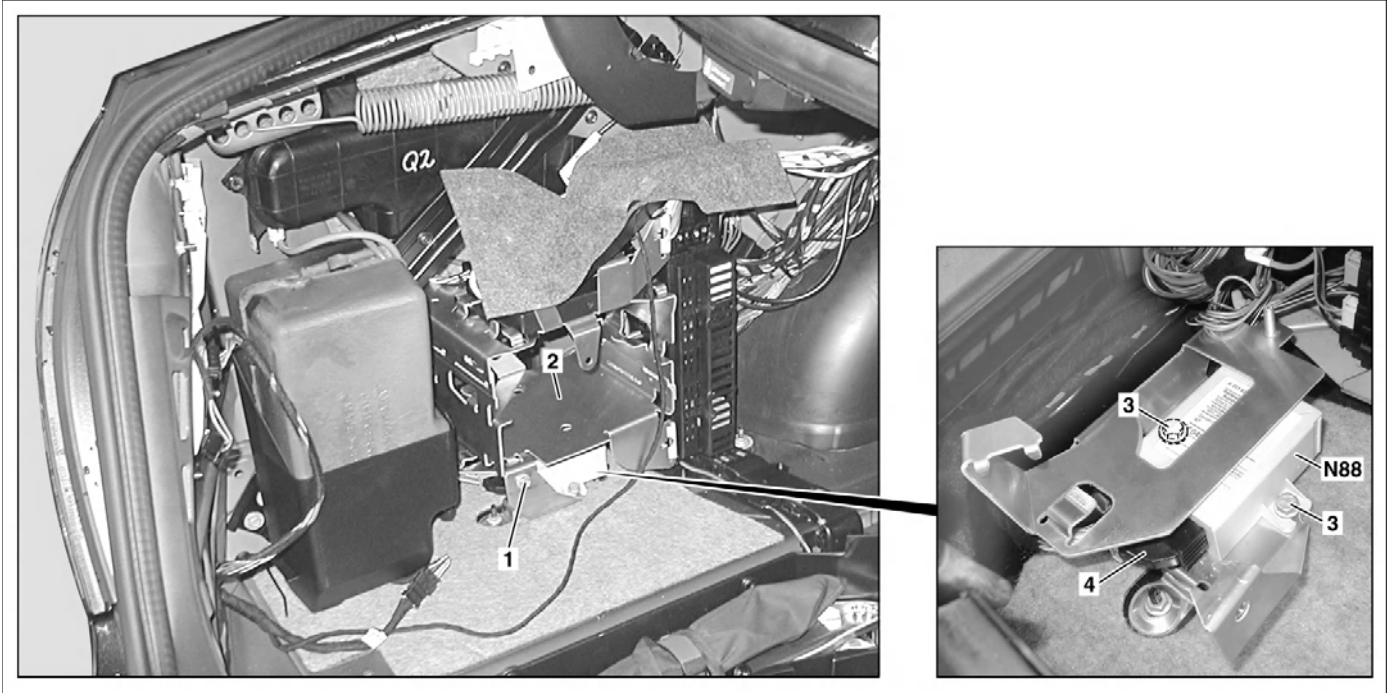

P40.15-2078-09

Shown on model 211.0

1 Bolt

2 Mounting bracket

3 Bolts

4 Electrical connector

N88 TPM [RDK] control unit

	Remove/install		
1.1	Read in variant coding of the TPM [RDK] control unit (N88) in STAR DIAGNOSIS	When replacing the TPM control unit (N88)	
	Connect STAR DIAGNOSIS and read out fault memory	i Installation: Transfer stored data into the new TPM [RDK] control unit (N88).	AD00.00-P-2000-04A
		STAR DIAGNOSIS diagnosis system	*WH58.30-Z-1048-13A
2.1	Remove left side paneling in trunk.	Model 211.0 with through-loading feature Code 289a	AR68.30-P-4800TA
		Model 211.0 without through-loading facility	AR68.30-P-4800T
2.2	Remove left side paneling in load compartment	Model 211.2	AR68.30-P-1180T
3	Unscrew bolt (1), lift up implement carrier (2) slightly and swing to one side		
4	Unscrew bolts (3) and remove TPM [RDK] control unit (N88) from implement carrier (2)		
5	Unlock electrical connector (4) and detach from TPM [RDK] control unit (N88)		
6	Install in the reverse order		
7	Read out fault memory and erase if required		
8	Activate tire pressure monitor		AR54.30-P-1000-02RAT

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00