



MODEL 211.0 /2 /6**Front bumper**

- 1 Protective strip
 2 Front bumper
 3 Electrical connectors (with code (220a) Parktronic system (PTS))

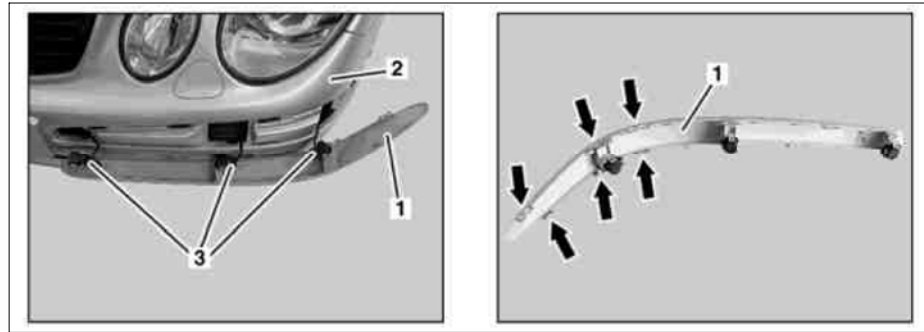

P88.80-2037-04

☒ ☒	Remove/Install		
1	Protect front bumper (2) paint with strips of adhesive tape	<input type="checkbox"/> Prevent paint damage in area of protective strip (1)	
2	Unclip protective molding (1) at latching hooks (arrows) from front bumper (2) with long wedge	<input type="checkbox"/> Unclip from outside to center of bumper <input checked="" type="checkbox"/>	*115589035900
3.1	Disconnect electrical connectors (3) from Parktronic system sensors (PTS) and remove protective strip (1)	On vehicles with code (220a) Parktronic system (PTS) <input type="checkbox"/> Do not disconnect connectors (3) when replacing protective strip (1)	
4.1	Remove Parktronic system (PTS) sensors	On vehicles with code (220a) Parktronic system (PTS) <input type="checkbox"/> Unclip Parktronic system sensors (PTS) from protective strip (1) with bracket when replacing protective strip (1).	AR54.65-P-0001T
5	Install in the reverse order		

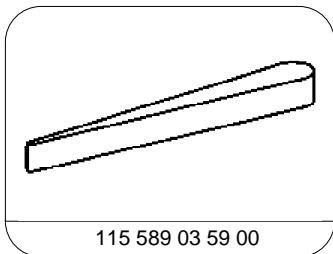

115 589 03 59 00

Long wedge