
MODEL 211.0/ 2/ 6

MODEL 230.467 /474 /475 /476 ## up to 064520 except CODE (804) Model year 2004 MODEL 240.078/ 178

Shown on Model 230

- 1 Mirror lens
- 2 Retaining spring
- 3 Electrical connectors
- 4 Mirror adjustment drive

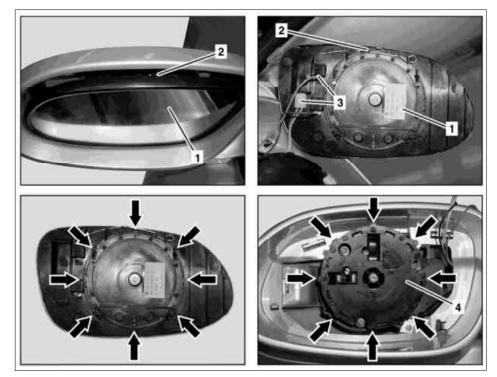


P88.70-2121-06

Modification notes

28.1.04	Disconnect/connect/remove ground lead from battery	Model 211	
---------	--	-----------	--

XX	Remove/Install		
⚠ Danger!	Risk of injury. Skin, eye and respiratory system irritation may occur through contact or inhalation of substances contained in the mirror lens.	Wear protective gloves and safety glasses.	AS60.00-Z-0008-01R
1.1	Disconnect battery ground cable	Model 240.078 /178	AR54.10-P-0003H
1.2	Ignition Off, detach transmitter key from the electronic ignition switch control unit	Model 211, 230 i On vehicles with code (889) Keyless go: Press Keyless go start/stop button repeatedly until the ignition is switched off. Remove Keyless go transmitter card or transmitter key from vehicle and store beyond transmission range (min. 2 m).	
2	Tilt mirror lens (1) out upward		
3	Press retaining spring (2) upward with suitable screwdriver and press mirror lens (1) away from mirror adjustment drive (4) with mounting wedge.	Mounting wedge Installation: Clip mirror lens (1) into mirror adjustment drive (4) from bottom upward. Thereby observe retaining spring (2) and arrests (arrows) on mirror lens (1) and mirror adjustment drive (4).	*110589035900
4	Disconnect electrical connectors (3) and remove mirror lens (1)		
5	Install in the reverse order		

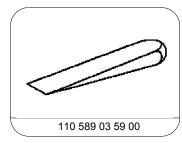

Mounting wedge